
Service Hints**A7 (A) Alternator**

(A) 1–Ground : 13.2–14.0 volts with the engine running at 5000 rpm and 115°C (239°F)

 : **Parts Location**

Code		See Page	Code		See Page	Code		See Page
A7	A	36	C8	38	J6	38		
A8	B	36	E8	38				

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1E	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2D	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2S	29	

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	46	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B and Engine Room J/B)
ID2	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)