


J POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

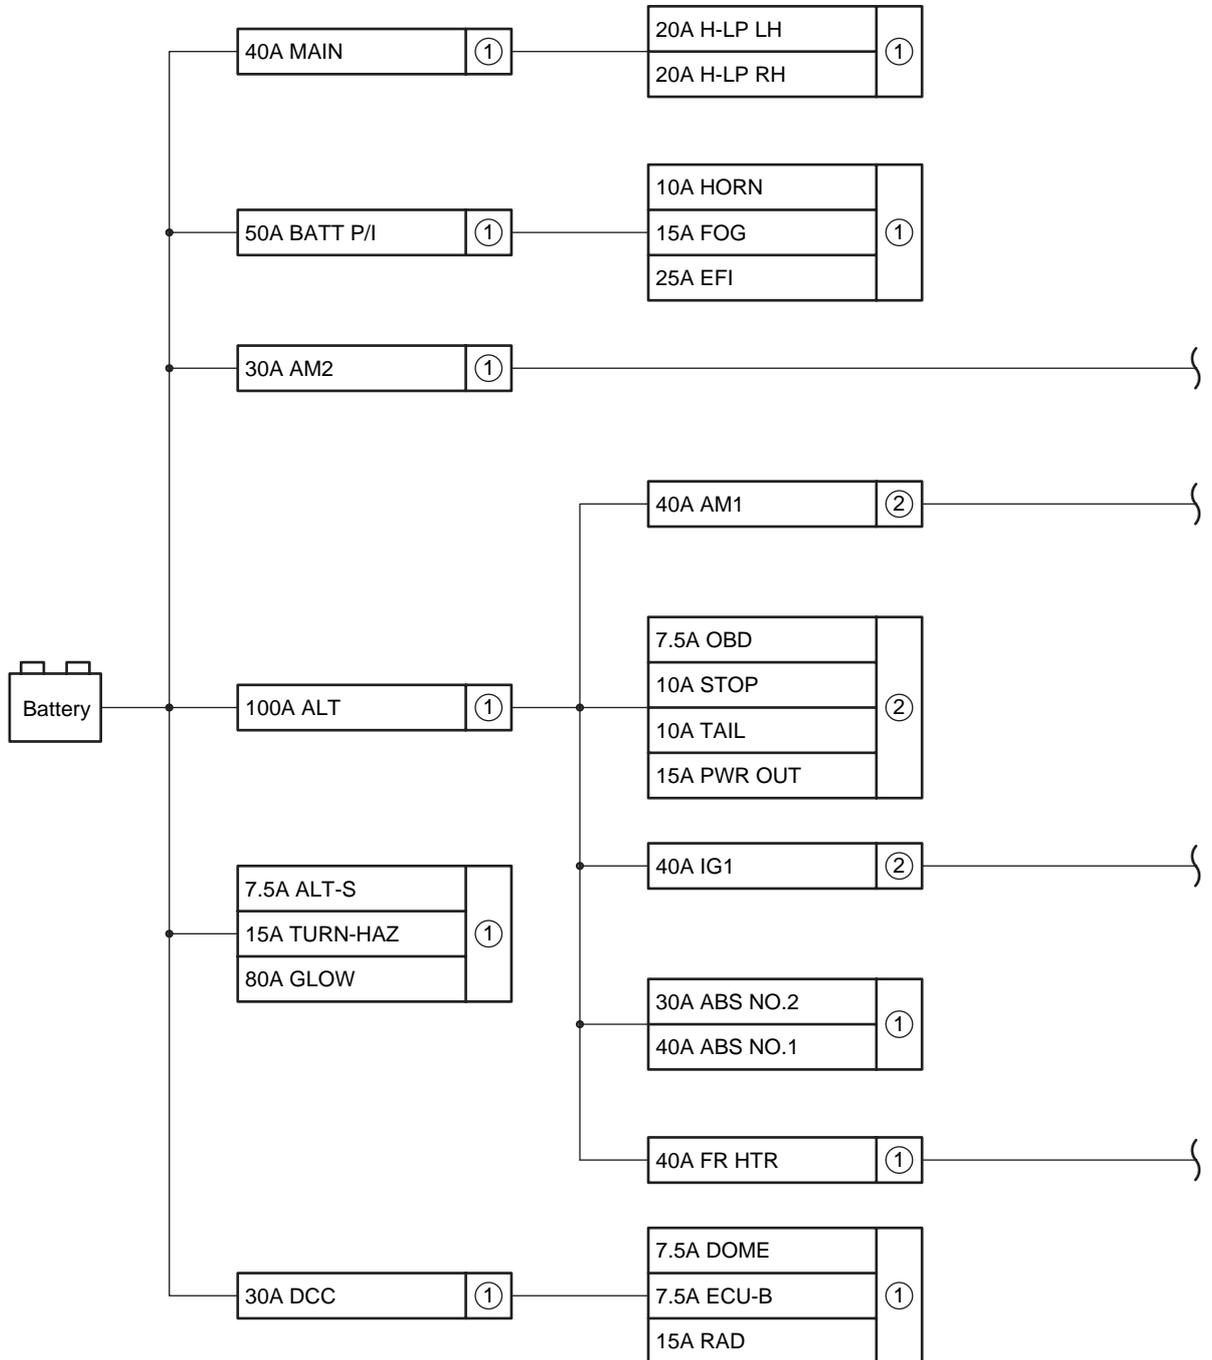

[LOCATION]

- ① : Engine Room R/B and Engine Room J/B (See Page 22) [N](#)
- ② : Driver Side J/B (See Page 28) [N](#)
- ③ : R/B No.3 (See Page 35) [N](#)

Example

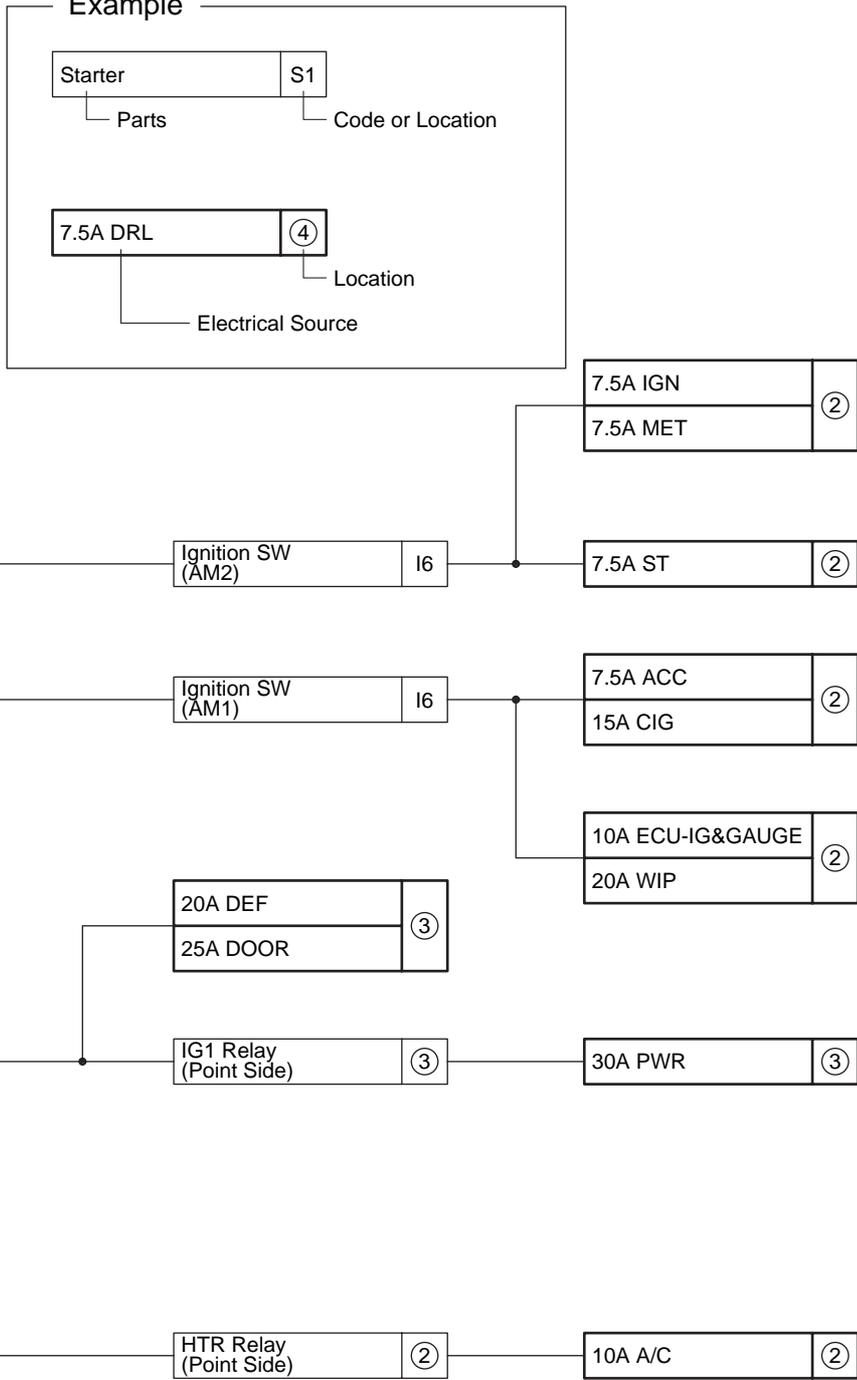

J POWER SOURCE (Current Flow Chart)

Engine Room R/B (See Page 22) [N](#)

Fuse		System	Page
7.5A	ALT-S	Charging	66
7.5A	DOME	Clock	162
		Combination Meter	172
		Door Lock Cotrol	130
		ECT	108
		Engine Control	68
		Headlight	84
		Interior Light	100
		Key Reminder and Light Reminder	104
		Taillight and Illumination	88
		Theft Deterrent	144
Wireless Door Lock Control	136		
7.5A	ECU-B	Door Lock Cotrol	130
		Engine Immobilizer System	80
		Interior Light	100
		Theft Deterrent	142
		Wireless Door Lock Control	136
10A	HORN	Horn	156
		Theft Deterrent	142
15A	FOG	Front Fog Light	86
15A	RAD	Audio System	168
15A	TURN-HAZ	Turn Signal and Hazard Warning Light	92
20A	H-LP LH	Headlight	84
20A	H-LP RH	Headlight	84
25A	EFI	ECT	108
		Engine Control	68
30A	ABS NO.2	ABS	116
30A	AM2	Engine Immobilizer System	80
		Starting	64
30A	DCC	Engine Immobilizer System	80
40A	ABS NO.1	ABS	116
40A	FR HTR	Air Conditioner	178
50A	BATT P/I	ECT	108
		Engine Control	68
		Front Fog Light	86
80A	GLOW	Engine Control	68
100A	ALT	Charging	66
		4WD	124

* These are the page numbers of the first page on which the related system is shown.

Driver Side J/B (See Page 28) ^N

Fuse		System	Page
7.5A	ACC	Audio System	168
		Clock	162
		Power Outlet	160
		Remote Control Mirror	166
		Shift Lock	128
7.5A	IGN	ECT	108
		Engine Control	68
		Engine Immobilizer System	80
		SRS	121
7.5A	MET	ABS	116
		Charging	66
		Combination Meter	172
		Door Lock Control	130
		ECT	108
		Engine Control	68
		Key Reminder and Light Reminder	104
		Seat Belt Warning	106
		SRS	121
		Taillight and Illumination	88
		Theft Deterrent	144
4WD	124		
7.5A	OBD	Engine Control	68
7.5A	ST	ECT	108
		Engine Control	68
		Starting	64
		Theft Deterrent	142
10A	A/C	Air Conditioner	178
10A	ECU-IG&GAUGE	ABS	116
		Air Conditioner	178
		Back-Up Light	98
		Charging	66
		Combination Meter	172
		Door Lock Control	130
		ECT	108
		Engine Control	68
		Rear Window Defogger	164
		Shift Lock	128
		Theft Deterrent	143
		Turn Signal and Hazard Warning Light	92
Wireless Door Lock Control	136		
10A	GAUGE&ECU-IG	4WD	124

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
10A	STOP	ABS	116
		ECT	108
		Engine Control	68
		Shift Lock	128
		Stop Light	96
10A	TAIL	Clock	162
		Front Fog Light	86
		Key Reminder and Light Reminder	104
		Taillight and Illumination	88
15A	CIG	Cigarette Lighter	158
15A	PWR OUT	Power Outlet	160
20A	WIP	Front Wiper and Washer	152
40A	AM1	4WD	124

R/B No.3 (See Page 35) [N](#)

Fuse		System	Page
20A	DEF	Rear Window Defogger	164
25A	DOOR	Door Lock Control	130
		Theft Deterrent	142
		Wireless Door Lock Control	136
30A	PWR	Power Window	148

* These are the page numbers of the first page on which the related system is shown.