

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Compressor	90980-11271	E 1	ECT Solenoid	90980-10891
A 2	A/T Fluid Temp. Sensor	90980-11025	E 2	EGR Valve Position Sensor	90980-11143
A 3	ADD Actuator	90980-11858	E 3	Engine Hood Courtesy SW	90980-11003
A 4	Air Flow Meter	90980-11317	E 4	Engine Oil Pressure Sensor	90980-11363
A 5	Airbag Sensor (Front LH)	90980-11856	E 5	Engine ECU	90980-12457
A 6	Airbag Sensor (Front RH)		E 6	Engine ECU	90980-12455
A 7	Alternator	90980-09212	E 7	Engine ECU	90980-12454
A 8	Alternator	90980-11964	E 8	Engine ECU	90980-12456
A 9	A/C Amplifier	90980-11971	F 2	Fog Lamp (Front LH)	90980-11660
A10	A/C Thermistor	90980-11918	F 3	Fog Lamp (Front RH)	
A11	A/C Volume SW	90980-10906	F 4	Fuel Filter Warning SW	90980-12416
A12	A/T Shift Lever Illumination	90980-12221	F 5	Fuel Injector (No.1)	90980-11875
A13	Accelerator Position Sensor	90980-11858	F 6	Fuel Injector (No.2)	
A14	Airbag Sensor Assembly Center	90980-12391	F 7	Fuel Injector (No.3)	
A15	Airbag Squib (Steering Wheel Pad)	90980-12160	F 8	Fuel Injector (No.4)	
A16	Ashtray Illumination	90980-12111	F 9	Fuel Pressure Sensor	90980-10845
A17	ABS Deceleration Sensor	90980-10845	F10	Fuel Sedimenter Level Warning SW	90980-11003
B 1	Back-Up Lamp SW	90980-11250	F11	Fuel Temp. Sensor	90980-10737
B 2	Brake Fluid Level Warning SW	90980-11207	F12	Front Seat Inner Belt (Driver's Side)	90980-11212
B 3	Brake Vacuum Warning SW	90980-11252	F13	Fuel Sender Gage	90980-11077
B 4	Blower Motor	90980-10916	F14	4WD Control ECU	90980-10997
B 5	Blower Resistor	90980-11136	G 1	Glow Plug	99141-13004
B 6	Blower SW	90980-10877	H 1	Headlamp (LH)	90980-11314
C 1	Camshaft Position Sensor	90980-10947	H 2	Headlamp (RH)	
C 2	Clearance Lamp (Front LH)	90980-11162	H 3	Horn (High)	90980-10619
C 3	Clearance Lamp (Front RH)				
C 4	Crankshaft Position Sensor	90980-11016	H 4	Horn (Low)	
C 5	Cigarette Lighter	90980-10760	H 5	Hazard Warning Signal SW	90980-10801
C 6	Cigarette Lighter Illumination	90980-11148	I 1	Injector Driver (EDU)	90980-11592
C 7	Clock	90980-11013	I 2	Injector Driver (EDU)	90980-11593
C 8	Combination Meter	90980-12169	I 3	Inlet Air Temp. Sensor (Air Cleaner)	90980-11163
C 9	Combination Meter	90980-12155	I 4	Inlet Air Temp. Sensor (Inter Cooler)	90980-11025
C10	Combination SW	90980-12007	I 5	Ignition Key Cylinder Lamp	90980-12092
C11	Combination SW	90980-12358	I 6	Ignition SW	90980-11615
C12	Combination SW	90980-12359	J 1	Junction Connector	90980-10803
C13	Center Stop Lamp	90980-11003	J 2	Junction Connector	90980-11661
D 1	DLC3	90980-11978	J 3	Junction Connector	
D 2	Door Courtesy SW (Driver's Side)	90980-10871	J 4	Junction Connector	
D 3	Door Courtesy SW (Front Passenger's Side)				
D 4	Door Courtesy SW (Rear LH)				
D 5	Door Courtesy SW (Rear RH)	90980-12226	J 5	Junction Connector	90980-11915
D 6	Door Lock Assembly (Driver's Side)				
D 7	Door Lock Assembly (Front Passenger's Side)				
D 8	Door Lock Assembly (Rear LH)				
D 9	Door Lock Assembly (Rear RH)				
				J 6	Junction Connector
			J 7	Junction Connector	
			J 8	Junction Connector	
			J 9	Junction Connector	
			J 10	Junction Connector	
			J 11	Junction Connector	
			J 12	Junction Connector	
			J 13	Junction Connector	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number					
J14	Junction Connector	90980-11661	S 3	Speed Sensor	90980-11143					
J15	Junction Connector	90980-10830	S 4	Speed Sensor (Front LH)	90980-11156					
J16	Junction Connector	90980-11661	S 5	Speed Sensor (Front RH)						
J17	Junction Connector		J18	Junction Connector	90980-11742	S 6	Starter	90980-11400		
J19	Junction Connector	J20	Junction Connector	90980-11661		S 7	Starter	90980-09507		
J21	Junction Connector	J21	Junction Connector		S 8	Suction Control Valve	90980-11285			
J22	Junction Connector	J22	Junction Connector		S 9	Swirl Control Valve	90980-11156			
J23	Junction Connector	J23	Junction Connector		S10	Security Indicator Lamp	90980-12063			
J24	Junction Connector	J24	Junction Connector		S11	Shift Lock Control ECU	90980-12183			
J25	Junction Connector	J25	Junction Connector		S12	Short Pin (Theft Warning ECU)	90980-12409			
J26	Junction Connector	J26	Junction Connector		S13	Spiral Cable	90980-12183			
J27	Junction Connector	J27	Junction Connector	S14	Stop Lamp SW	90980-11118				
J28	Junction Connector	J28	Junction Connector	S15	Speaker (Front Door LH)	90980-10935				
J29	Junction Connector	J29	Junction Connector	S16	Speaker (Front Door RH)					
K 1	Key Interlock Solenoid	K 1	Key Interlock Solenoid	S17	Speaker (Rear Door LH)					
L 1	License Plate Lamp LH	L 1	License Plate Lamp LH	S18	Speaker (Rear Door RH)					
L 2	License Plate Lamp RH	L 2	License Plate Lamp RH	S19	Speaker (Rear LH)					
M 1	Map Lamp	M 1	Map Lamp	S20	Speaker (Rear RH)	90980-11467				
N 1	Neutral Start SW	N 1	Neutral Start SW	S21	Speed Sensor (Rear LH)					
O 1	Outer Mirror SW	O 1	Outer Mirror SW	S22	Speed Sensor (Rear RH)	T 1	Throttle Body Assembly	90980-11145		
O 2	Outer Rear View Mirror (LH)	90980-11452	O 2	Outer Rear View Mirror (LH)	T 2	Throttle Body Assembly	90980-11261			
O 3	Outer Rear View Mirror (RH)		O 3	Outer Rear View Mirror (RH)	T 3	Transfer Indicator SW (4WD Position)	90980-11156			
P 1	Pressure SW	P 1	Pressure SW	T 4	Transfer Indicator SW (L4 Position)	T 5		Transfer Indicator SW (Neutral Position)	90980-10923	
P 2	Parking Brake SW	P 2	Parking Brake SW	T 6	Transmission Revolution Sensor (Input)	90980-11156	T 6	Transmission Revolution Sensor (Input)		
P 3	Power Point Socket	P 3	Power Point Socket	T 7	Transmission Revolution Sensor (Output)		T 7	Transmission Revolution Sensor (Output)		
P 4	Power Window Master SW (Double Cab)	P 4	Power Window Master SW (Double Cab)	T 8	Turbo Motor Driver	90980-10801	T 8	Turbo Motor Driver	90980-10801	
	Power Window Master SW (Extra Cab)	P 4	Power Window Master SW (Extra Cab)	T 9	Turbo Pressure Sensor	90980-10845	T 9	Turbo Pressure Sensor	90980-10845	
P 5	Power Window Regulator Motor (Front LH)	90980-10797	P 5	Power Window Regulator Motor (Front LH)	T10	Turbocharger Variable Nozzle Motor	90980-11156	T10	Turbocharger Variable Nozzle Motor	90980-11156
P 6	Power Window Regulator Motor (Front RH)		P 6	Power Window Regulator Motor (Front RH)	T11	Turbocharger Variable Nozzle Sensor	90980-12303	T11	Turbocharger Variable Nozzle Sensor	90980-12303
P 7	Power Window Regulator Motor (Rear LH)	90980-11900	P 7	Power Window Regulator Motor (Rear LH)	T12	Turn Signal Lamp (Front LH)	90980-11019	T12	Turn Signal Lamp (Front LH)	90980-11019
P 8	Power Window Regulator Motor (Rear RH)		P 8	Power Window Regulator Motor (Rear RH)	T13	Turn Signal Lamp (Front RH)				
P 9	Power Window SW (Front Passenger's Side)	90980-10789	P 9	Power Window SW (Front Passenger's Side)	T14	Turn Signal Lamp (Front Side LH)	90980-11162	T14	Turn Signal Lamp (Front Side LH)	90980-11162
	P10		Power Window SW (Rear LH)	T15	Turn Signal Lamp (Front Side RH)	T15		Turn Signal Lamp (Front Side RH)		
	P11		Power Window SW (Rear RH)	P11	Power Window SW (Rear RH)	T16	Theft Warning ECU	90980-12410	T16	Theft Warning ECU
R 1	Radio Receiver Assembly	R 1	Radio Receiver Assembly	T17	Transmission Control ECU	90980-12150	T17	Transmission Control ECU	90980-12150	
R 2	Radio Receiver Assembly	R 2	Radio Receiver Assembly	T18	Transmission Control ECU	90980-12149	T18	Transmission Control ECU	90980-12149	
R 3	Rear Window Defogger SW	R 3	Rear Window Defogger SW	T19	Transmission Control ECU	90980-12151	T19	Transmission Control ECU	90980-12151	
R 4	Rear Combination Lamp (LH)	90980-10988	R 4	Rear Combination Lamp (LH)	T20	Transponder Key Amplifier	90980-12092	T20	Transponder Key Amplifier	90980-12092
R 5	Rear Combination Lamp (RH)		R 5	Rear Combination Lamp (RH)	T21	Transponder Key ECU	90980-12423	T21	Transponder Key ECU	90980-12423
R 6	Rear Window Defogger	90980-10359	R 6	Rear Window Defogger	T22	Turn Signal Flasher	90980-10799	T22	Turn Signal Flasher	90980-10799
R 7	Rear Window Defogger		R 7	Rear Window Defogger	T23	Tweeter (LH)	90980-12304	T23	Tweeter (LH)	
R 8	Room Lamp	R 8	Room Lamp	T24	Tweeter (RH)	U 1		Unlock Warning SW	90980-12063	
S 1	Security Horn	S 1	Security Horn	V 1	VRV (EGR)	90980-11162	V 1	VRV (EGR)	90980-11162	
S 2	Skid Control ECU with Actuator	S 2	Skid Control ECU with Actuator							

