


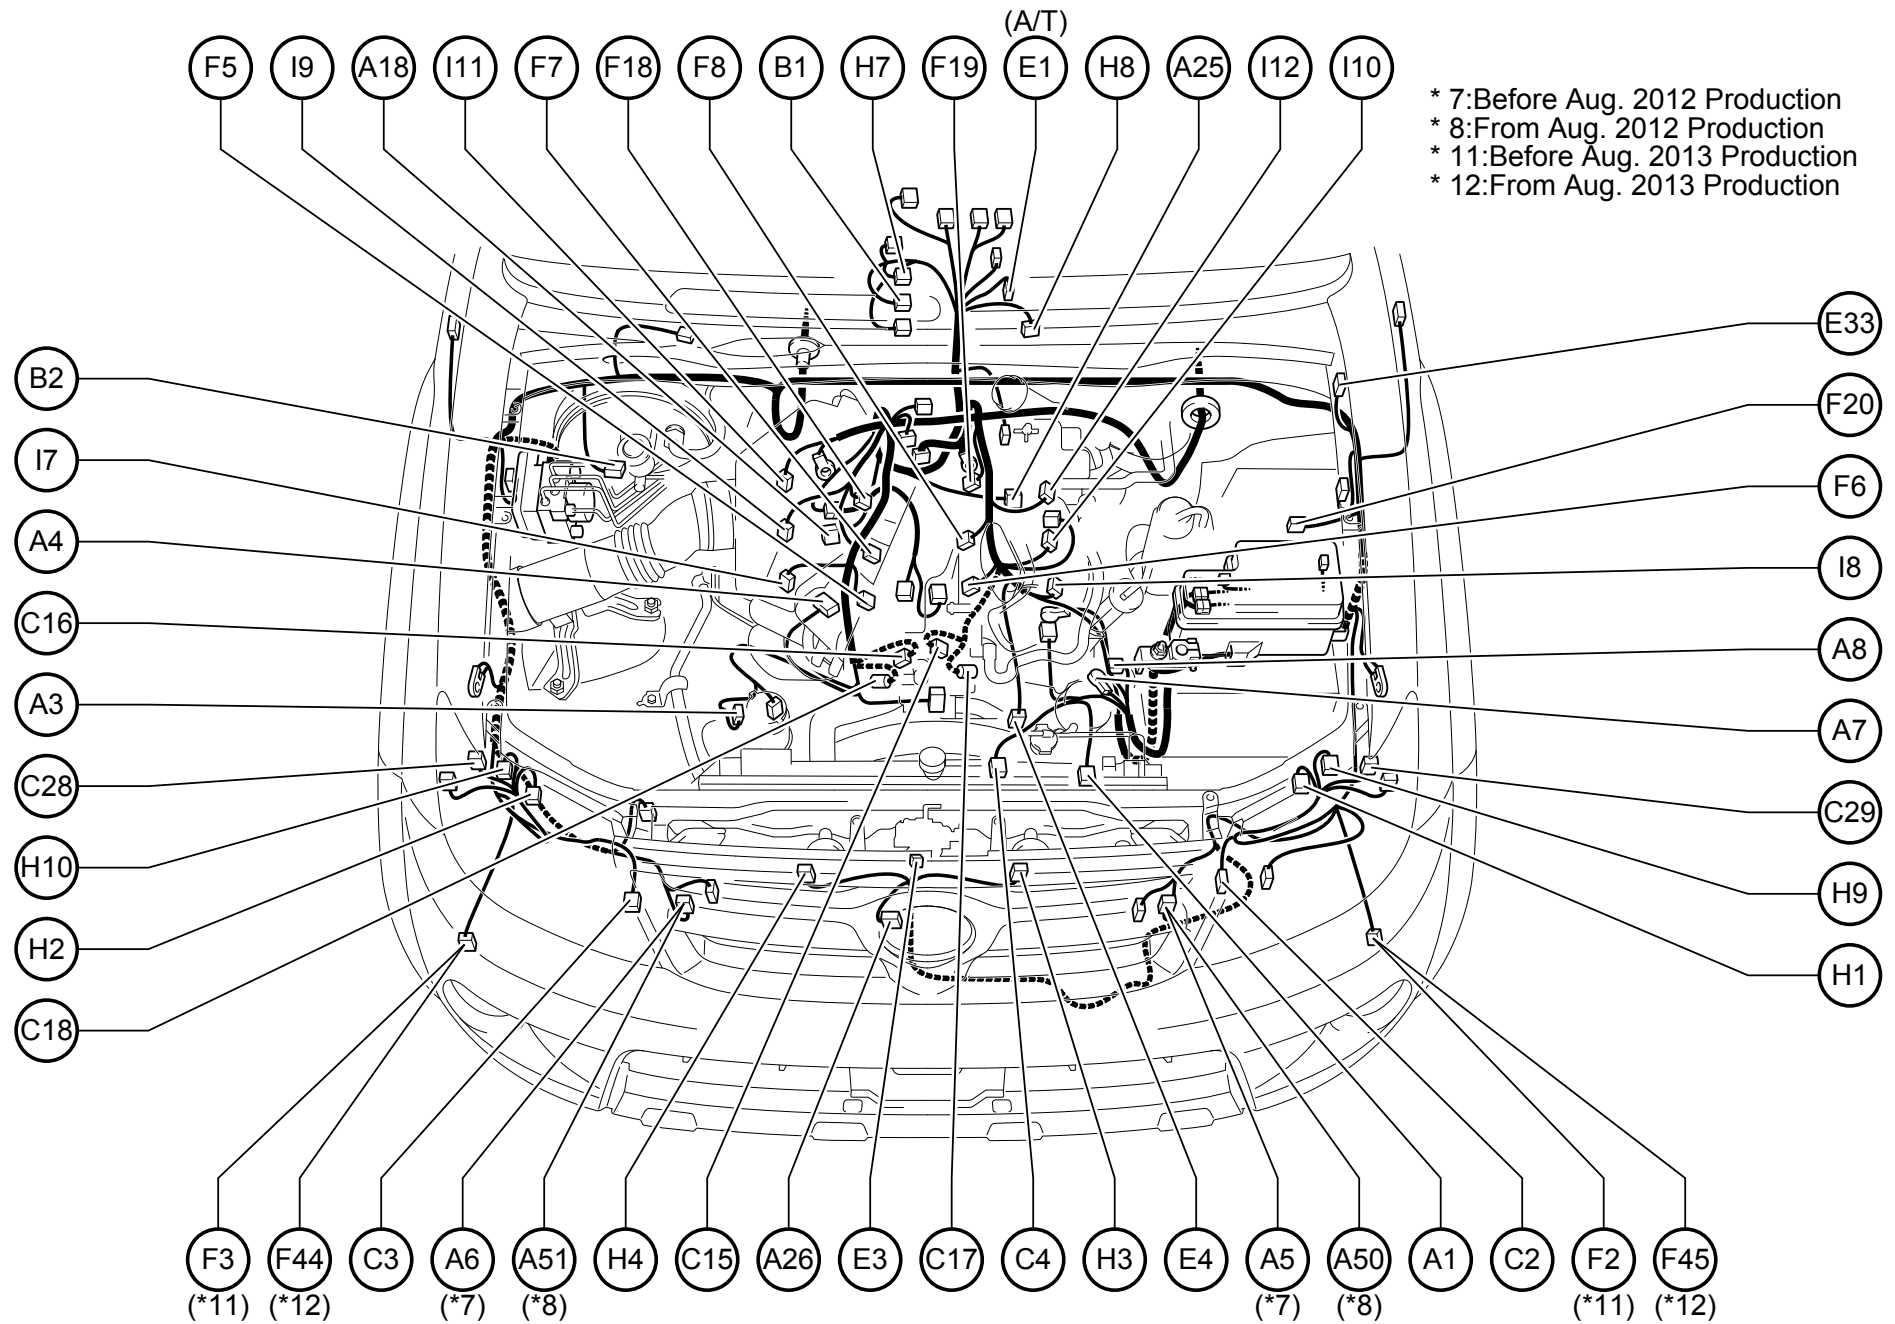

- A 1 A/C Compressor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 25 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 26 Ambient Temp. Sensor
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW

- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 15 Camshaft Timing Oil Control Valve (LH)
- C 16 Camshaft Timing Oil Control Valve (RH)
- C 17 VVT Sensor (Bank 2)
- C 18 VVT Sensor (Bank 1)
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)
























- E 1 ECT Solenoid
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure Sensor
- E 33 Engine Hood Courtesy SW (Interior Light)






















- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 5 Fuel Injector (No.1)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3)
- F 8 Fuel Injector (No.4)
- F 18 Fuel Injector (No.5)
- F 19 Fuel Injector (No.6)
- F 20 Fuel Pump Resistor
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 8 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 9 Headlamp Leveling Motor (LH)
- H 10 Headlamp Leveling Motor (RH)

- I 7 Ignition Coil (No.1)
- I 8 Ignition Coil (No.2)
- I 9 Ignition Coil (No.3)
- I 10 Ignition Coil (No.4)
- I 11 Ignition Coil (No.5)
- I 12 Ignition Coil (No.6)


Position of Parts in Engine Compartment <RHD 1GR-FE>

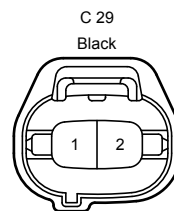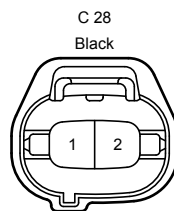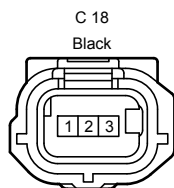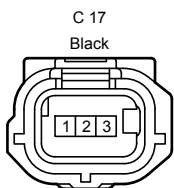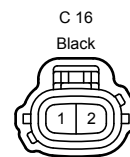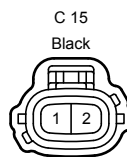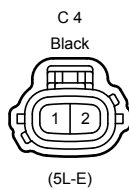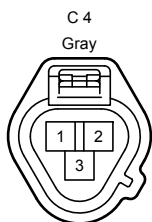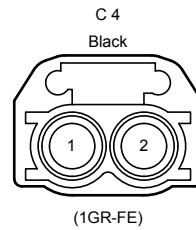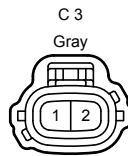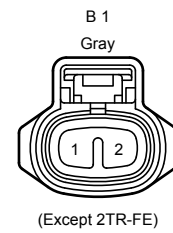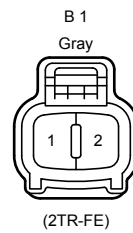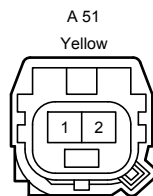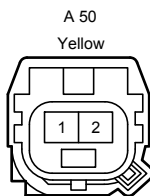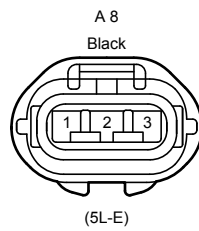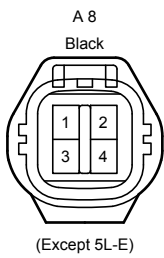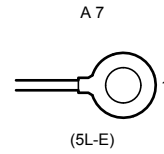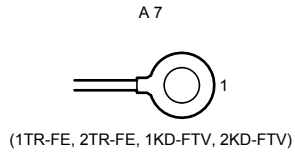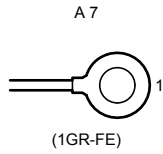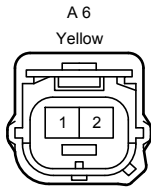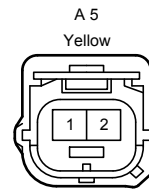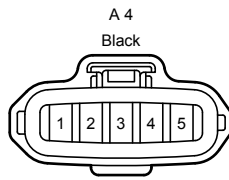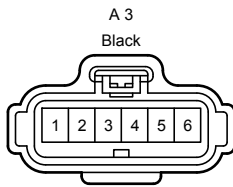

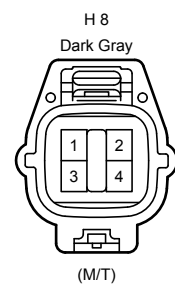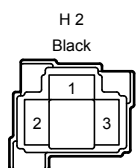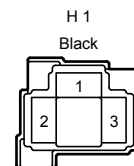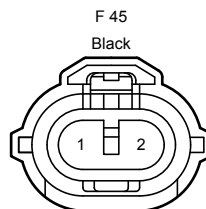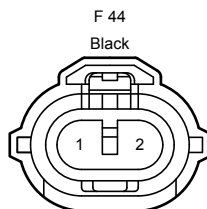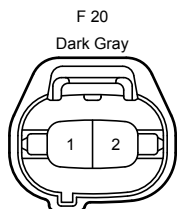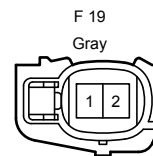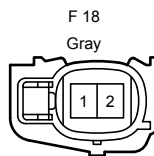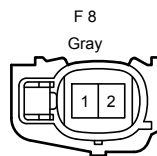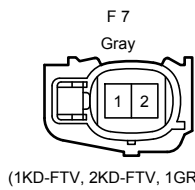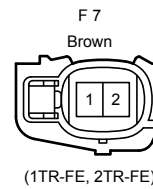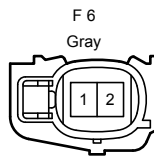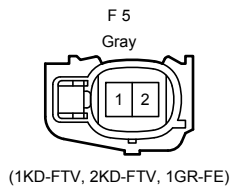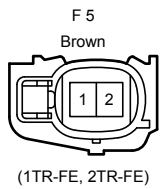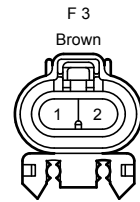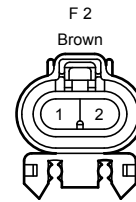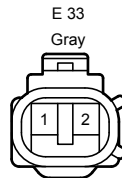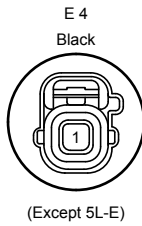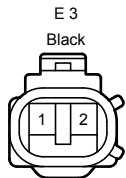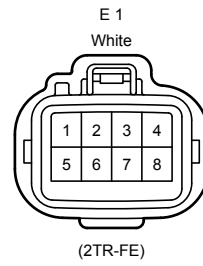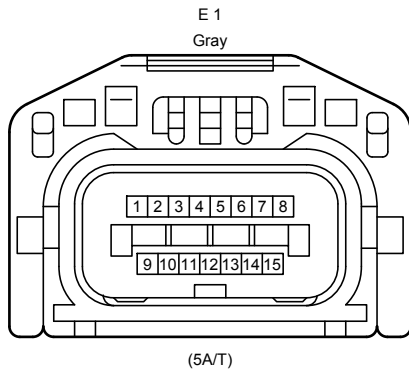


H 9

Black

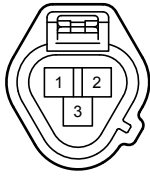


H 10

Black

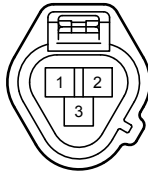


I 7

 Black




I 8

 Black




I 9

 Black




I 10

 Black



I 11

 Black



I 12

Black

