

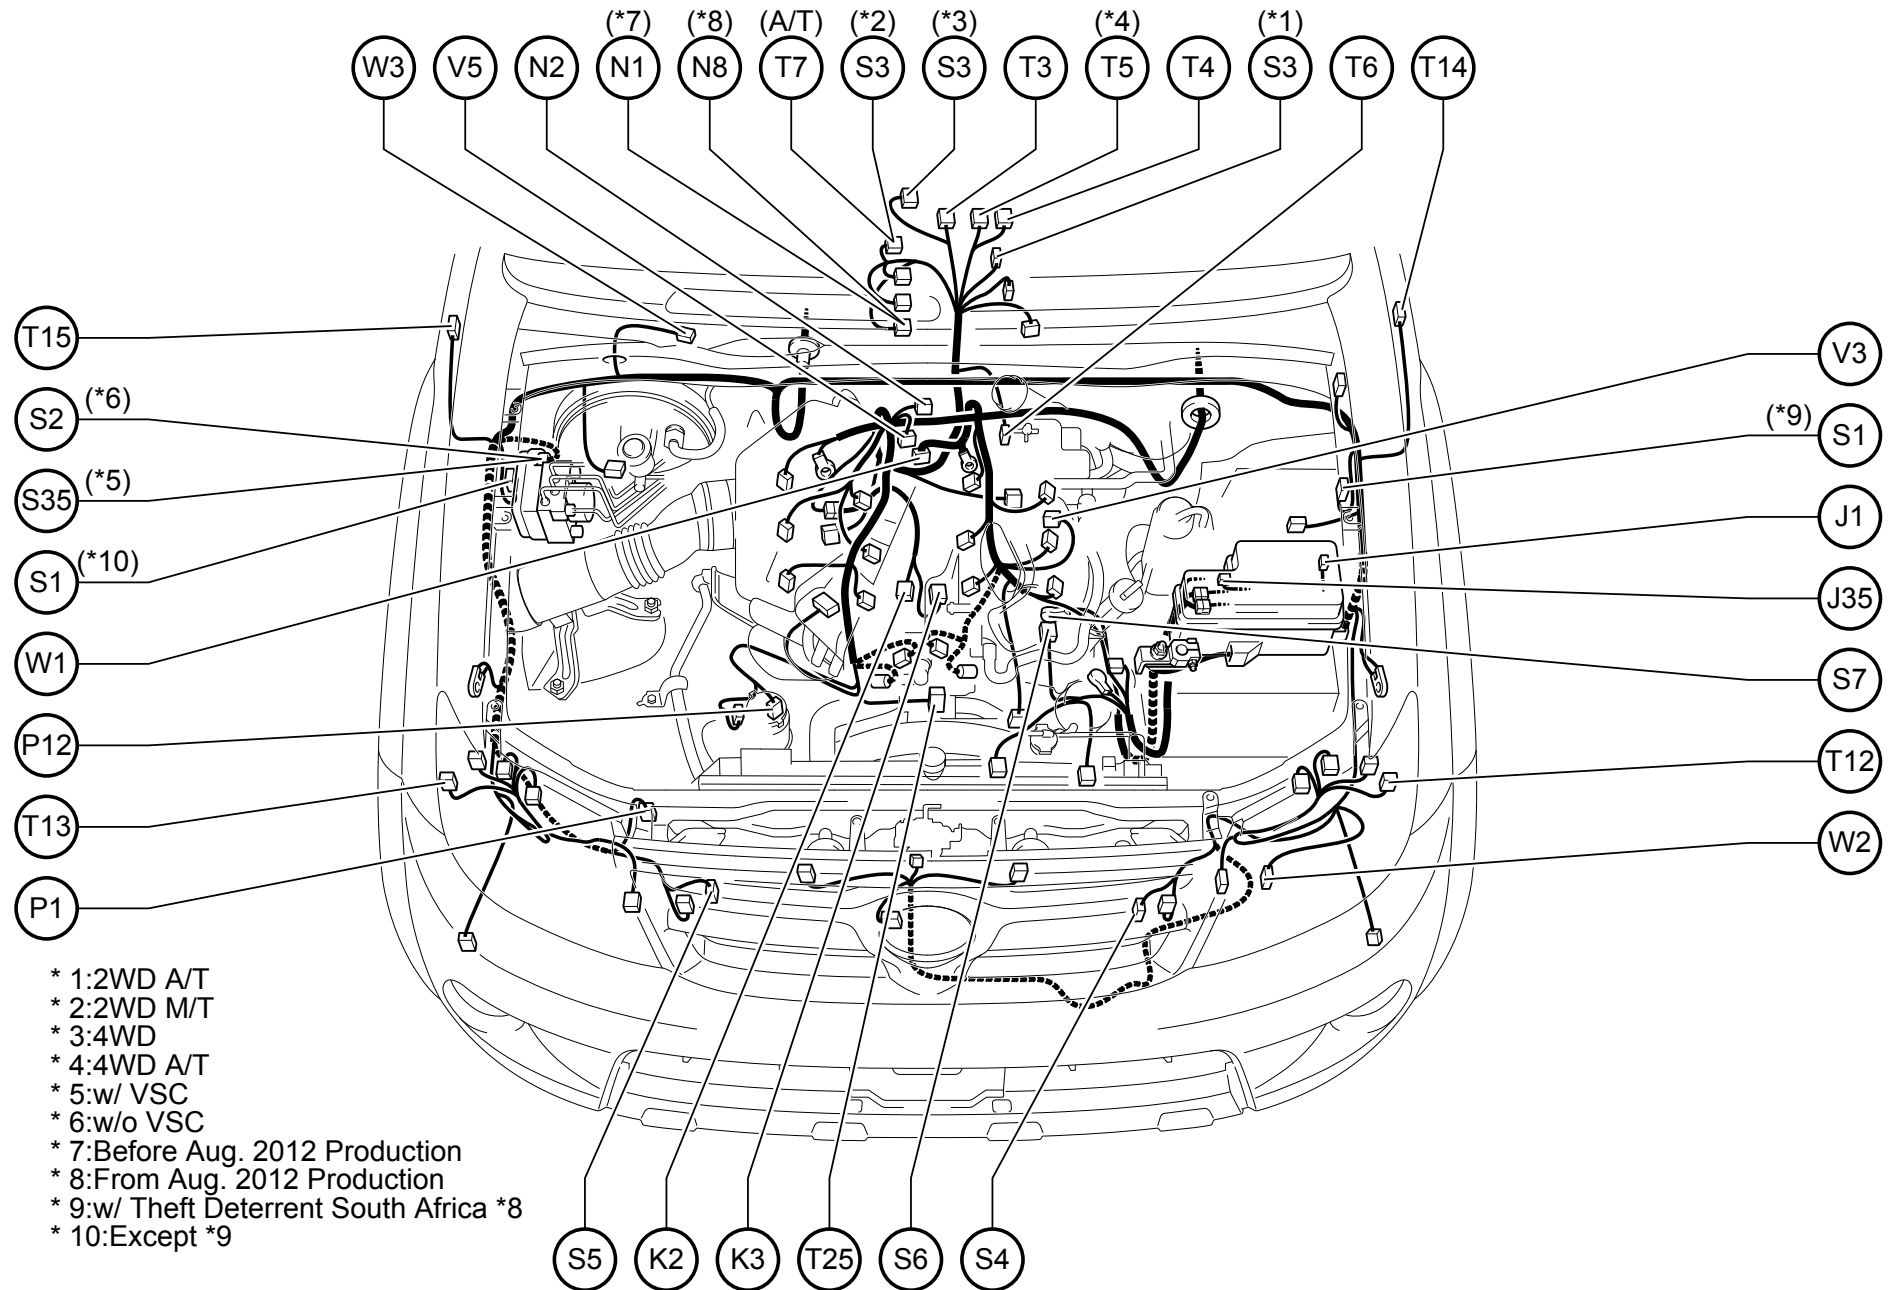
 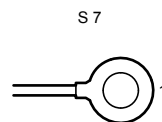
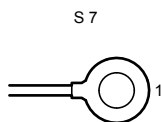

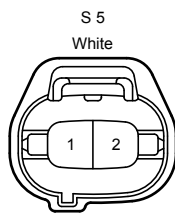
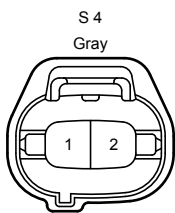
 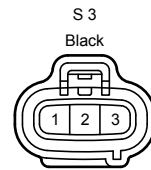
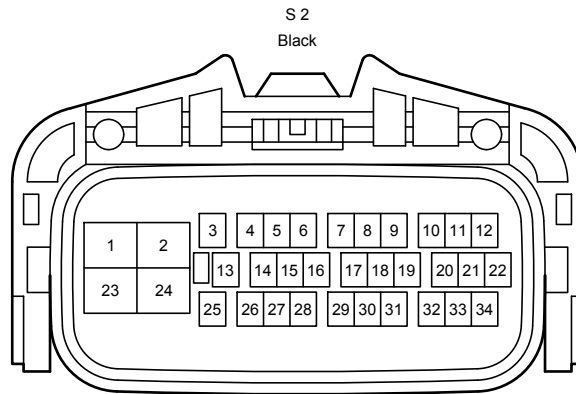

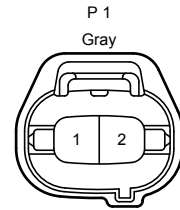
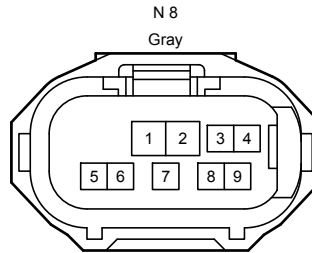
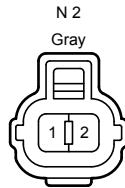
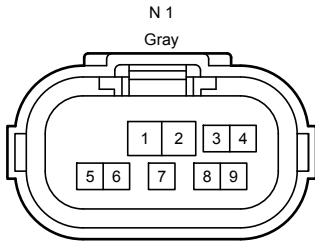
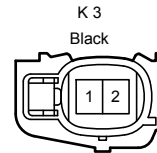
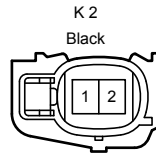


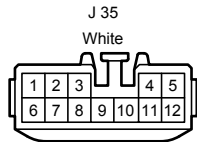



J	1	Junction Connector
J	35	Junction Connector
K	2	Knock Control Sensor (Bank 1)
K	3	Knock Control Sensor (Bank 2)
N	1	Park/Neutral Position SW
N	2	Noise Filter (Ignition)
N	8	Park/Neutral Position SW
P	1	Pressure SW
P	12	Power Steering Oil Pressure SW
S	1	Security Horn
S	2	Skid Control ECU with Actuator
S	3	Speed Sensor
S	4	Speed Sensor (Front LH)
S	5	Speed Sensor (Front RH)
S	6	Starter
S	7	Starter
S	35	Skid Control ECU with Actuator
T	3	Transfer Indicator SW (4WD Position)
T	4	Transfer Indicator SW (L4 Position)
T	5	Transfer Indicator SW (Neutral Position)
T	6	Transmission Revolution Sensor (Input)
T	7	Transmission Revolution Sensor (Output)
T	12	Turn Signal Lamp (Front LH)
T	13	Turn Signal Lamp (Front RH)
T	14	Turn Signal Lamp (Front Side LH)
T	15	Turn Signal Lamp (Front Side RH)
T	25	Throttle Body Assembly
V	3	VSV (Purge)
V	5	VSV (ACIS)
W	1	Water Temp. Sensor
W	2	Windshield Washer Motor
W	3	Windshield Wiper Motor

Position of Parts in Engine Compartment <RHD 1GR-FE>

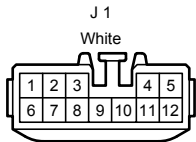

(South Africa 1GR-FE, Australia Before Aug. 2009 Production 1GR-FE)










(1TR-FE, 2TR-FE, Australia From Aug. 2009 Production 1GR-FE)

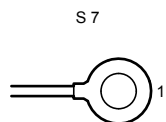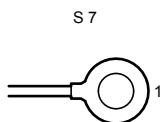


(1KD-FTV, 2KD-FTV Except Cold Area Spec., 5L-E)

(2KD-FTV Cold Area Spec.)


Position of Parts in Engine Compartment <RHD 1GR-FE>

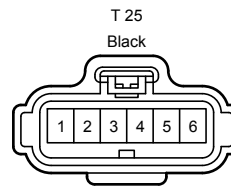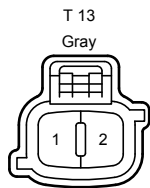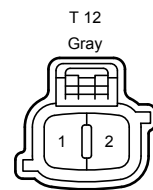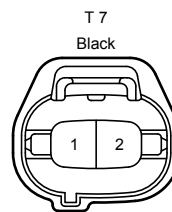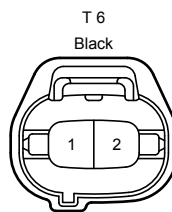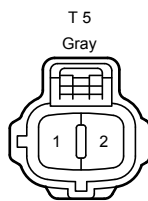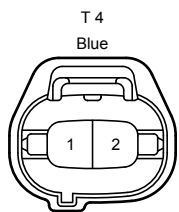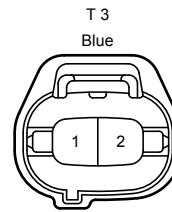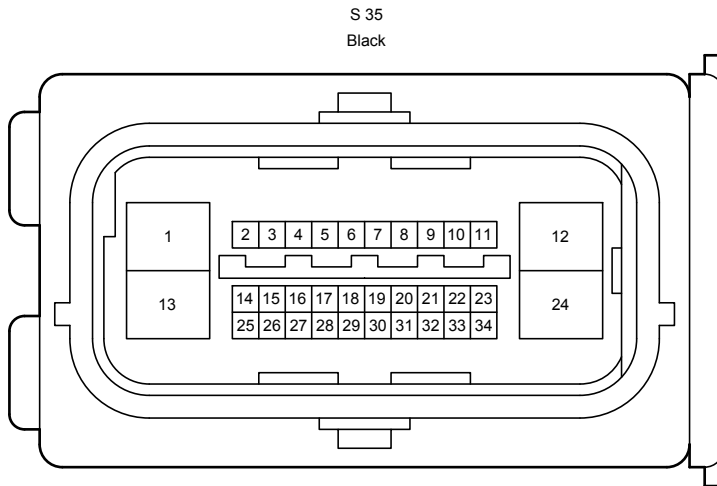


(1GR-FE, 1TR-FE, 2TR-FE)

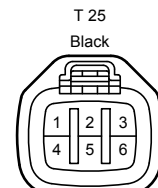

(5L-E)

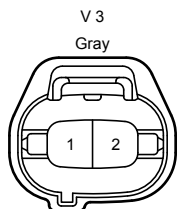

(1GR-FE)

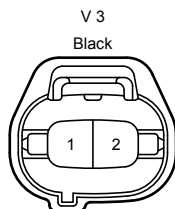

(1TR-FE, 2TR-FE)

