


- * 1: Before Aug. 2012 Production
- * 2: From Aug. 2012 Production
- * 3: Before Aug. 2013 Production
- * 4: From Aug. 2013 Production

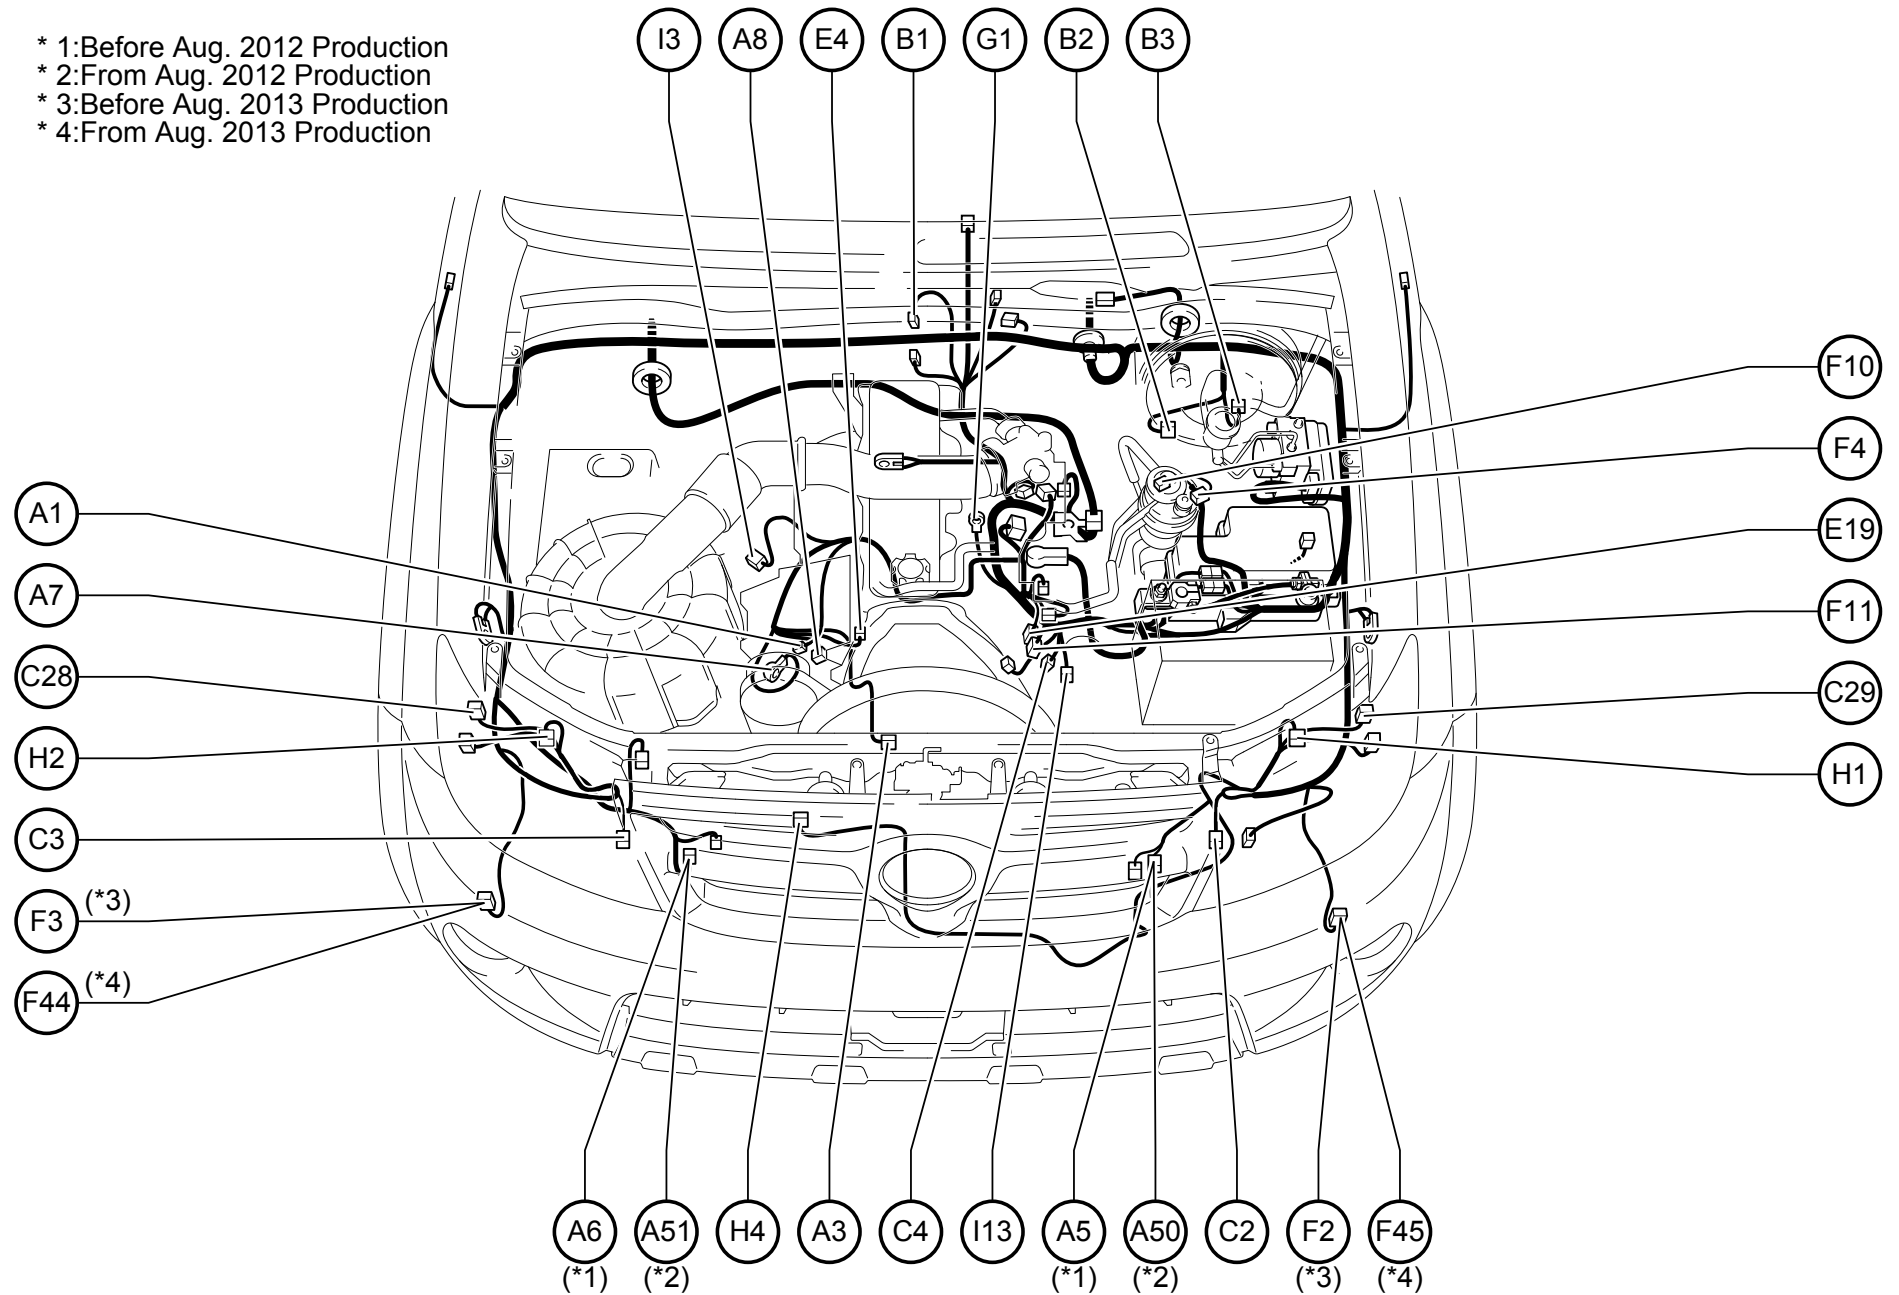

- A 1 A/C Compressor
- A 3 ADD Actuator
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW

- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)

- E 4 Engine Oil Pressure Sensor
- E 19 Engine Speed Sensor

- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 4 Fuel Filter Warning SW
- F 10 Fuel Sedimentary Level Warning SW
- F 11 Fuel Temp. Sensor
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)

- G 1 Glow Plug

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 4 Horn (Low)

- I 3 Inlet Air Temp. Sensor (Air Cleaner)
- I 13 Injection Pump Assembly

Position of Parts in Engine Compartment <LHD 5L-E>

