


- * 3: Before Aug. 2009 Production
- * 4: From Aug. 2009 Production
- * 9: Before Aug. 2012 Production
- * 10: From Aug. 2012 Production

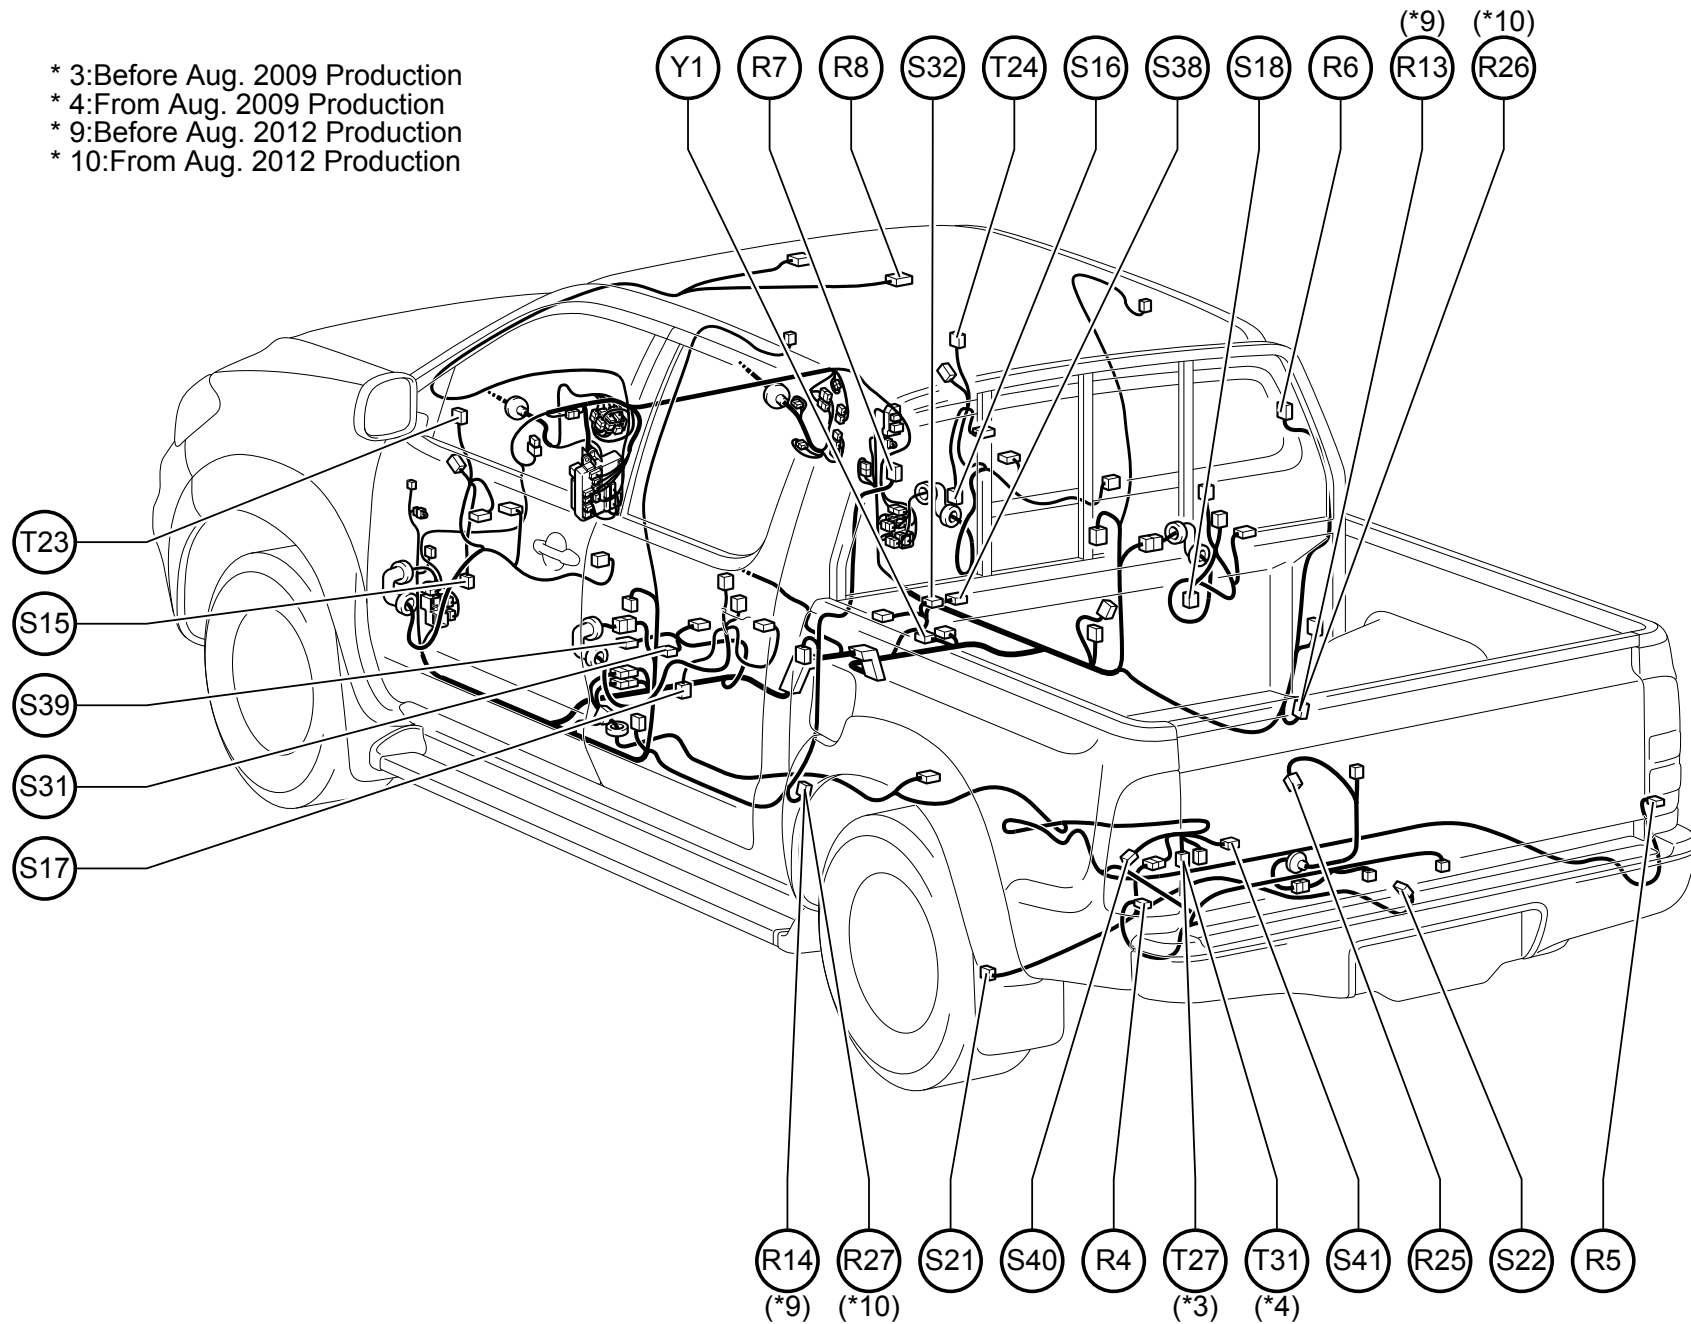

- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 6 Rear Window Defogger
- R 7 Rear Window Defogger
- R 8 Room Lamp
- R 13 Rear Side Airbag Sensor Assembly RH
- R 14 Rear Side Airbag Sensor Assembly LH
- R 25 Rear Television Camera Assembly
- R 26 Rear Side Airbag Sensor Assembly RH
- R 27 Rear Side Airbag Sensor Assembly LH

- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 17 Speaker (Rear Door LH)
- S 18 Speaker (Rear Door RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 31 Seat Heater (LH)
- S 32 Seat Heater (RH)
- S 38 Side Airbag Squib Circuit RH
- S 39 Side Airbag Squib Circuit LH
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)

- T 23 Tweeter (LH)
- T 24 Tweeter (RH)
- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)

- Y 1 Yaw Rate Sensor Assembly

Position of Parts in Body <LHD Double Cab>

