


Position of Parts in Body <RHD Single Cab>

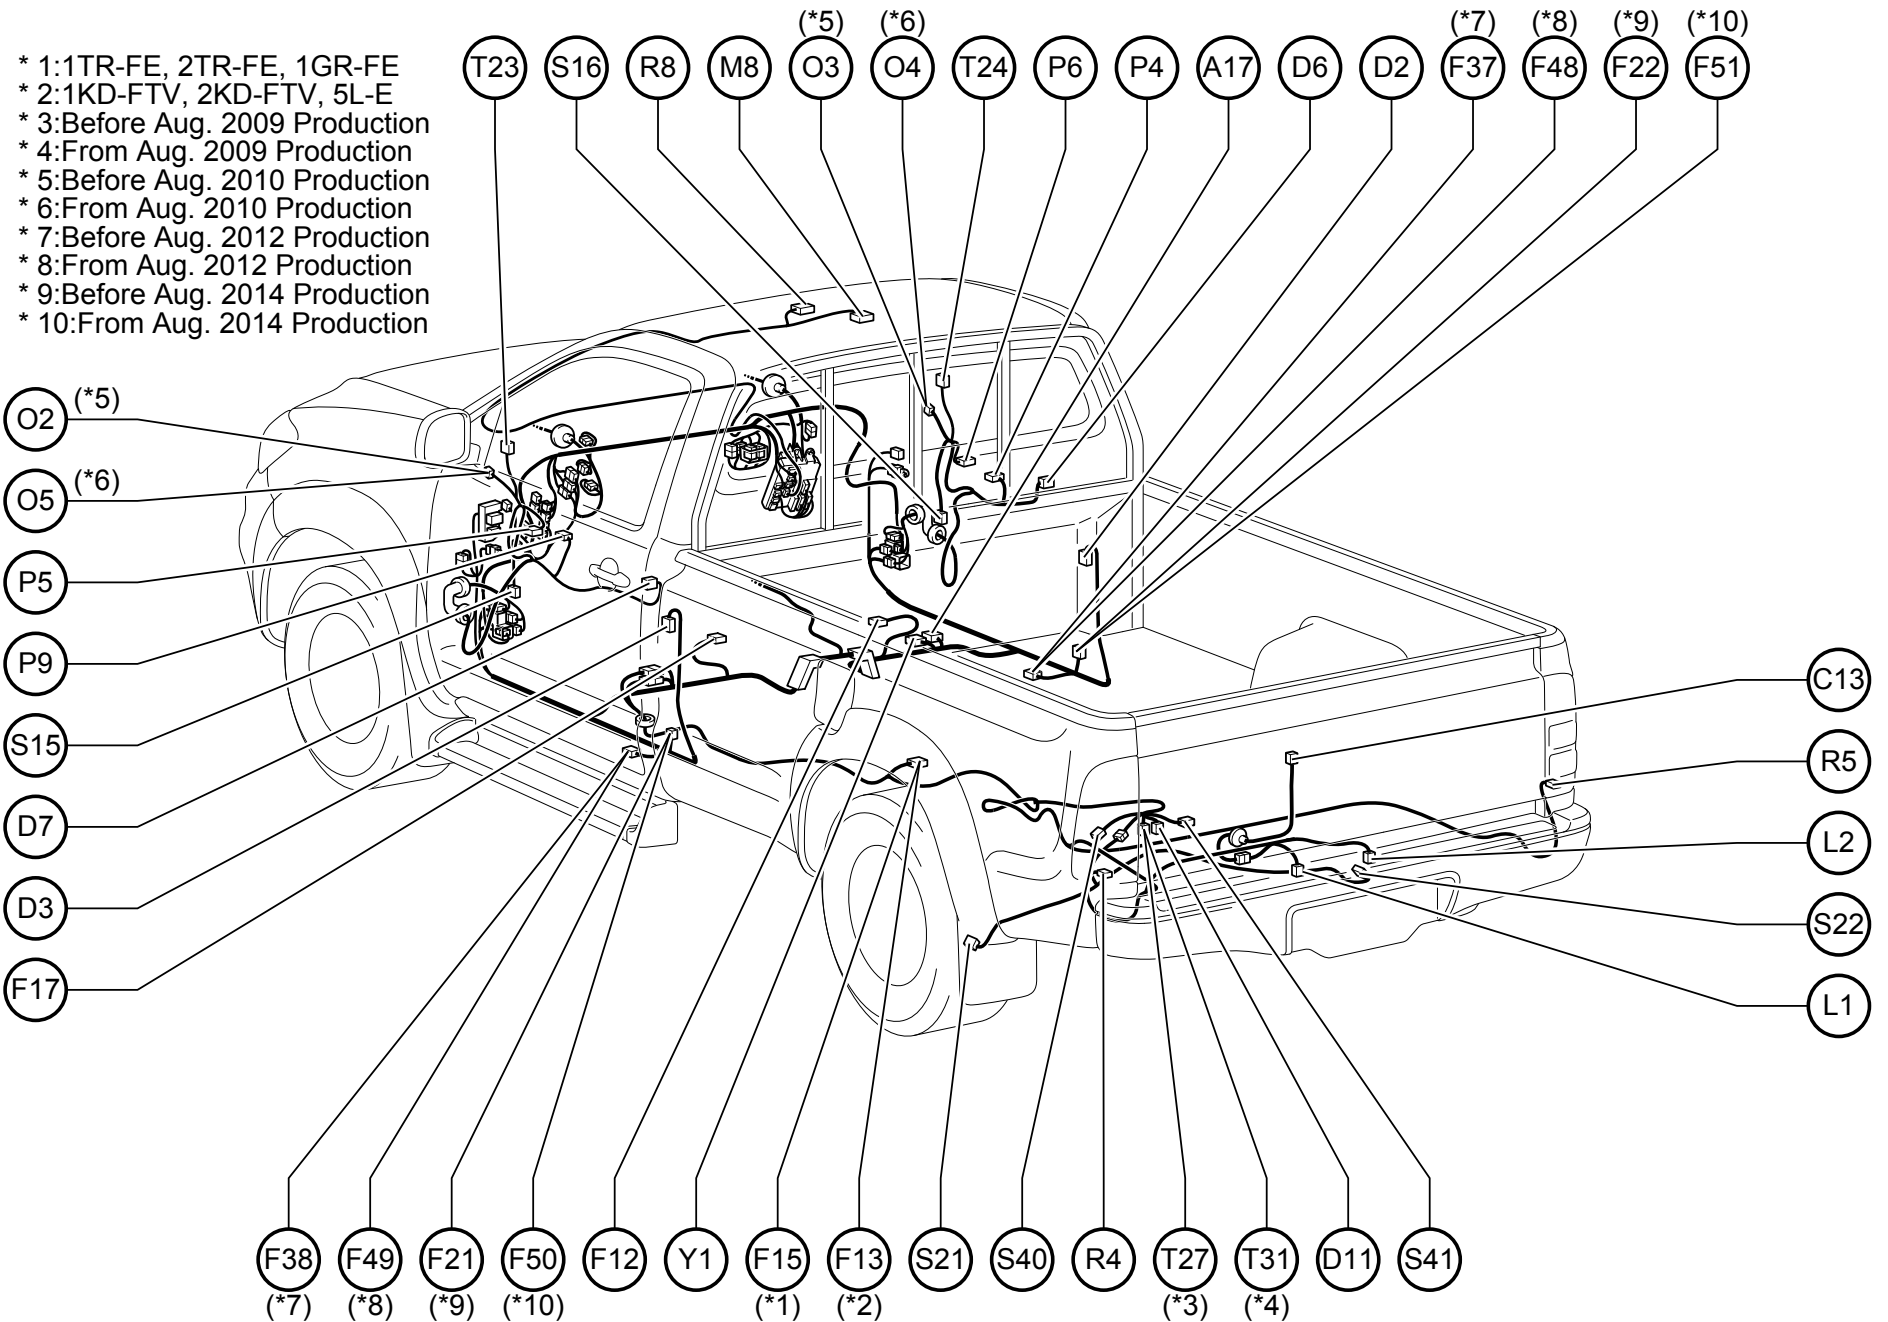

- A 17 ABS Deceleration Sensor

- C 13 Center Stop Lamp

- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- D 11 Diff. Lock Shift Actuator Assembly

- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- F 37 Front Side Airbag Sensor RH
- F 38 Front Side Airbag Sensor LH
- F 48 Front Side Airbag Sensor RH
- F 49 Front Side Airbag Sensor LH
- F 50 Front Seat Outer Belt (LH)
- F 51 Front Seat Outer Belt (RH)

- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH

- M 8 Map Lamp

- O 2 Outer Rear View Mirror (LH)
- O 3 Outer Rear View Mirror (RH)
- O 4 Outer Rear View Mirror (RH)
- O 5 Outer Rear View Mirror (LH)

- P 4 Power Window Master SW
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 9 Power Window SW (Front Passenger's Side)


- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 8 Room Lamp

- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)

- T 23 Tweeter (LH)
- T 24 Tweeter (RH)
- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)




- Y 1 Yaw Rate Sensor Assembly

Position of Parts in Body <RHD Single Cab>

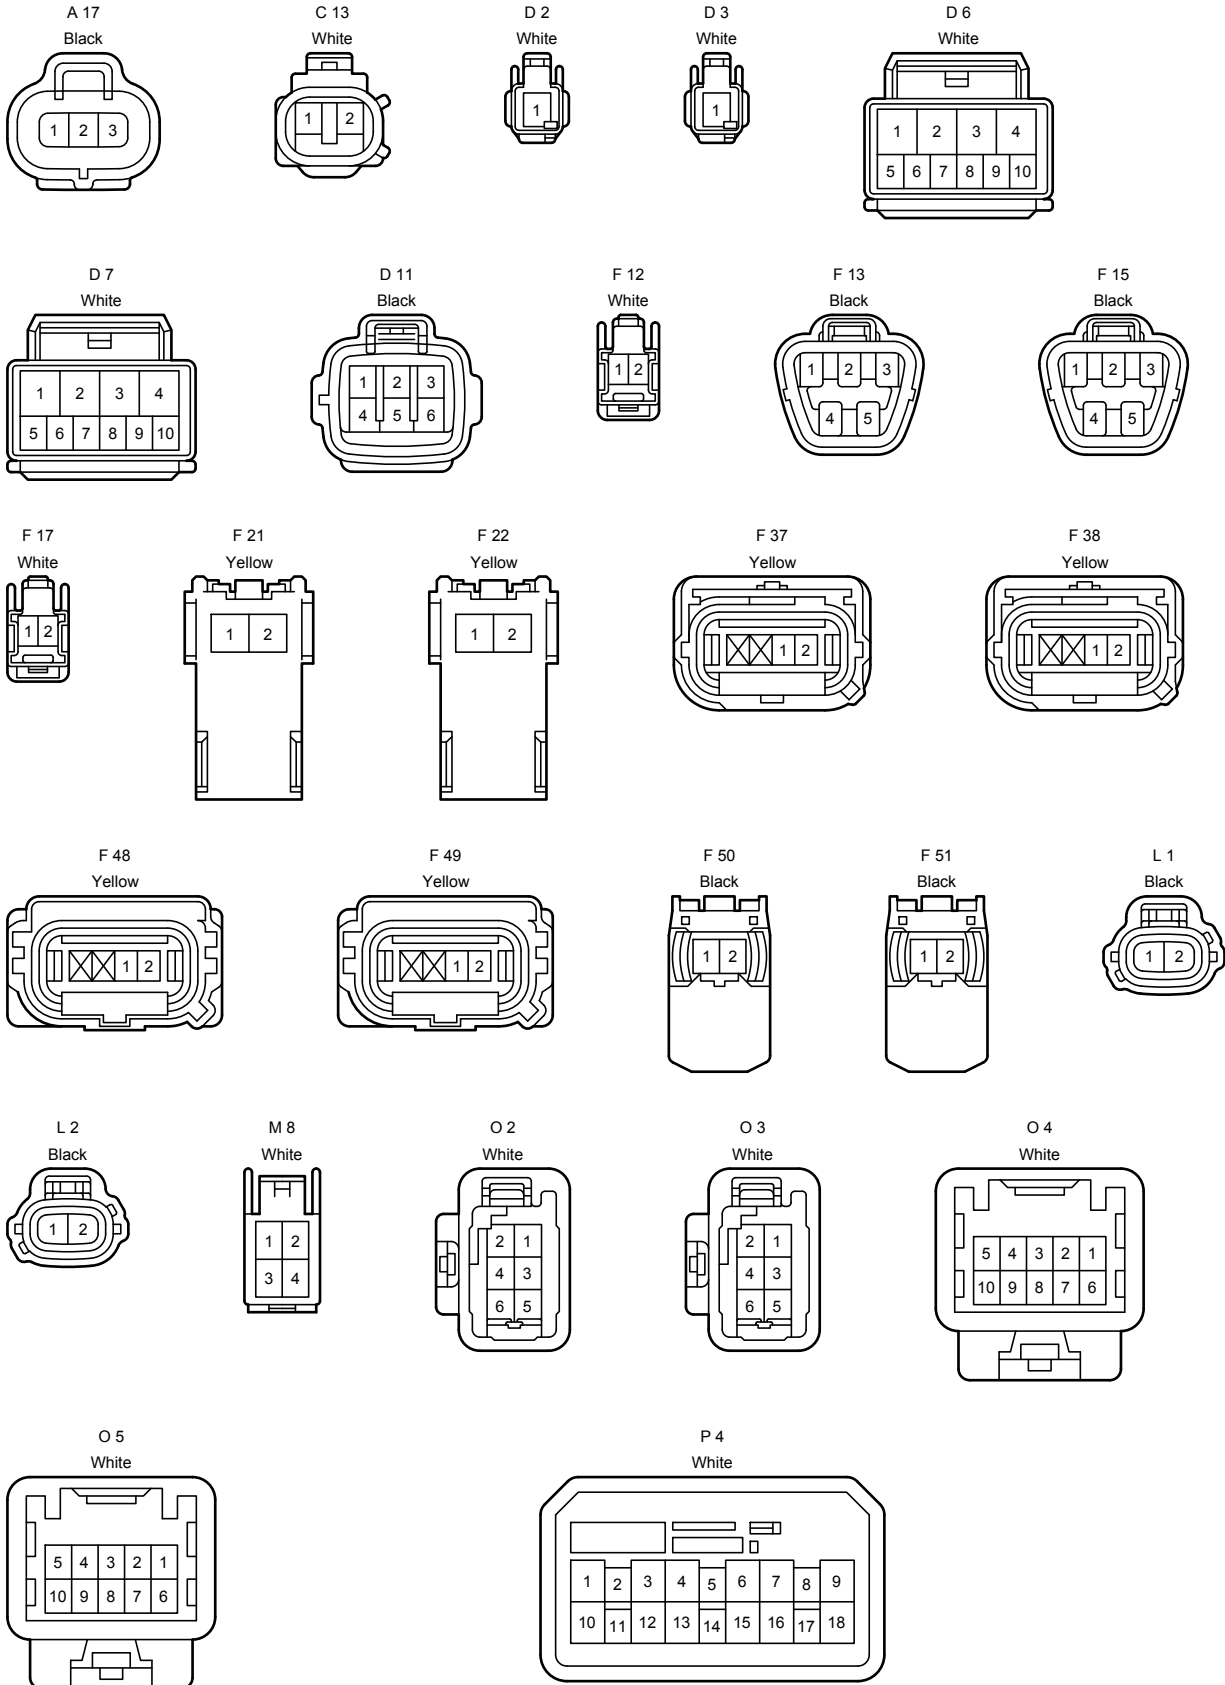

(Double Cab, Extra Cab w/ Driver's Window Jam Protection, Single Cab w/ Driver's Window Jam Protection)

Position of Parts in Body <RHD Single Cab>

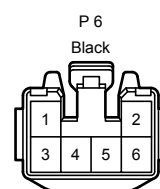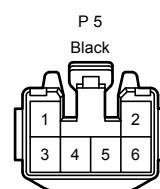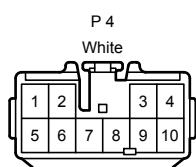

(Single Cab w/o Driver's Window Jam Protection, Extra Cab w/o Driver's Window Jam Protection)

