


- * 7:w/o Air Conditioner
- * 8:w/ Engine Immobiliser System
- * 9:w/o Rear Diff. Lock Control
w/ Short Connector (4WD Control ECU)
- * 11:Before Aug. 2006 Production
- * 14:Refer to the Service Bulletin
for the installation position of the parts.
- * 15:Before Jun. 2011 Production
- * 16:From Jun. 2011 Production
- * 28:From Aug. 2006 Production
until Jun. 2011 Production
- * 32:From Aug. 2013 Production
- * 35:From Jun. 2011 Production
until Aug. 2013 Production

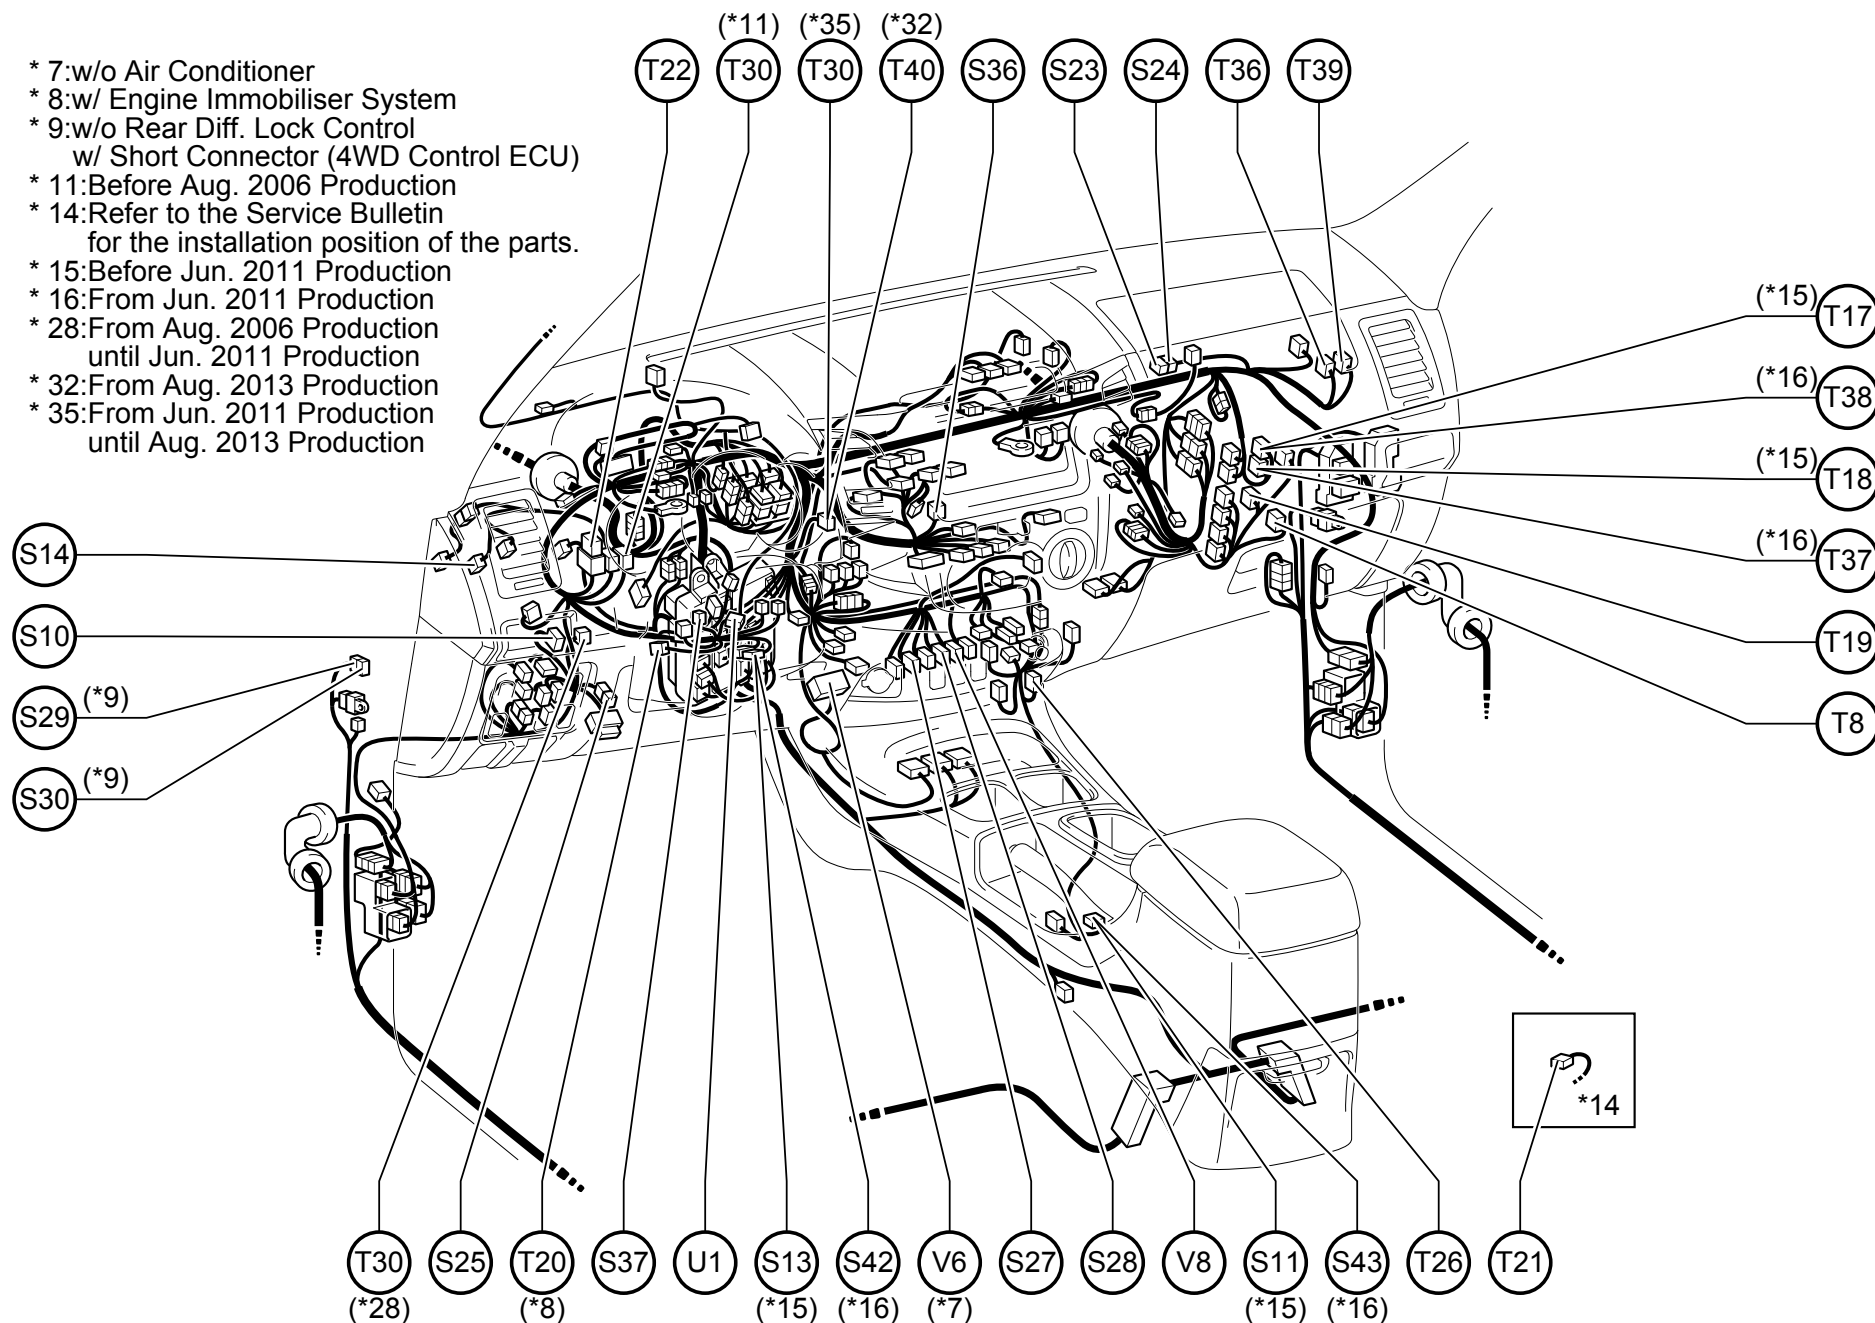





 






 





 
S 10 Security Indicator Lamp
S 11 Shift Lock Control ECU
S 13 Spiral Cable
S 14 Stop Lamp SW
S 23 Short Connector (Theft Warning ECU)
S 24 Short Connector (Theft Warning ECU)
S 25 Short Connector (Light Control Rheostat)
S 27 Seat Heater SW (LH)
S 28 Seat Heater SW (RH)
S 29 Short Connector (4WD Control ECU)
S 30 Short Connector (4WD Control ECU)
S 36 Skid Control Buzzer
S 37 Steering Sensor
S 42 Spiral Cable
S 43 Shift Lock Control ECU

T 8 Turbo Motor Driver
T 17 Transmission Control ECU
T 18 Transmission Control ECU
T 19 Transmission Control ECU
T 20 Transponder Key Amplifier
T 21 Transponder Key ECU
T 22 Turn Signal Flasher
T 26 Temp. Control SW (Max Hot)
T 30 Tail Lamp Relay
T 36 Theft Warning ECU
T 37 Transmission Control ECU
T 38 Transmission Control ECU
T 39 Theft Warning ECU
T 40 Tail Lamp Relay


U 1 Unlock Warning SW

V 6 Viscous Heater Amplifier
V 8 VSC OFF Switch


Position of Parts in Instrument Panel <LHD>

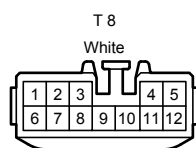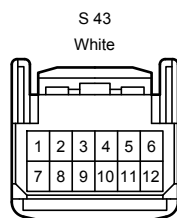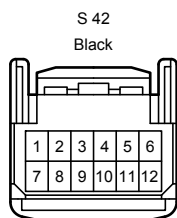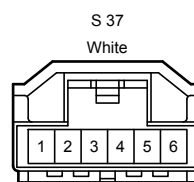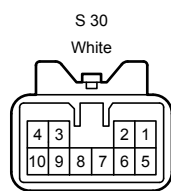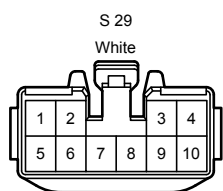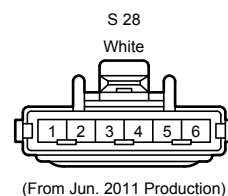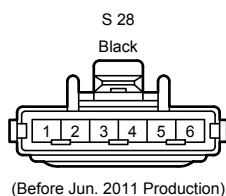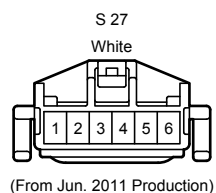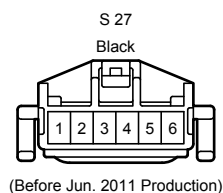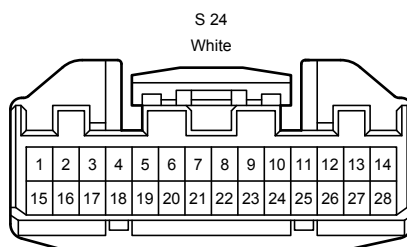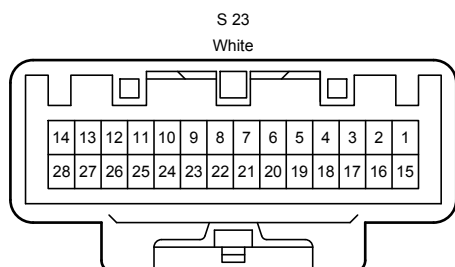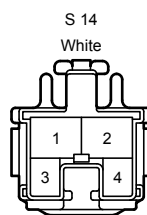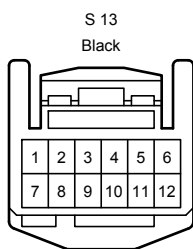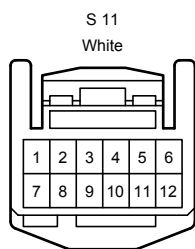

(Europe 1KD-FTV, Australia From Aug. 2006 Production, 2KD-FTV VN Turbocharger, South Africa 1KD-FTV From Aug. 2010 Production)

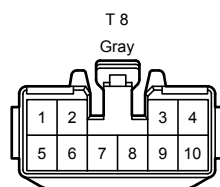

(South Africa 1KD-FTV Before Aug. 2010 Production, Australia Before Aug. 2006 Production)

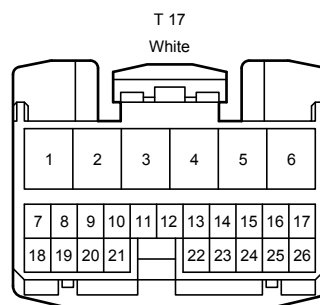

Position of Parts in Instrument Panel <LHD>

