


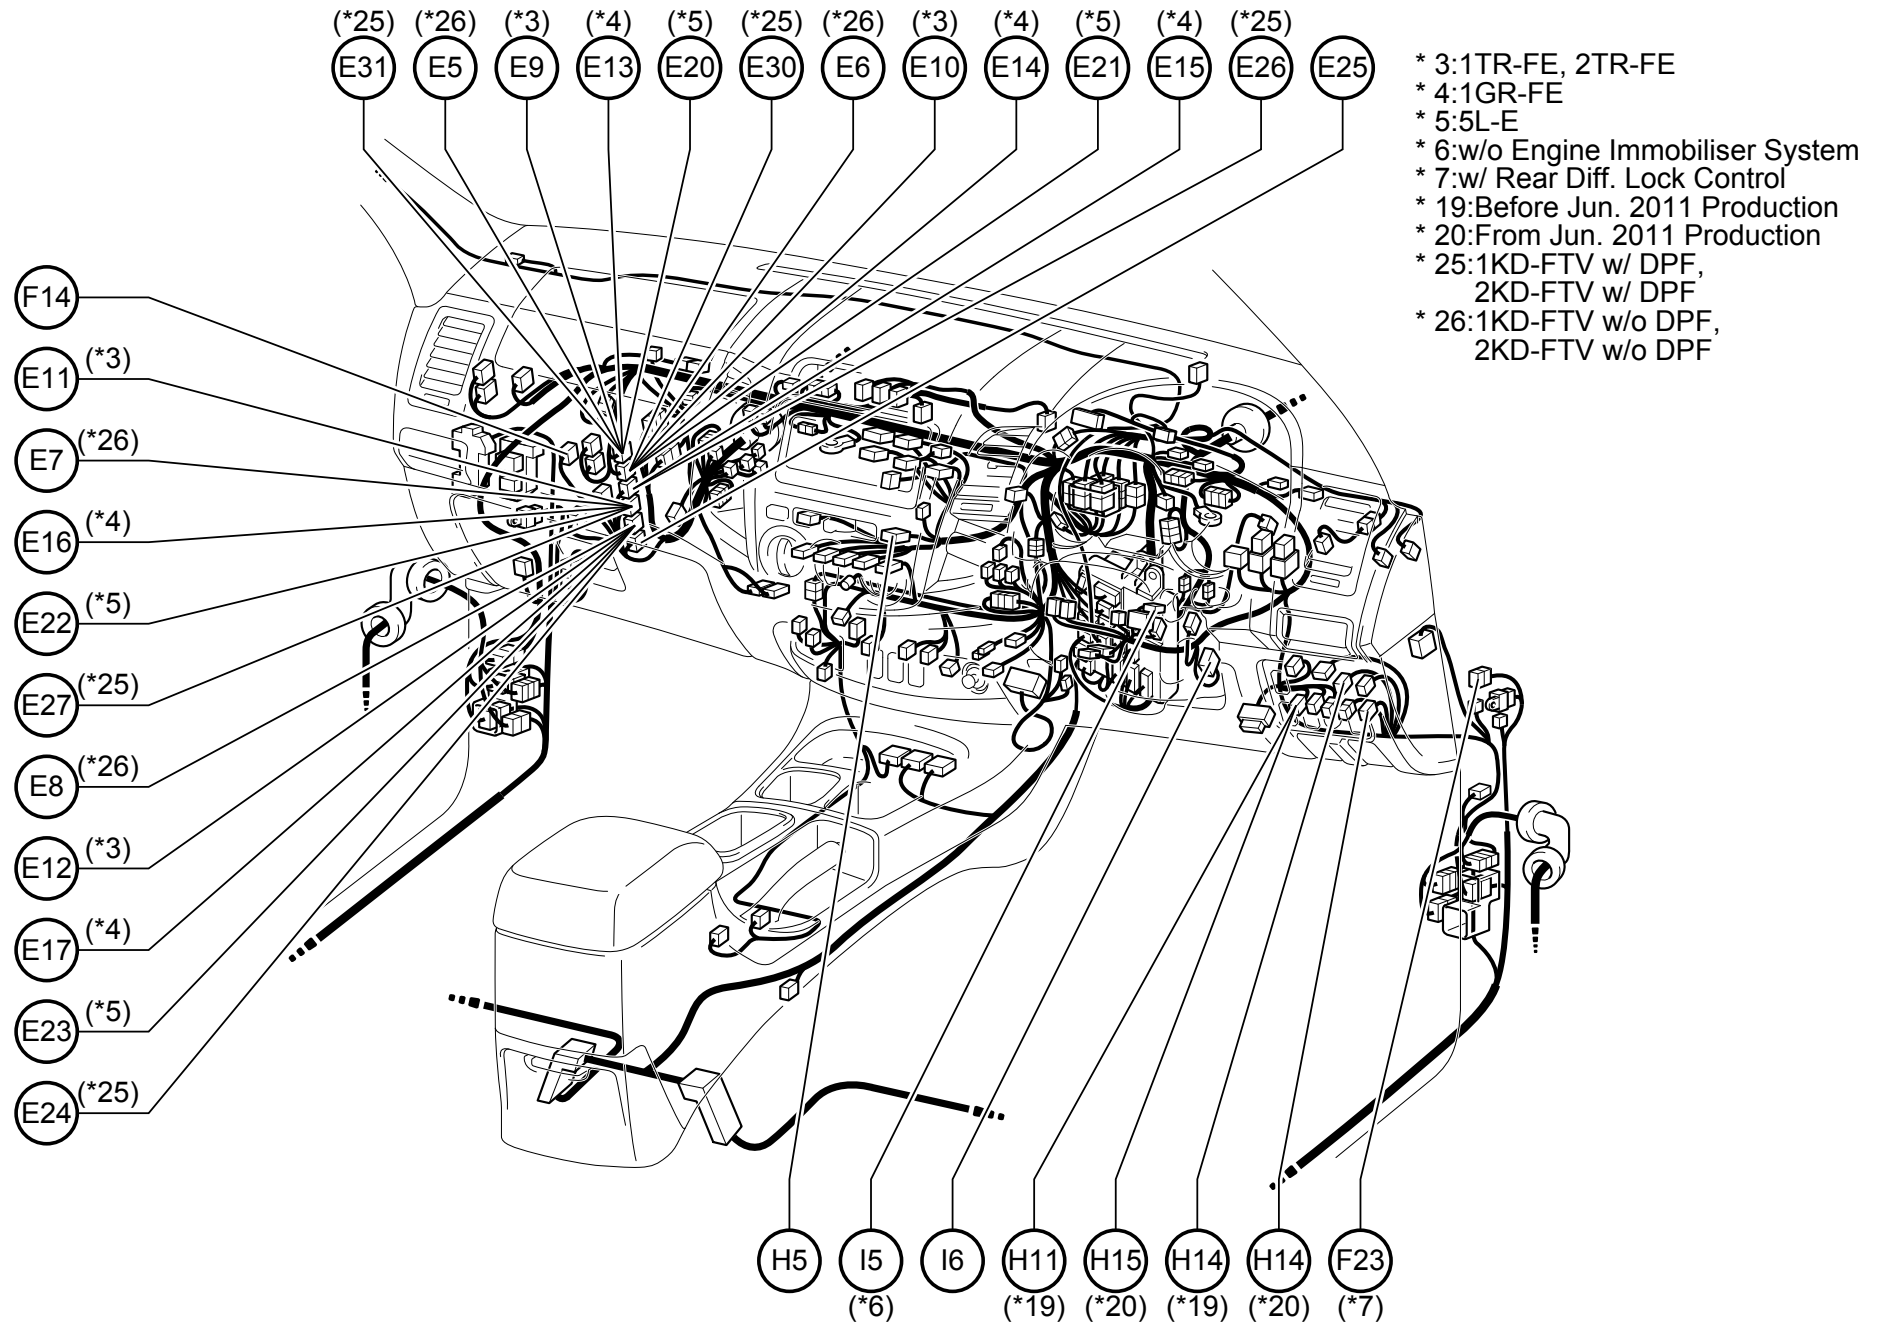


E	5	Engine ECU
E	6	Engine ECU
E	7	Engine ECU
E	8	Engine ECU
E	9	Engine ECU
E	10	Engine ECU
E	11	Engine ECU
E	12	Engine ECU
E	13	Engine ECU
E	14	Engine ECU
E	15	Engine ECU
E	16	Engine ECU
E	17	Engine ECU
E	20	Engine ECU
E	21	Engine ECU
E	22	Engine ECU
E	23	Engine ECU
E	24	Engine ECU
E	25	Engine ECU
E	26	Engine ECU
E	27	Engine ECU
E	30	Engine ECU
E	31	Engine ECU
F	14	4WD Control ECU
F	23	4WD Control ECU (Rear Diff. Lock)
H	5	Hazard Warning Signal SW
H	11	Headlamp Leveling SW
H	14	Headlight Cleaner Switch
H	15	Headlamp Leveling SW
I	5	Ignition Key Cylinder Lamp
I	6	Ignition SW

Position of Parts in Instrument Panel <RHD>


E 5

Gray

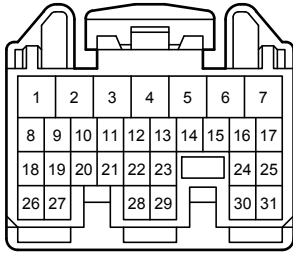


E 6

Gray

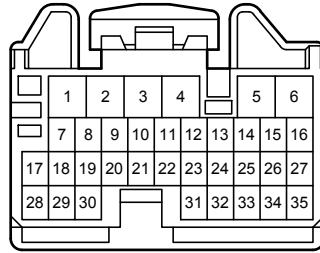


E 7

Gray

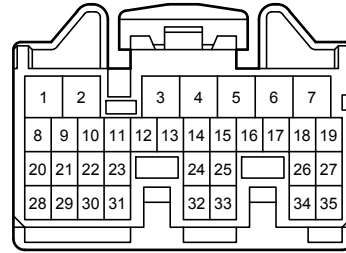


E 8

Gray

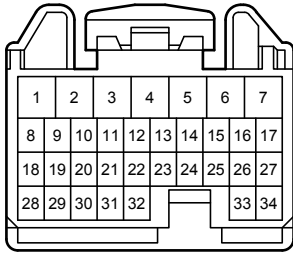


E 9

White

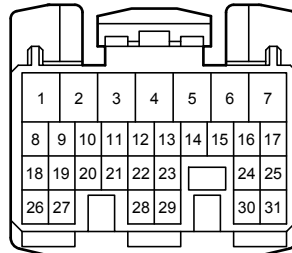


E 10

White

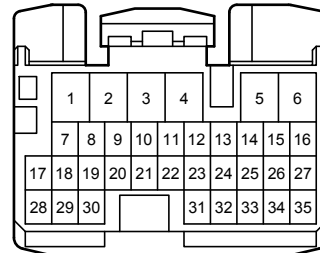


E 11

White

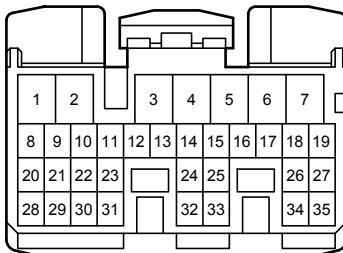


E 12

White

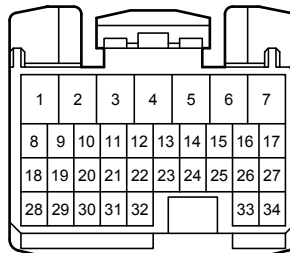


E 13

White

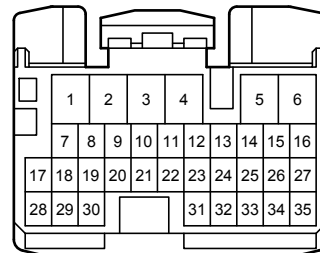


E 14

White

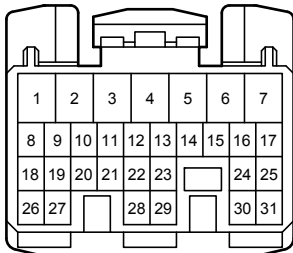


E 15

White

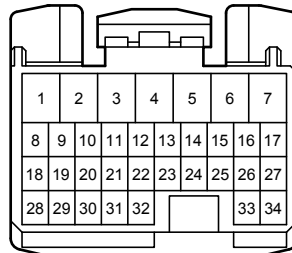


E 16

White

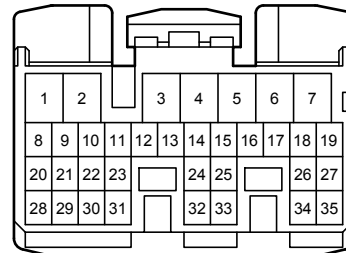


E 17

White

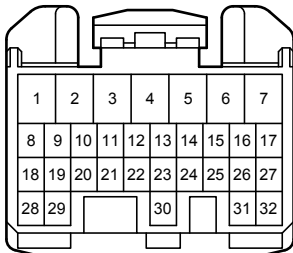


E 20

White

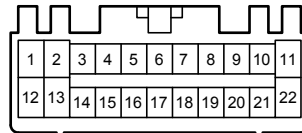

E 21


Dark Gray

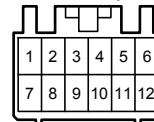

Position of Parts in Instrument Panel <RHD>


E 22

White

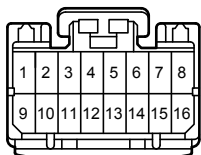


E 23

White

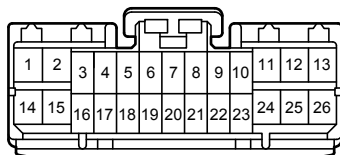


E 24

Black

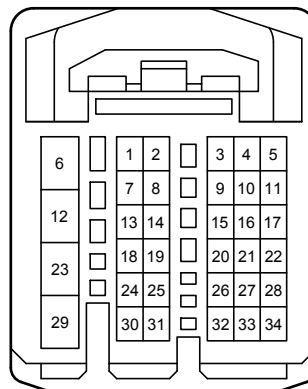


E 25

White

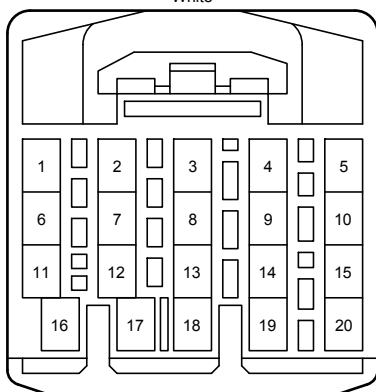


E 26

White

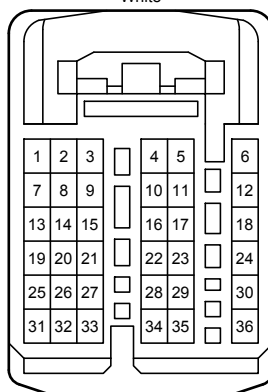


E 27

Gray

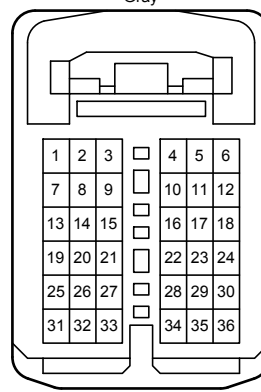


E 30

White

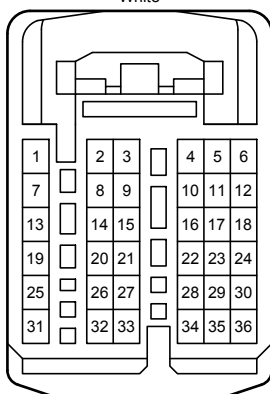


E 31

White

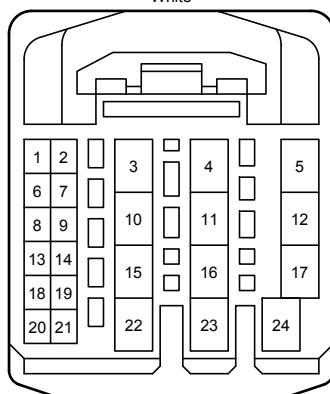


F 14

 Green




F 23

White

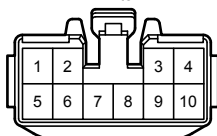


H 5

White

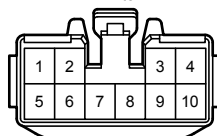

H 11

 White



H 14

Black

