



Engine Control (1TR-FE, 2TR-FE)

* 2 : w/ Air Injection Control Driver

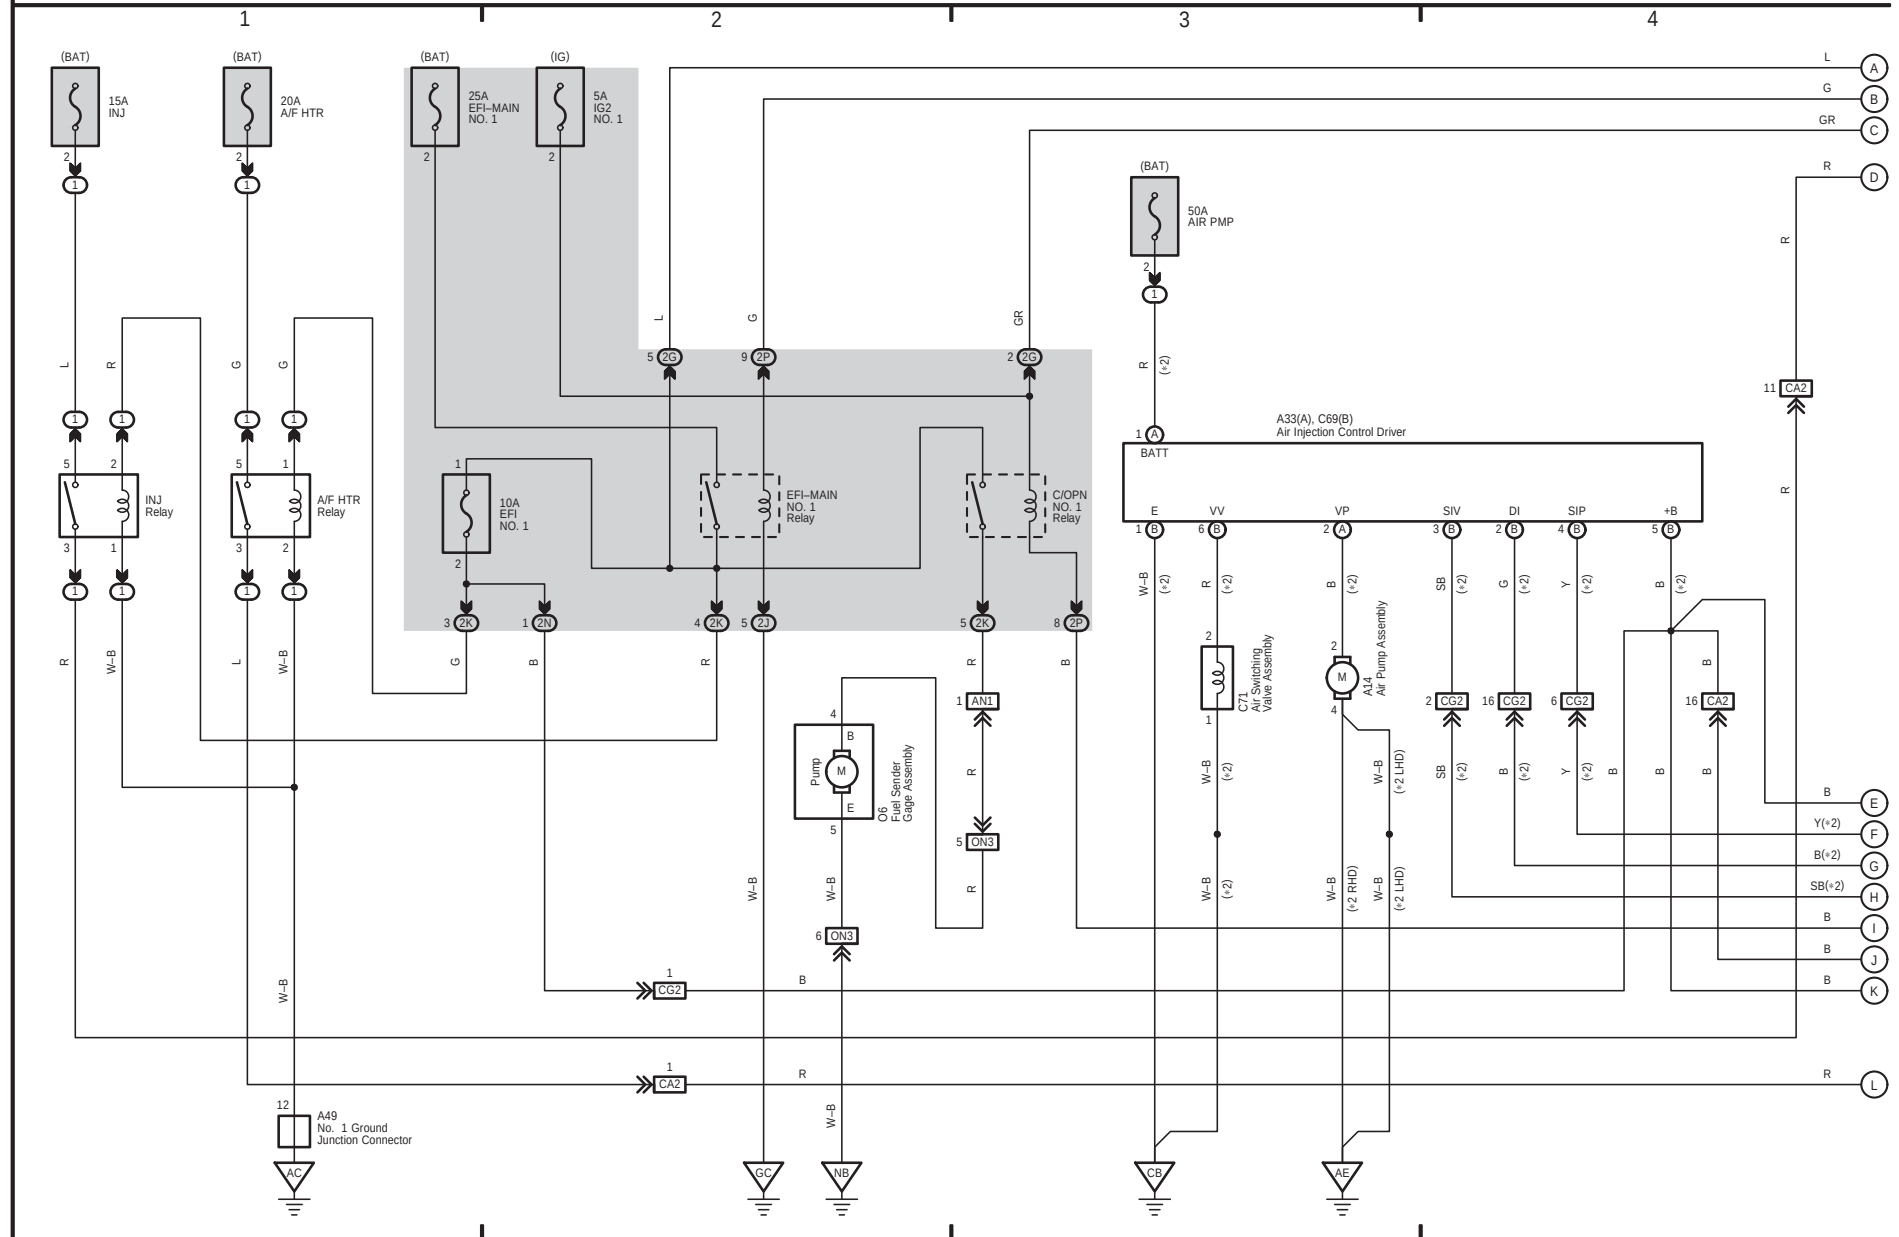


Engine Control (1TR-FE, 2TR-FE)

* 2 : w/ Air Injection Control Driver

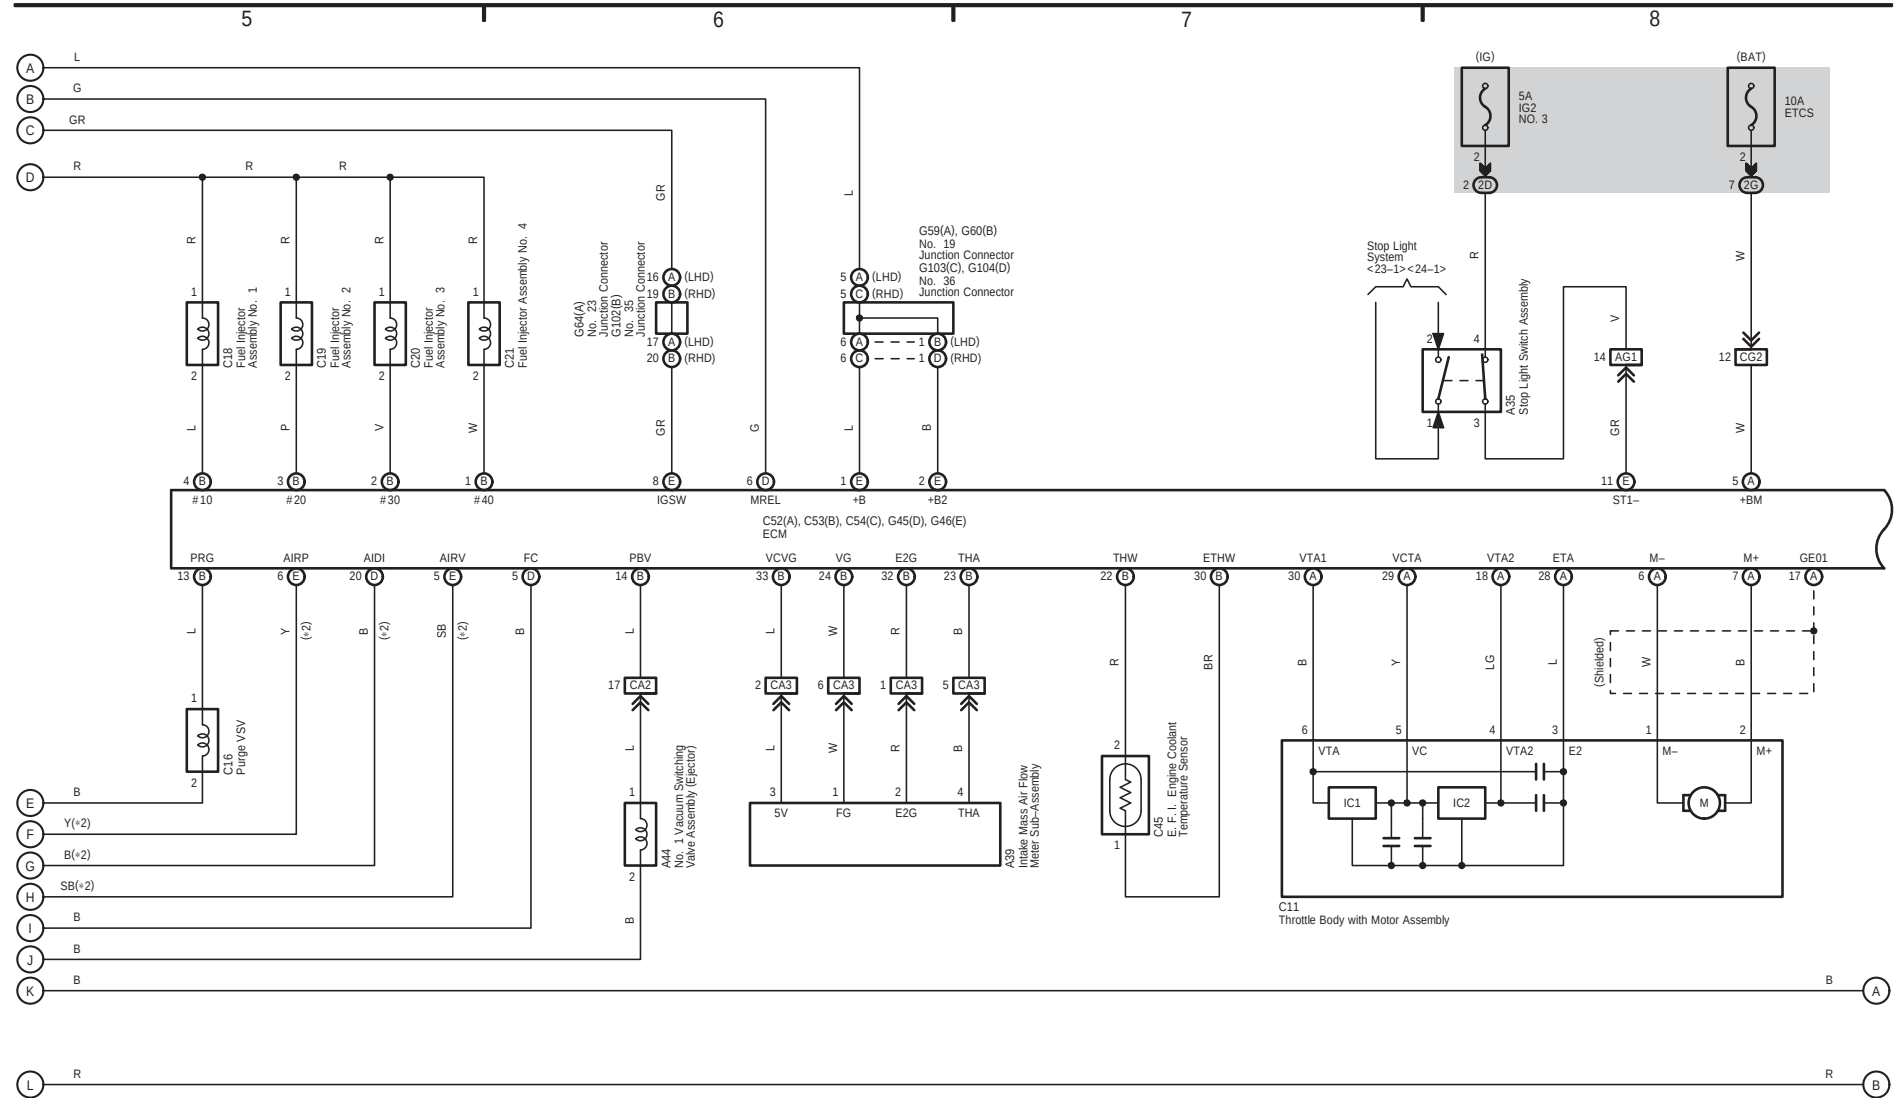

Engine Control (1TR-FE, 2TR-FE)


- * 1 : w/ Immobiliser System
- * 3 : w/ Rear Window Defogger
- * 5 : w/ Entry & Start System
- * 6 : w/o Entry & Start System
- * 8 : w/ Body ECU

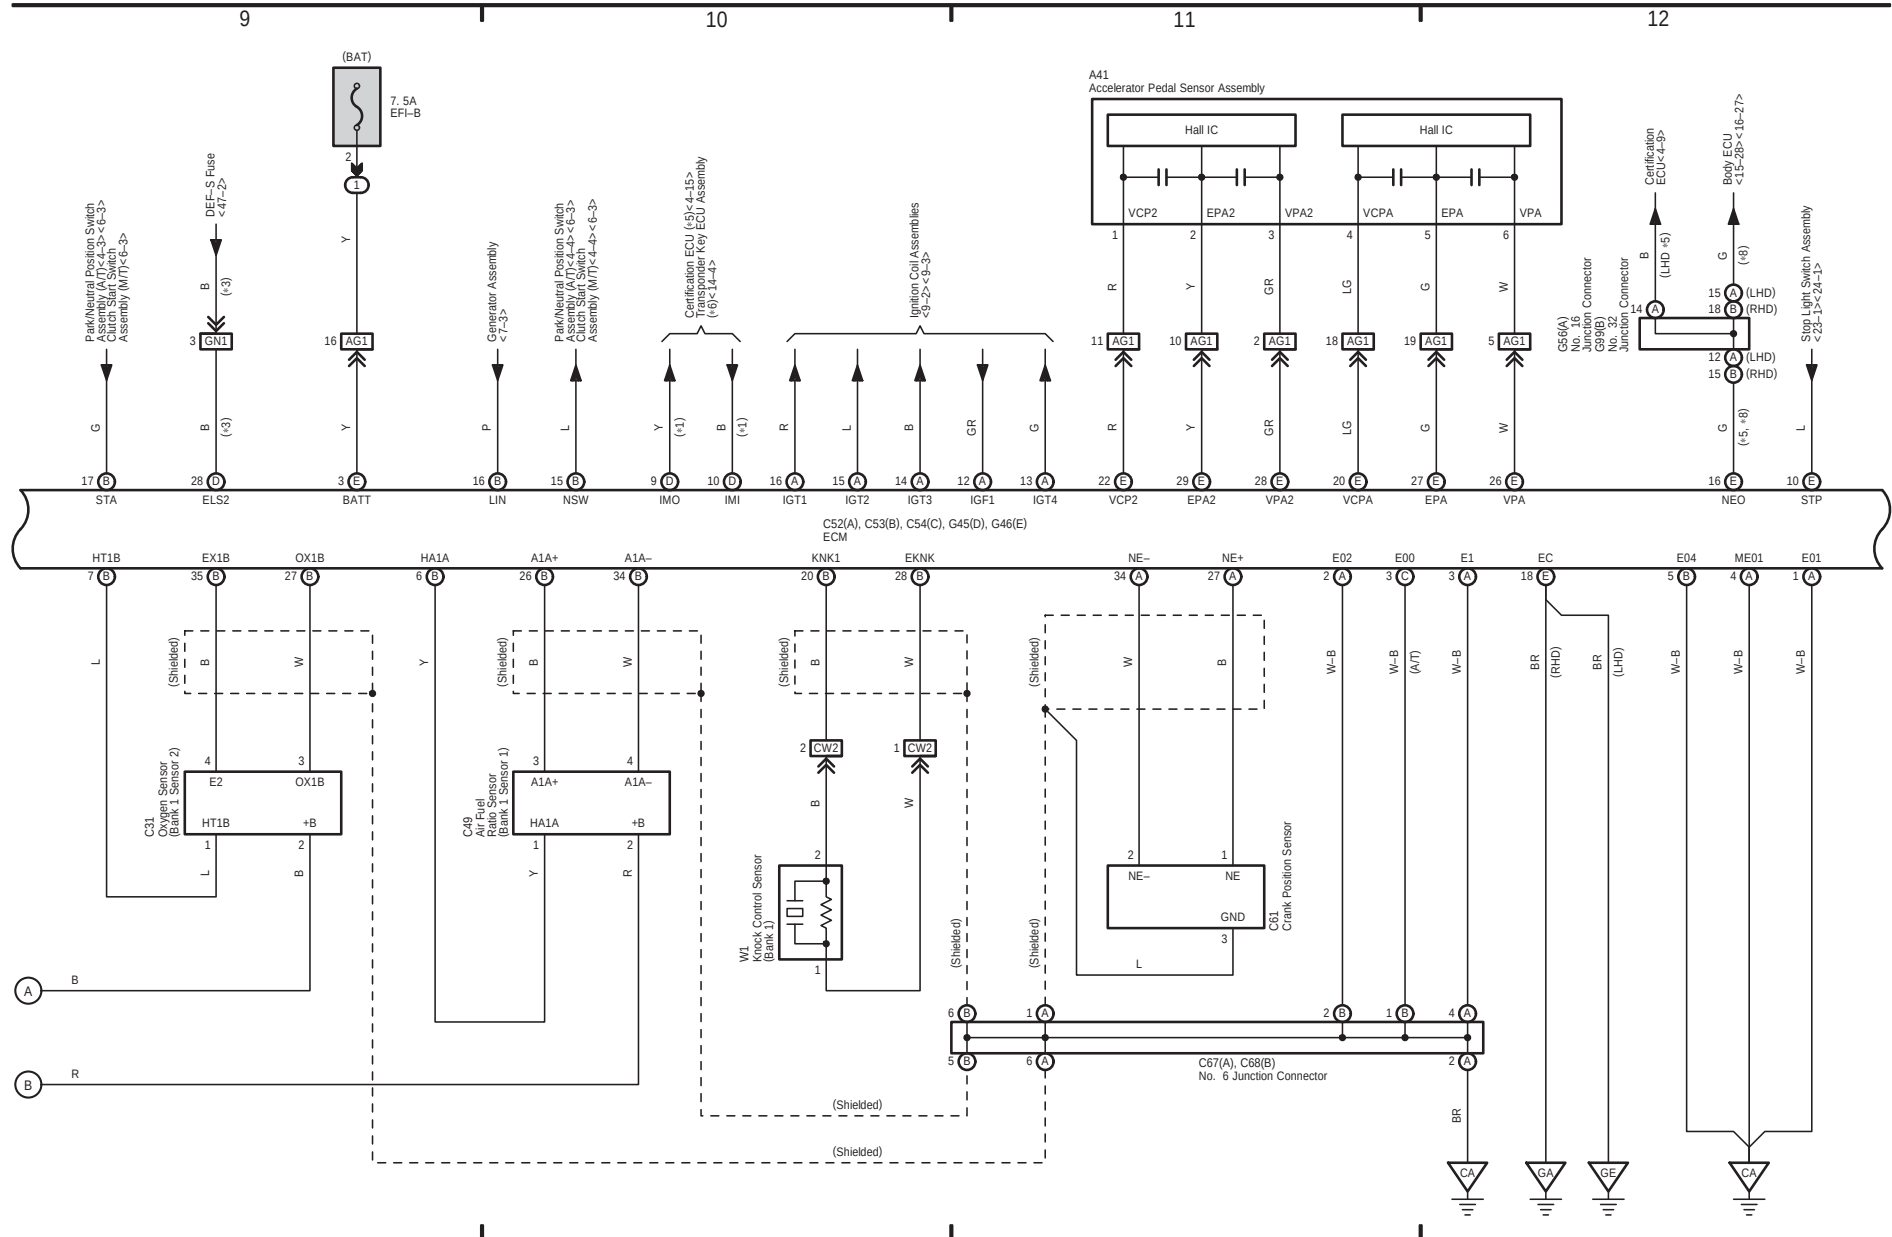


Cruise Control (2TR-FE)

ECT and A/T Indicator (2TR-FE)

* 2 : w/ Air Injection Control Driver
 * 7 : w/ Cruise Control
 * 9 : w/ A/C

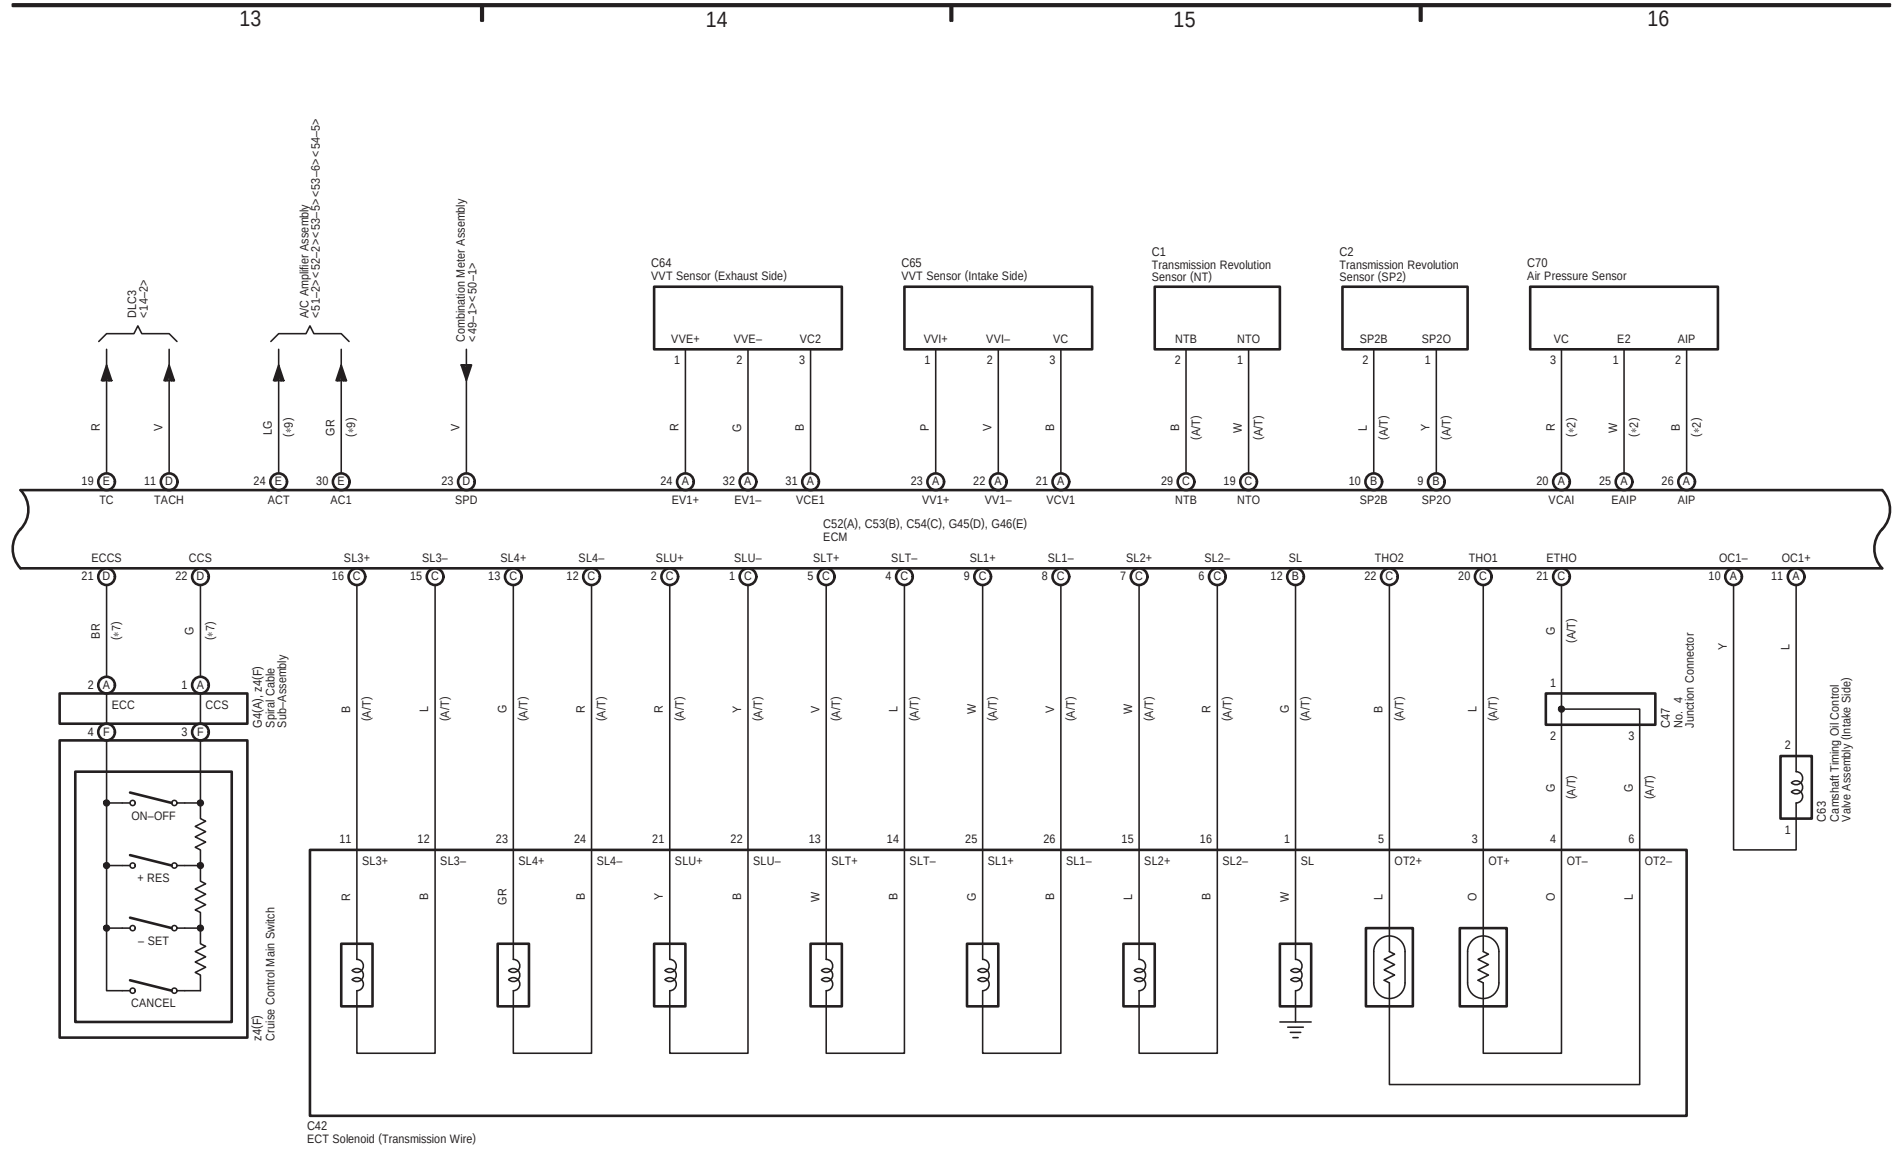

* 4 : w/ Combination Switch Assembly

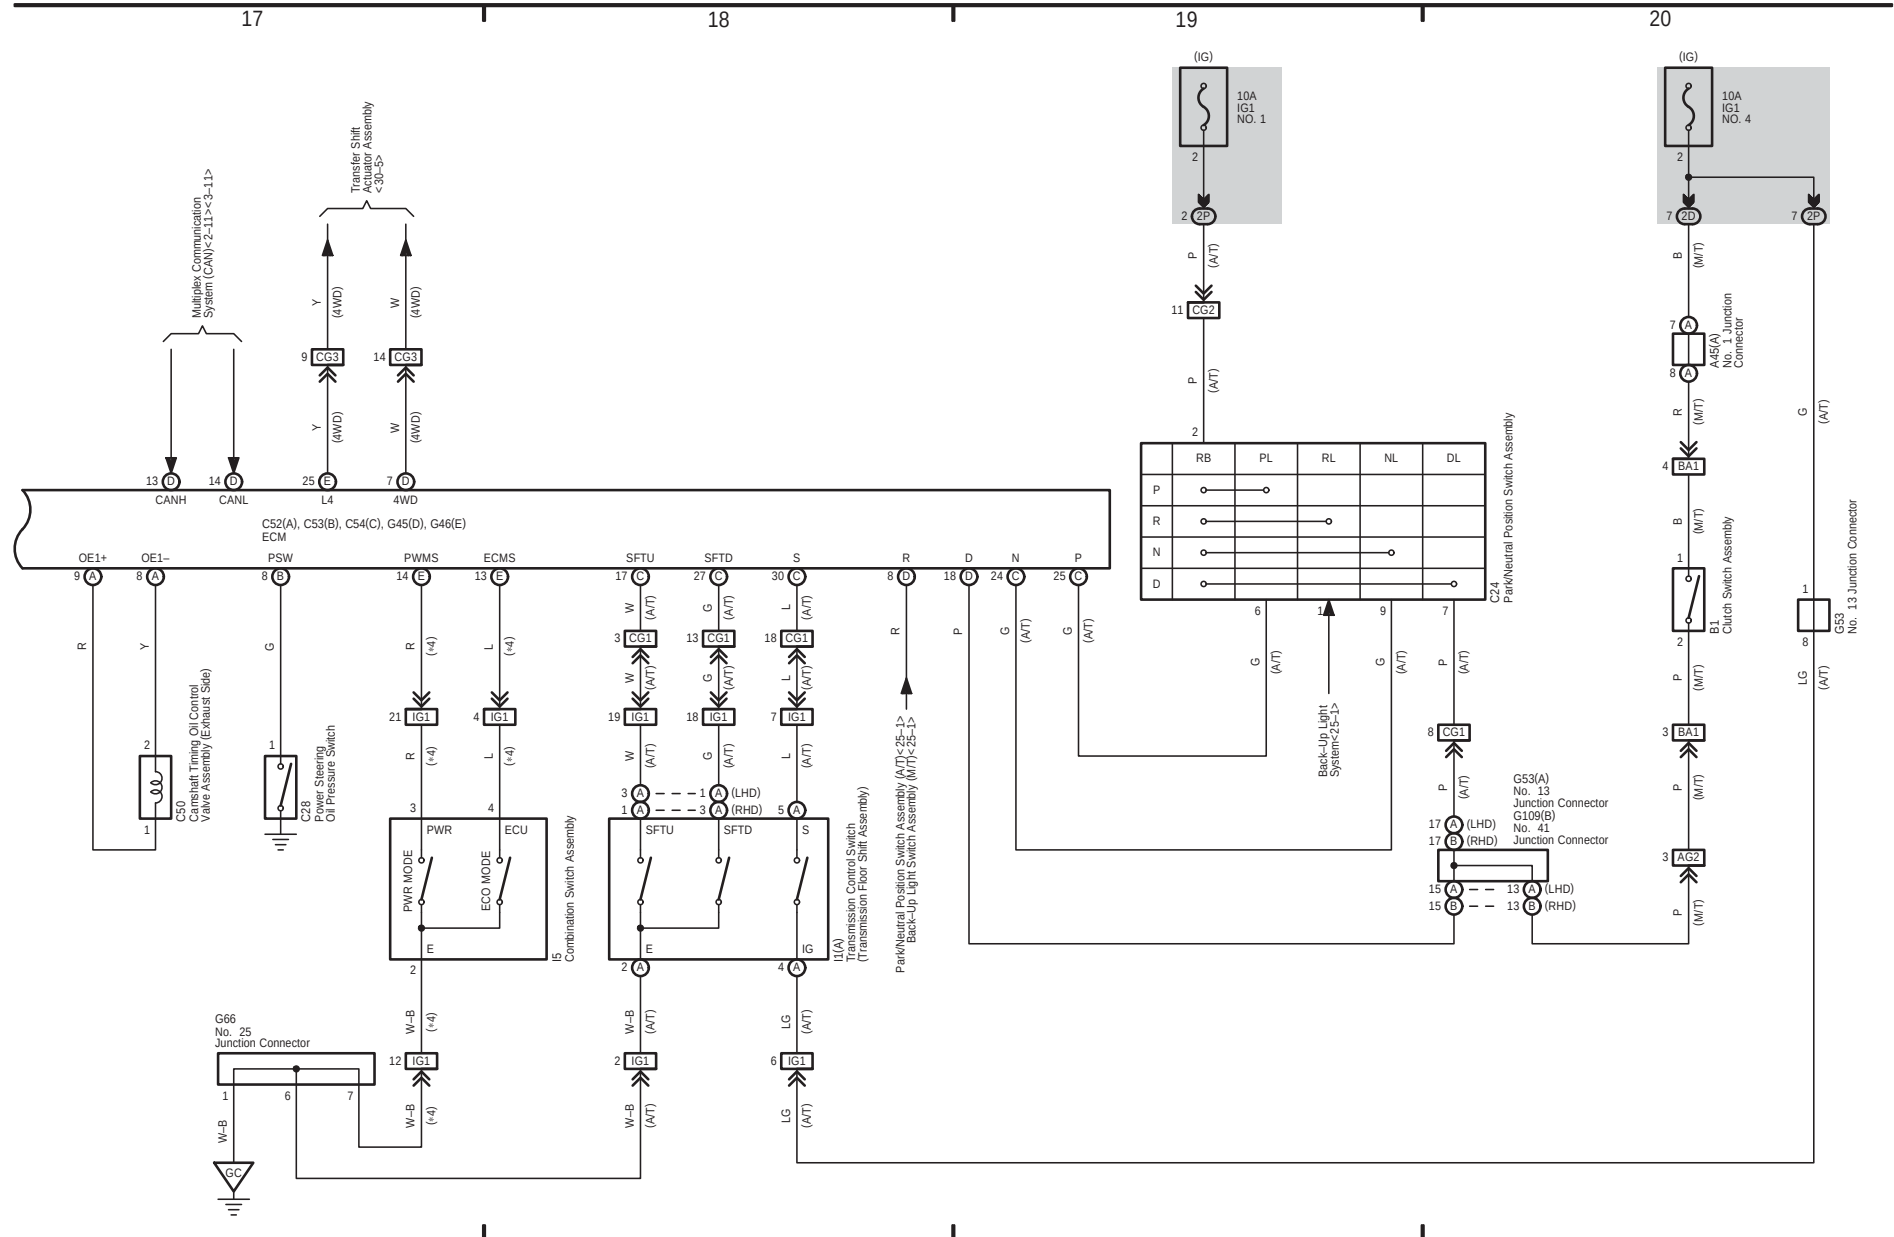

11 HILUX (Cont' d)

ECT and A/T Indicator (2TR-FE)

*10 : w/ TFT Display

