

















Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

* 3:Halogen Type Headlight
* 4:LED Type Headlight

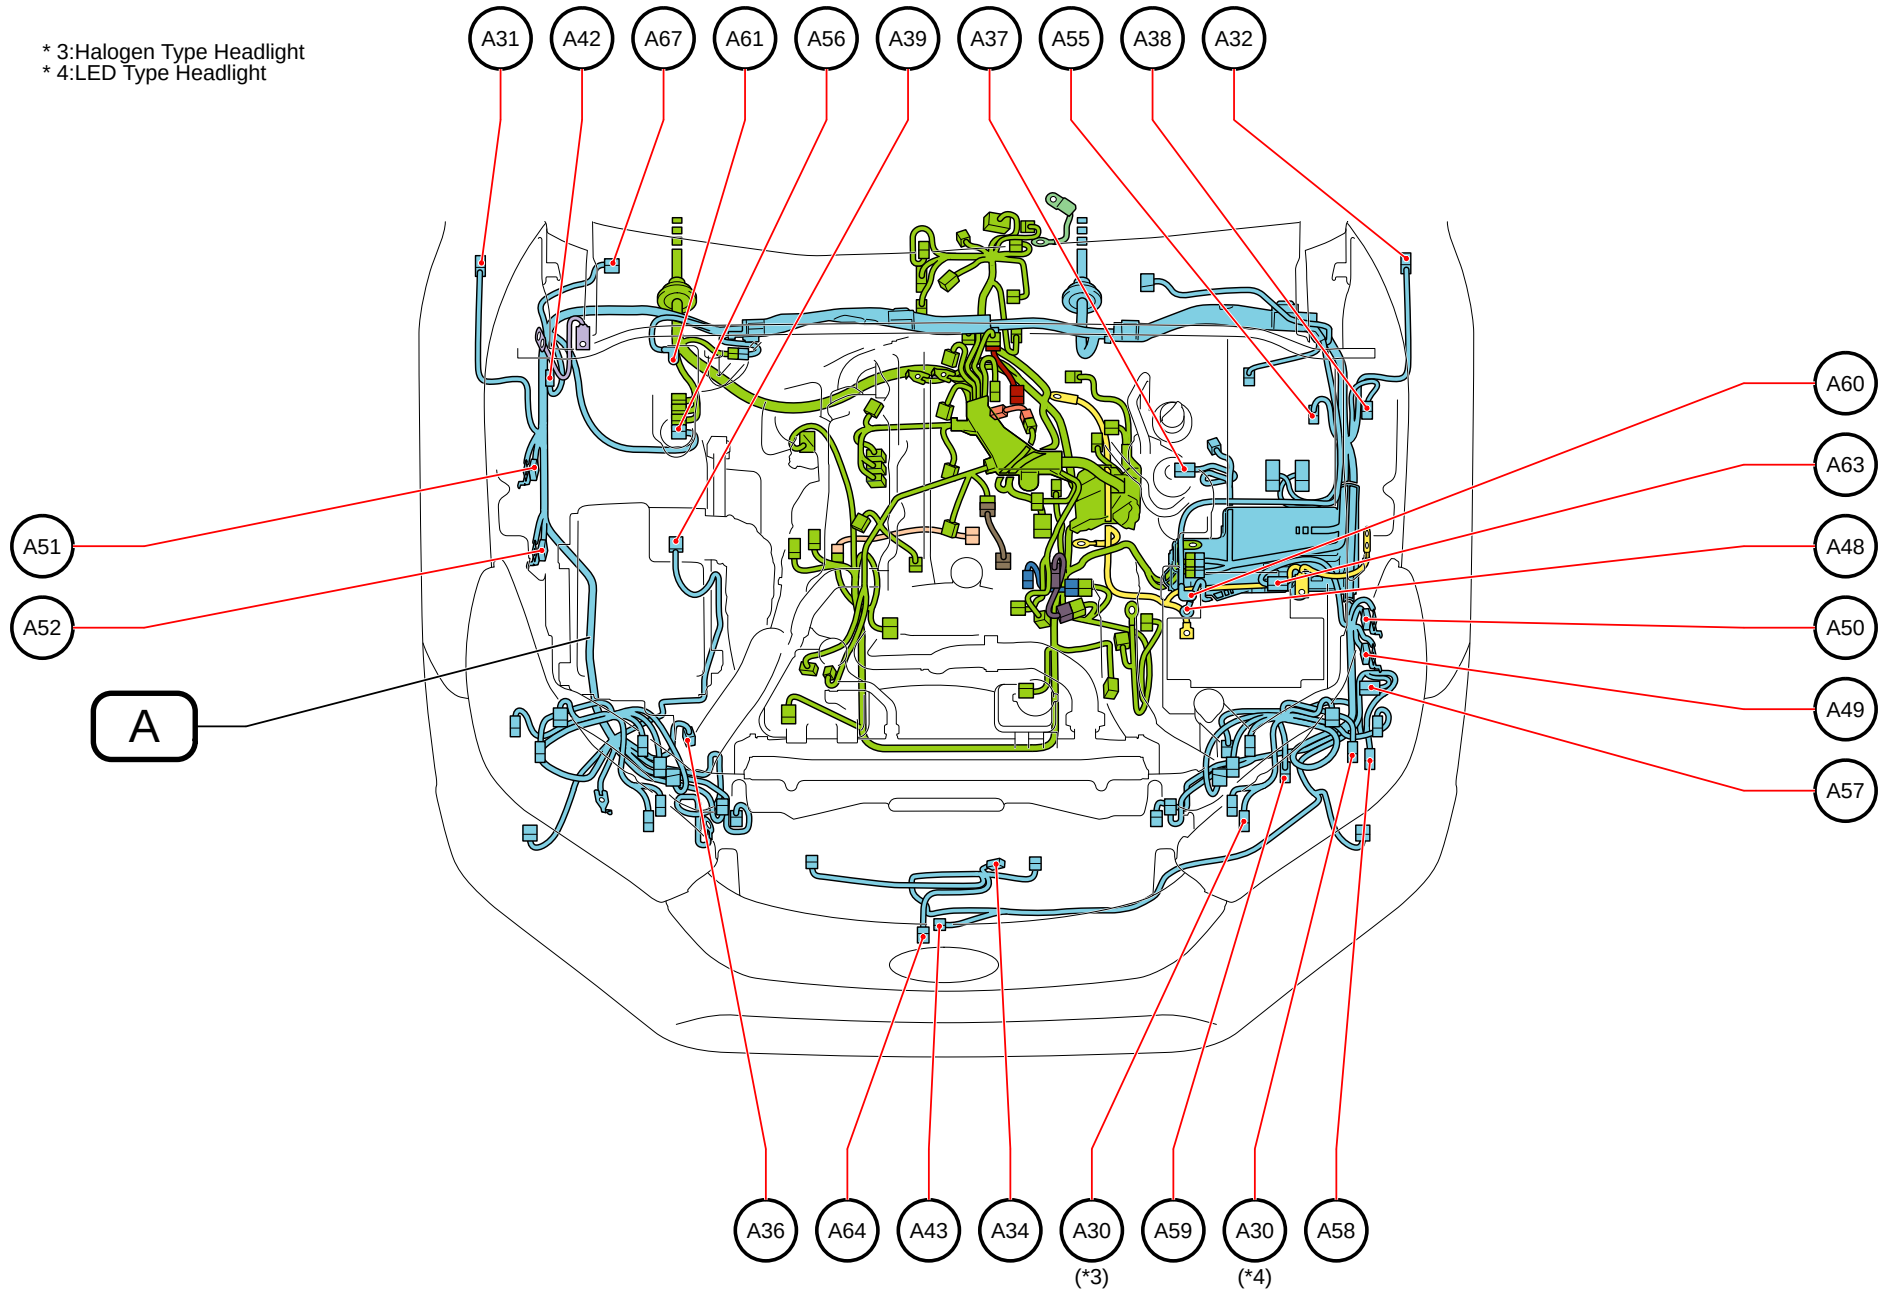


A30	Headlight Assembly LH
A31	Side Turn Signal Light Assembly RH
A32	Side Turn Signal Light Assembly LH
A34	Engine Hood Courtesy Switch (Hood Lock Assembly)
A36	A/C Pressure Switch (A/C Tube & Accessory Assembly)
A37	Fuel Sedimenter Level Warning Switch (Diesel Fuel Filter Assembly)
A38	Wireless Door Lock Buzzer
A39	Intake Mass Air Flow Meter Sub-Assembly
A42	Security Horn Assembly
A43	Ambient Temperature Sensor (Thermistor Assembly)
A48	No. 1 Battery
A49	No. 1 Ground Junction Connector
A50	No. 2 Ground Junction Connector
A51	No. 3 Ground Junction Connector
A52	No. 4 Ground Junction Connector
A55	Clutch Stroke Sensor
A56	Glow Plug Controller
A57	Headlight Cleaner Control Relay
A58	Headlight Cleaner Motor And Pump Assembly
A59	Level Warning Switch Assembly
A60	No. 1 Battery
A61	No. 2 Battery
A63	Battery State Sensor Assembly
A64	Millimeter Wave Radar Sensor Assembly
A67	Windshield Deicer (Windshield Glass)

 
Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

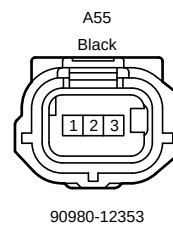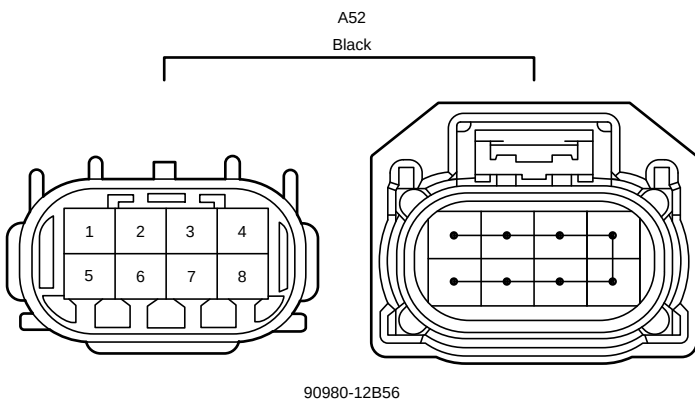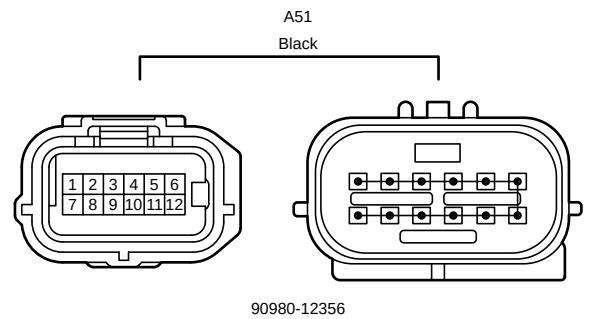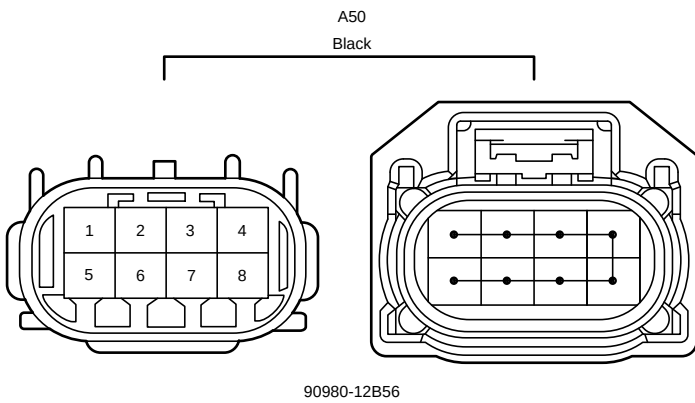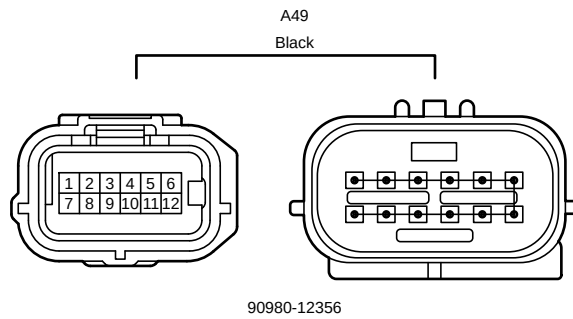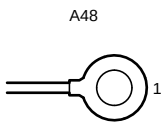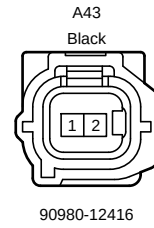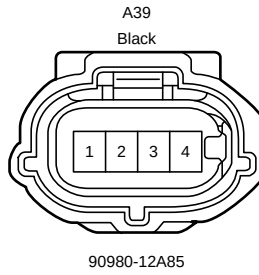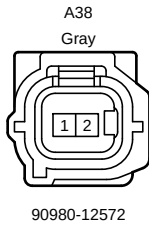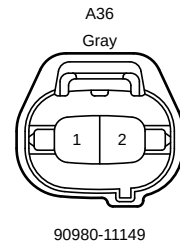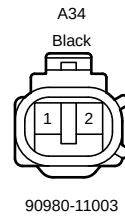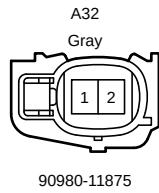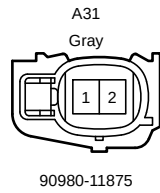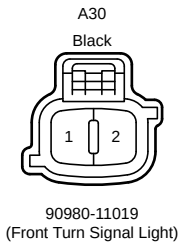


Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

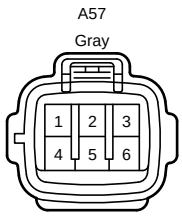




90980-11194

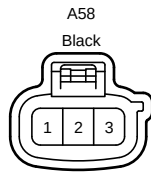


90980-10981

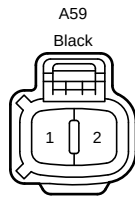

90980-11068

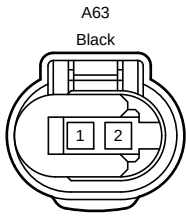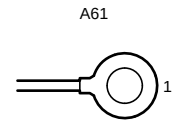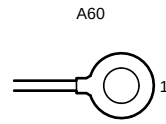

90980-98275

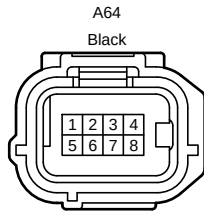

90980-12520



90980-11015