



Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

* 7:5M/T
* 8:6M/T

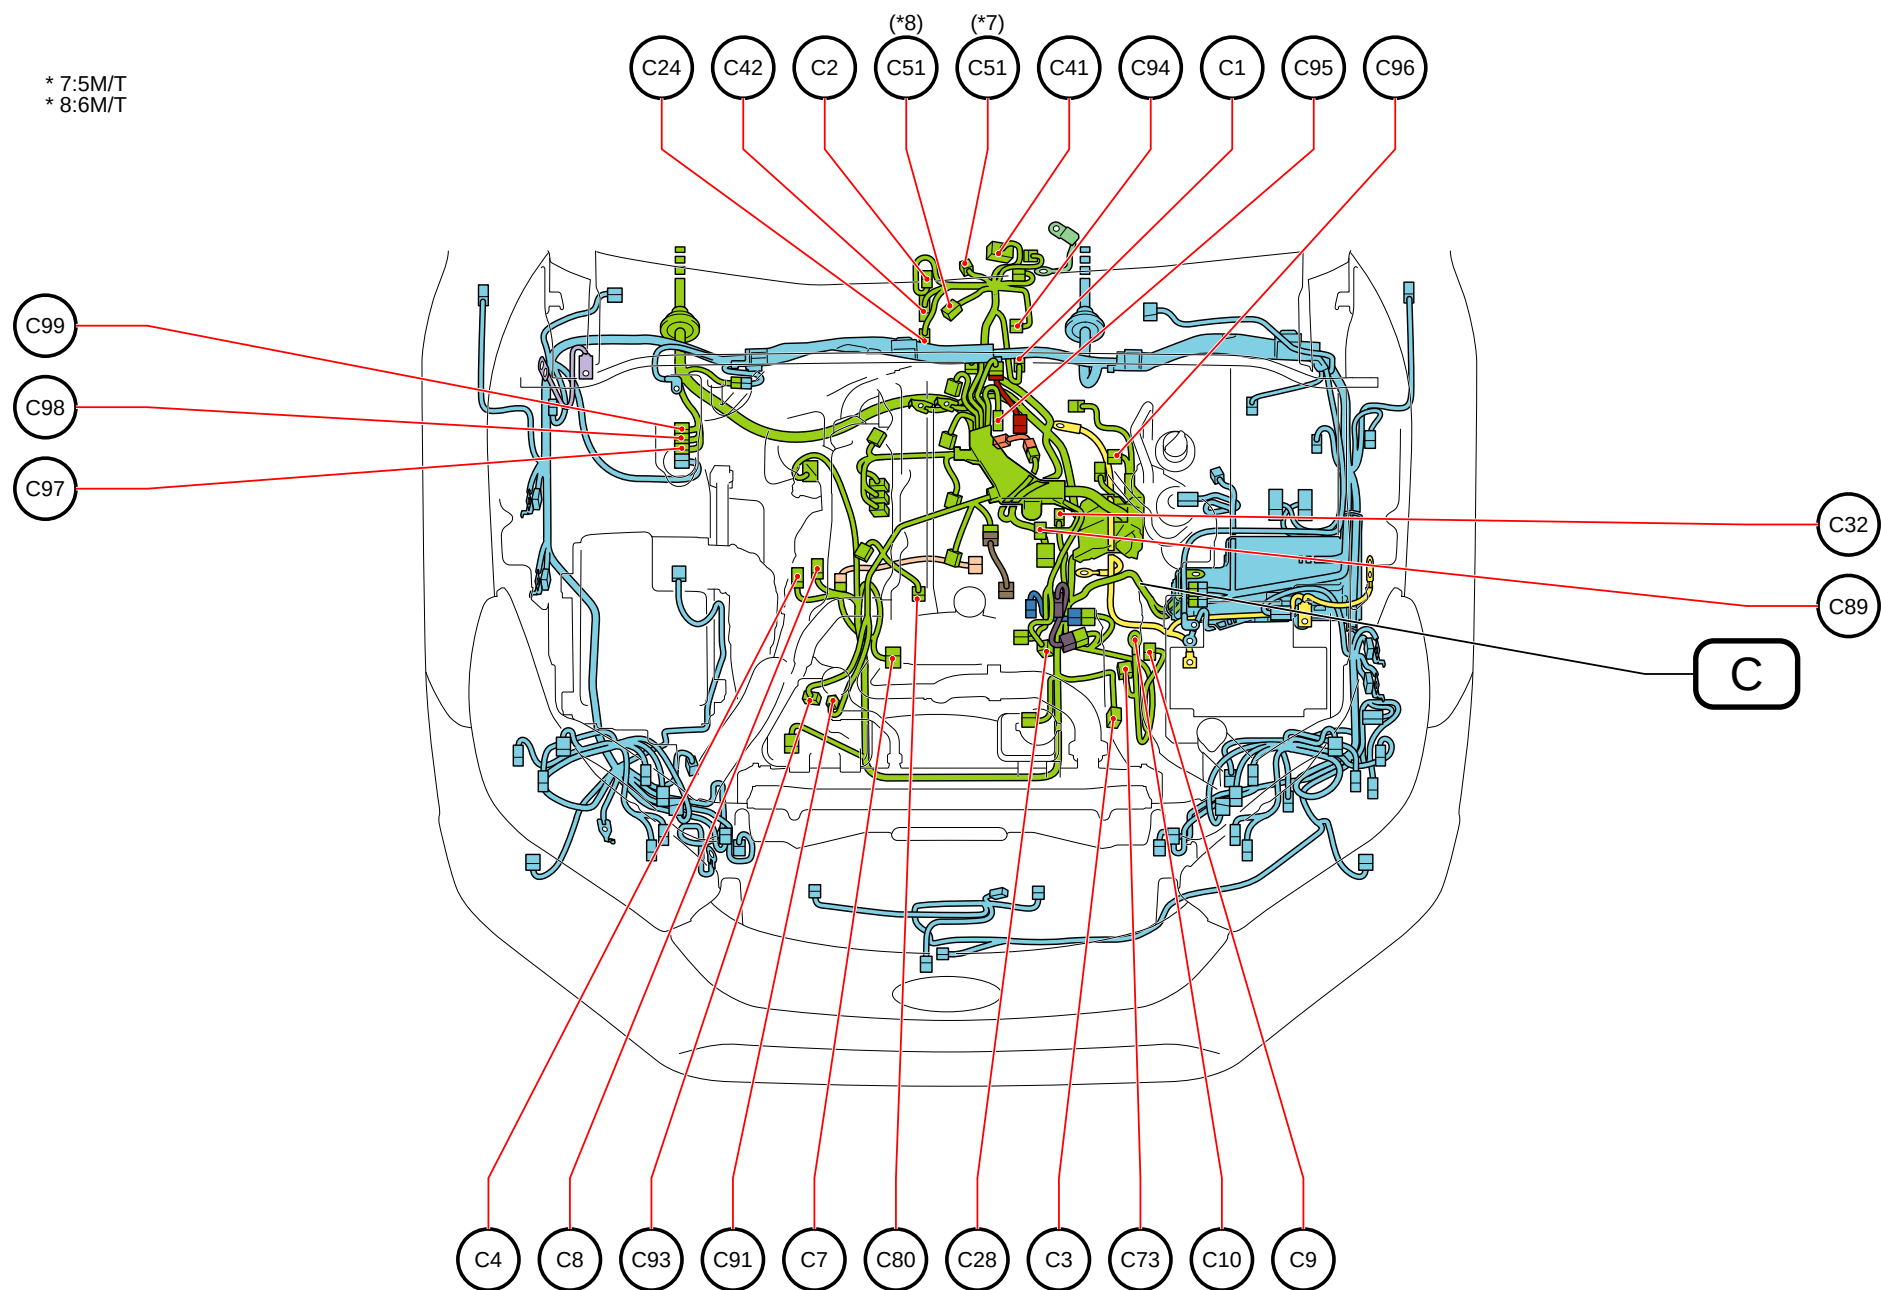


C1	Transmission Revolution Sensor (NT)
C2	Transmission Revolution Sensor (SP2)
C3	Compressor Assembly
C4	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C7	Differential Motor Actuator Assembly
C8	Engine Oil Pressure Switch Assembly
C9	Generator Assembly
C10	Generator Assembly
C24	Park/Neutral Position Switch Assembly
C28	Power Steering Oil Pressure Switch
C32	Starter Assembly
C41	Transfer Shift Actuator Assembly
C42	ECT Solenoid (Transmission Wire)
C51	Back-Up Light Switch Assembly
C73	Intake Air Temperature Sensor
C80	Cam Position Sensor (Crank Position Sensor)
C89	Diesel Turbo Turbo Pressure Sensor
C91	Turbocharger Sub-Assembly
C93	Turbocharger Sub-Assembly
C94	Transmission Revolution Sensor
C95	Electric EGR Control Valve Assembly
C96	No. 1 Vacuum Switching Valve Assembly (for EGR Cooler Bypass Valve)
C97	Glow Plug Controller
C98	Glow Plug Controller
C99	Glow Plug Controller

Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

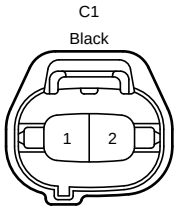

90980-11156

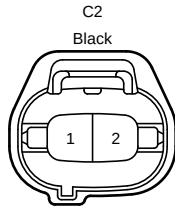


90980-11156




90980-11271




90980-10869

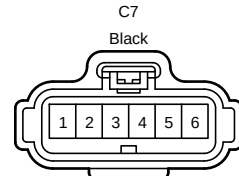



90980-11858

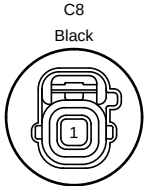


90980-11363

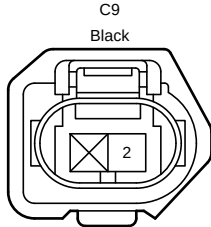


90980-12A88

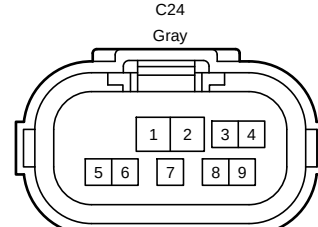 


90980-12362

 


90980-11428

 


90980-11400

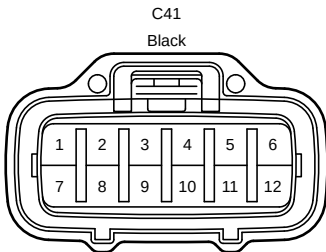


90980-11664

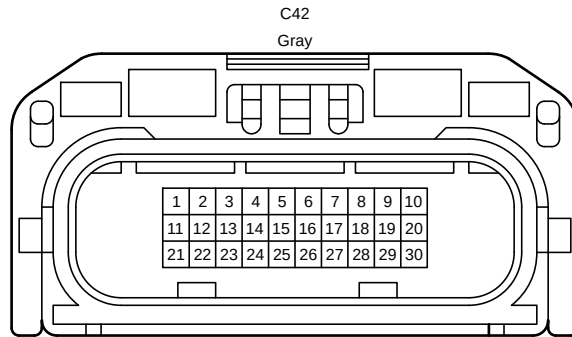


90980-12712

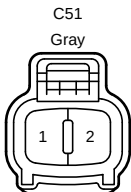


90980-11051

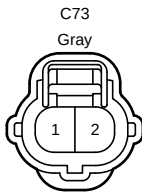


90980-11025

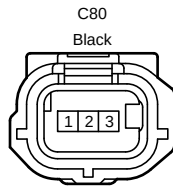

90980-12353

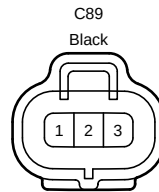


90980-10845

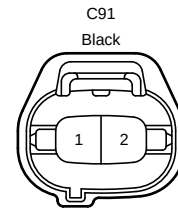


90980-11156




90980-11261

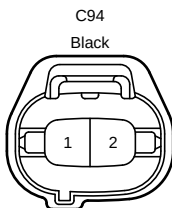


90980-11156

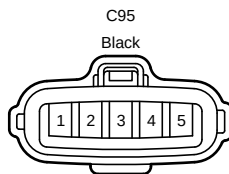

90980-11024

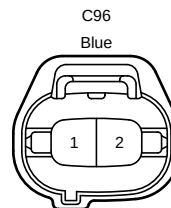

90980-11156

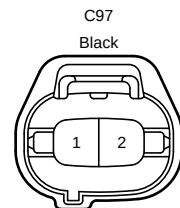

90980-11156

Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

