


Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)

* 9:2WD
* 10:4WD

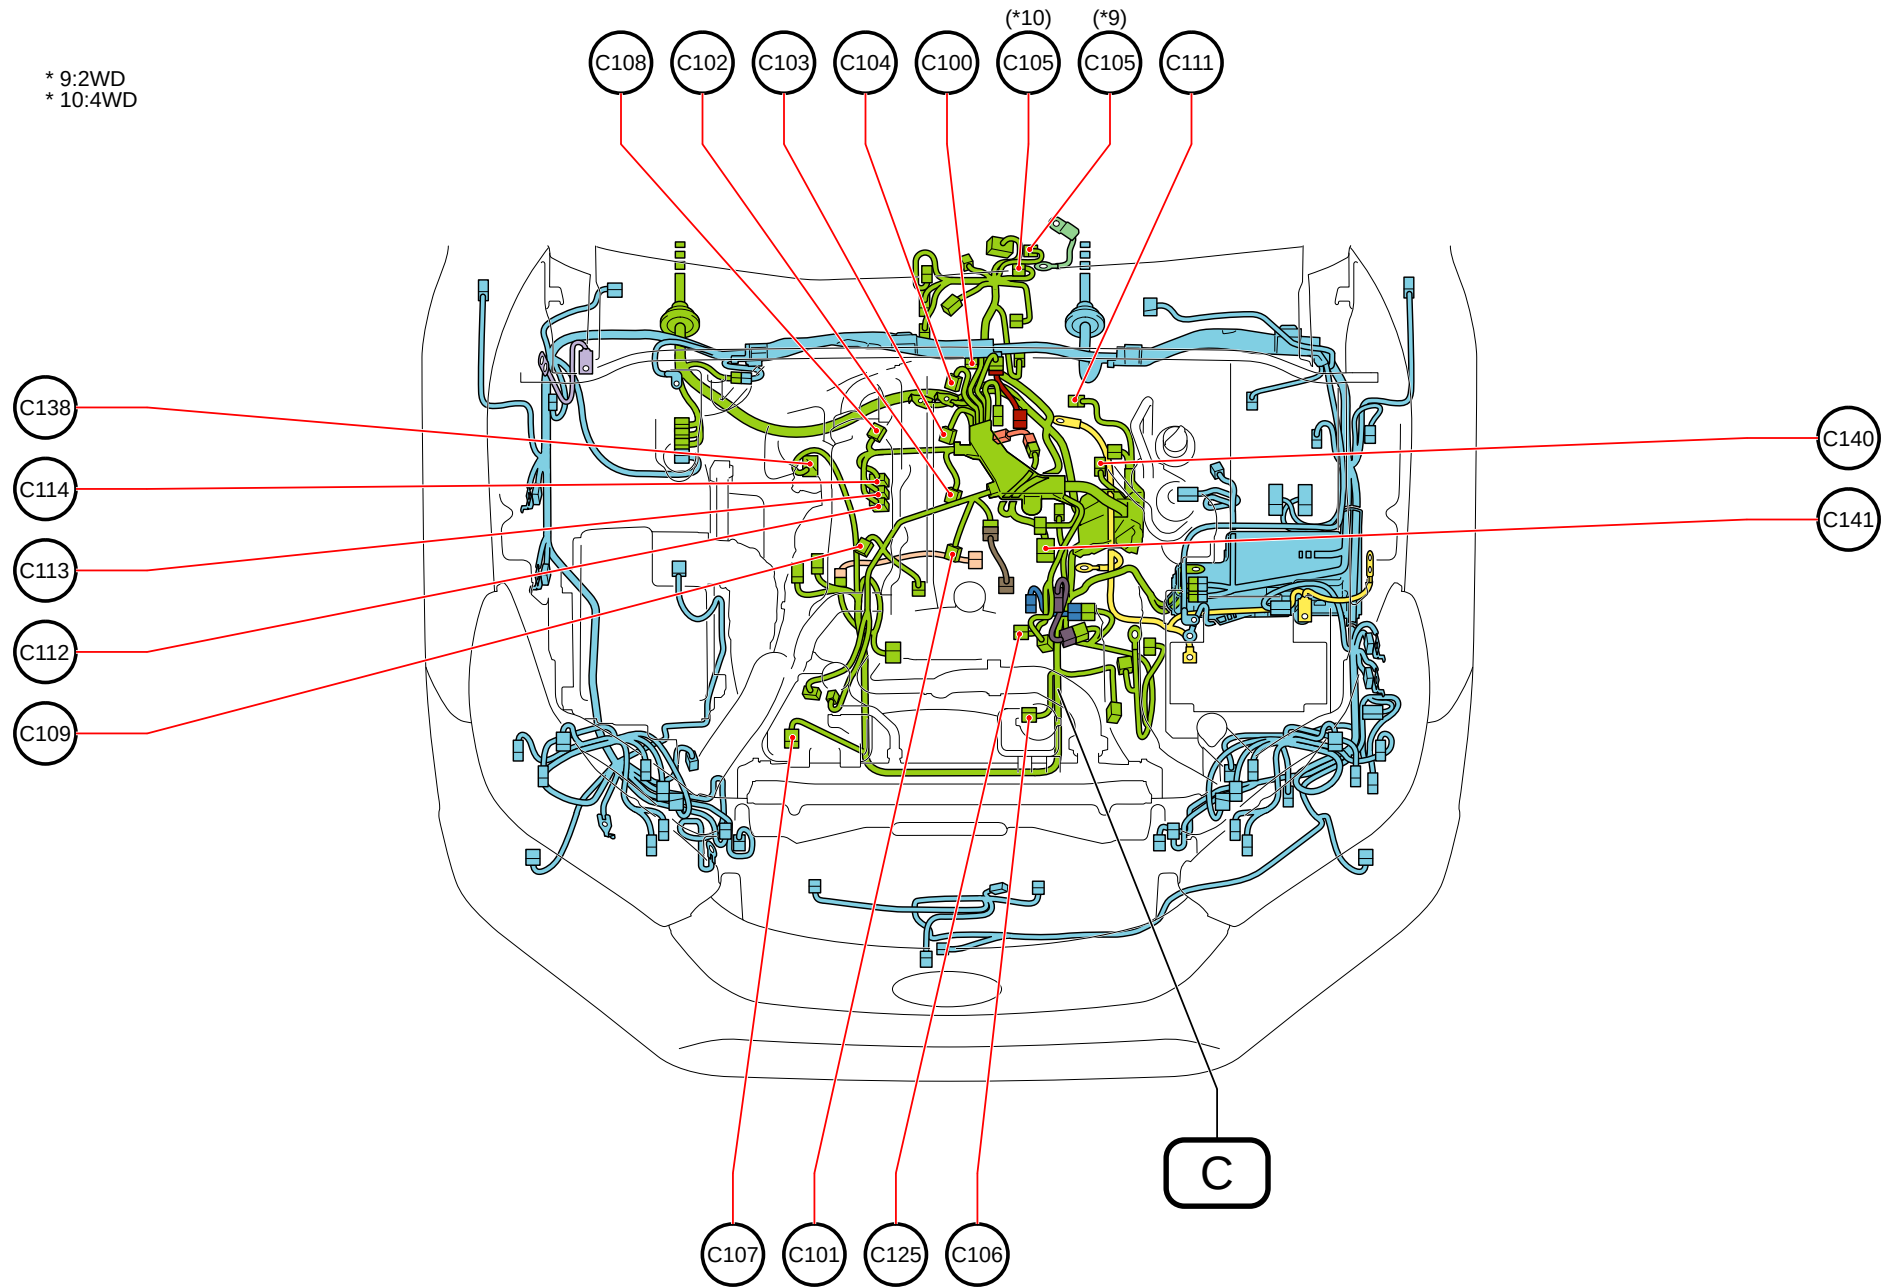


C100 Glow Plug Assembly
C101 Injector Assembly No. 1
C102 Injector Assembly No. 2
C103 Injector Assembly No. 3
C104 Injector Assembly No. 4
C105 Neutral Position Switch
C106 Engine Oil Level Sensor
C107 Viscous Heater with Magnet Clutch Assembly
C108 Differential Pressure Sensor
C109 Exhaust Fuel Addition Injector Assembly
C111 Vacuum Switching Valve (Intake Manifold)
C112 Exhaust Gas Temperature Sensor
C113 No. 2 Exhaust Gas Temperature Sensor
C114 No. 3 Exhaust Gas Temperature Sensor
C125 Diesel Engine Engine Coolant Temperature Sensor
C138 Urea Injector Set
C140 Starter Assembly
C141 Starter Assembly


Position of Parts in Engine Compartment (LHD 1GD-FTV, 2GD-FTV)




90980-10942

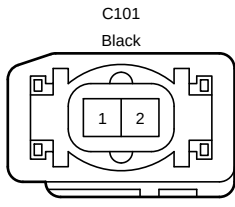


90980-12747

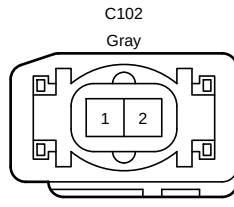


90980-12747

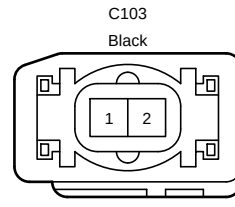


90980-12747

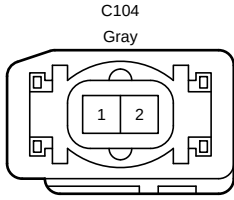

90980-12747

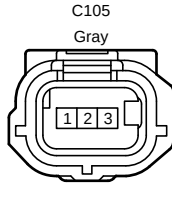


90980-12353

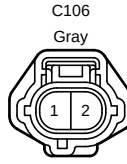


90980-11235




90980-11271

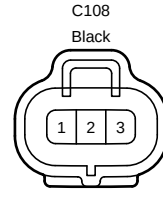


90980-10845

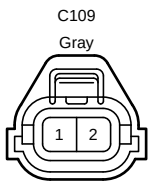

90980-12117

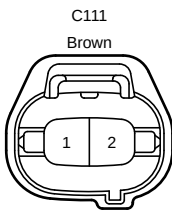

90980-11149

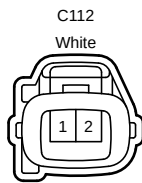

90980-10899




90980-10949



90980-10901




90980-10735

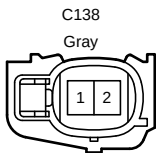

90980-11875



90980-11166

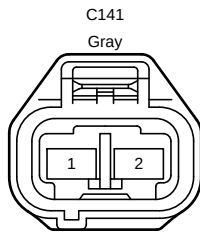

90980-12669