



Position of Parts in Engine Compartment (LHD 1KD-FTV, 2KD-FTV)

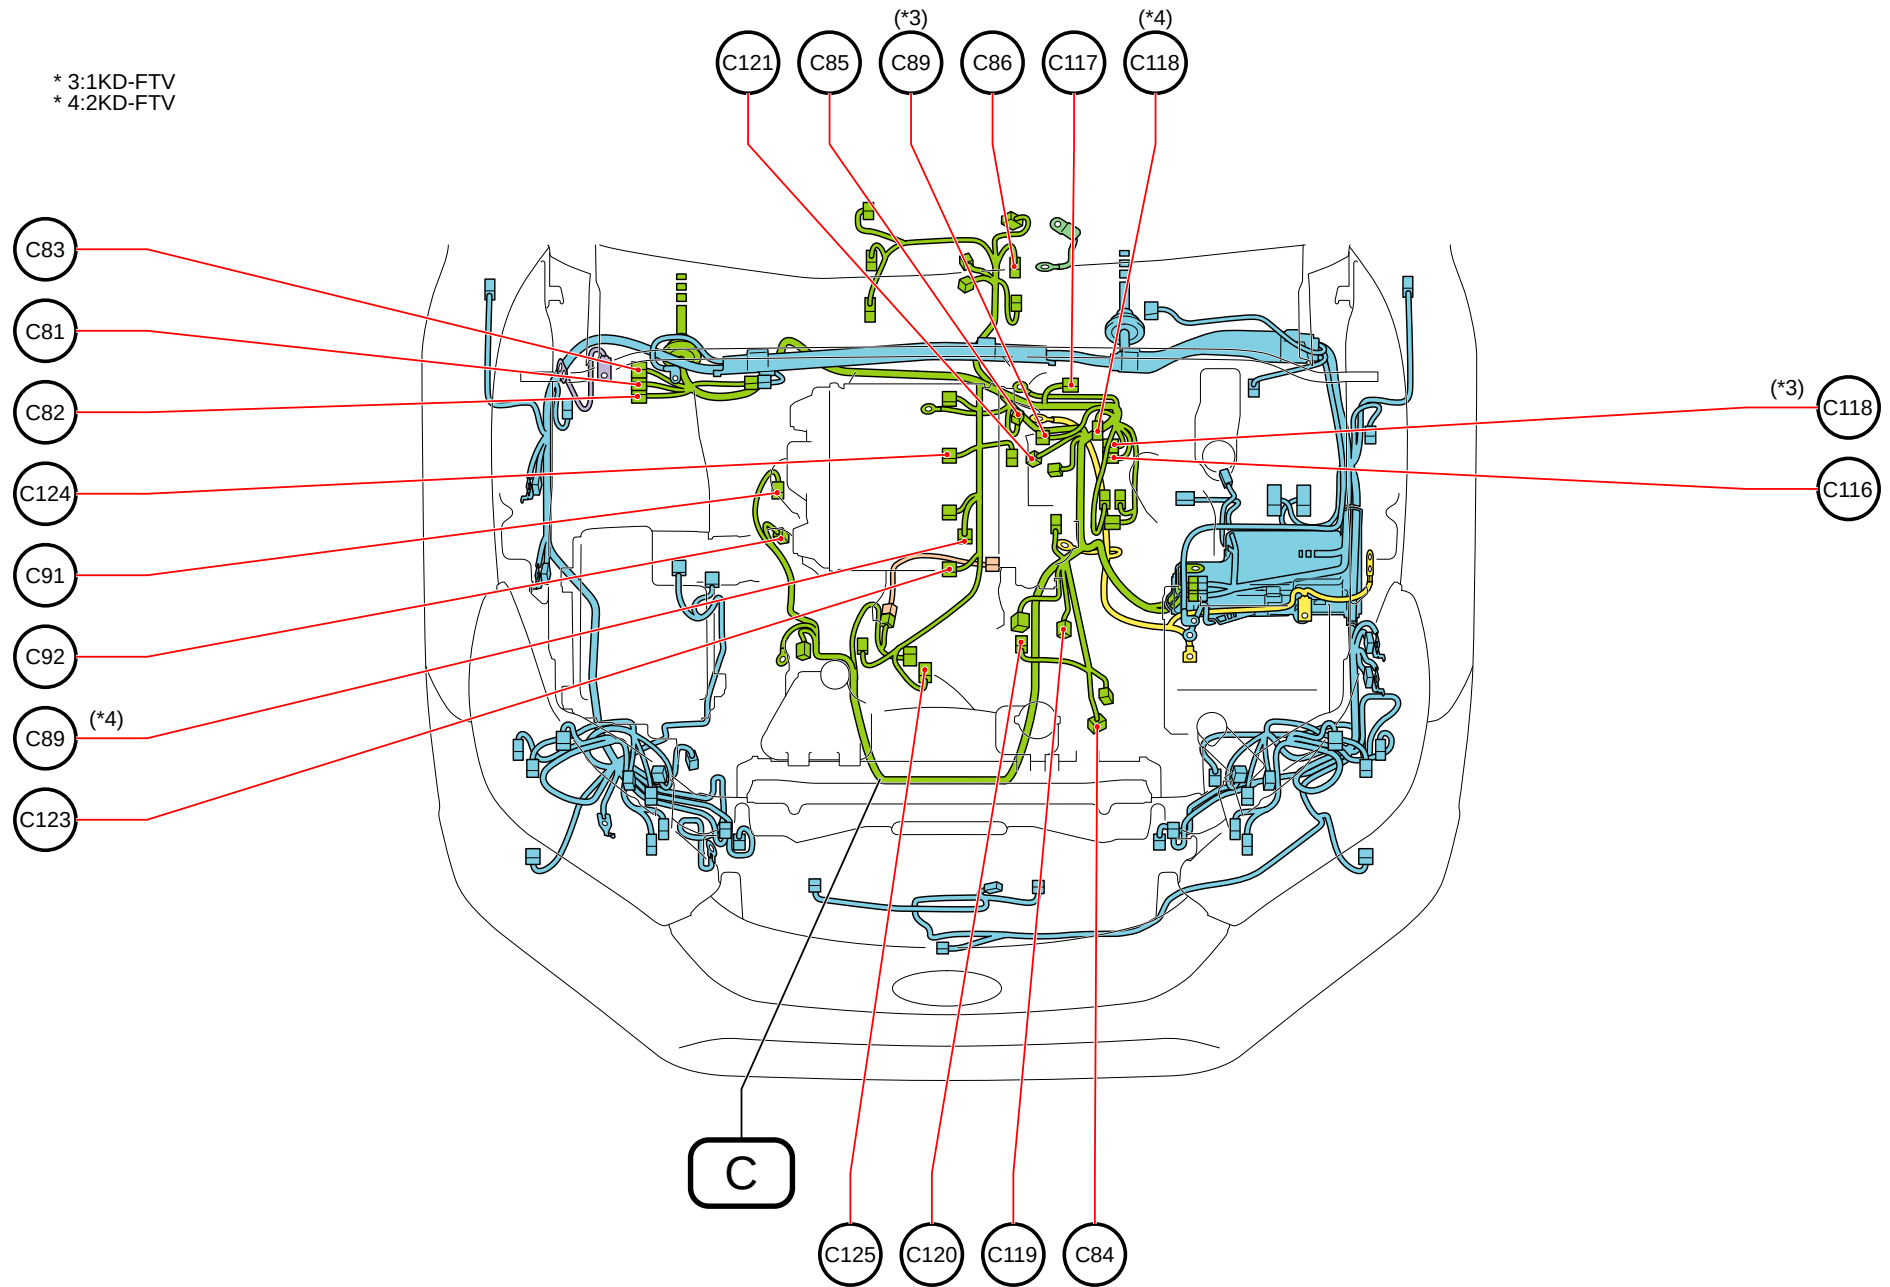


C81 Injector Driver
C82 Injector Driver
C83 Injector Driver
C84 Crank Position Sensor
C85 Vacuum Switching Valve (Intake Manifold)
C86 ECT Solenoid (Transmission Wire)
C89 Diesel Turbo Turbo Pressure Sensor
C91 Turbocharger Sub-Assembly
C92 Turbocharger Sub-Assembly
C116 Vacuum Switching Valve (for EGR Cut)
C117 EGR Valve Position Sensor
C118 Electric EGR Control Valve Assembly
C119 Suction Control Valve Kit
C120 Fuel Pressure Sensor (Common Rail Assembly)
C121 Pressure Discharge Valve Assembly (Common Rail Assembly)
C123 Fuel Injector Assembly No. 1
C124 Fuel Injector Assembly No. 3
C125 Diesel Engine Engine Coolant Temperature Sensor


Position of Parts in Engine Compartment (LHD 1KD-FTV, 2KD-FTV)

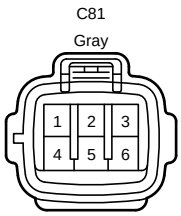


90980-11194

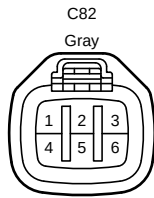


90980-11144

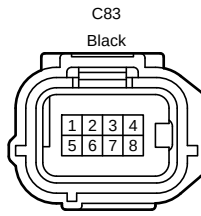


90980-12520

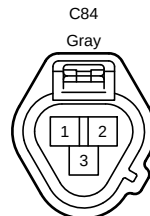


90980-11016

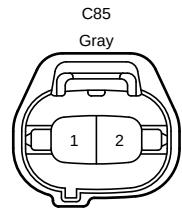


90980-11156

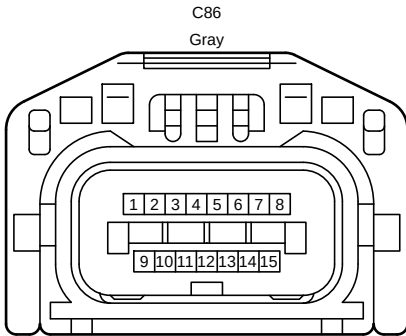


90980-12293

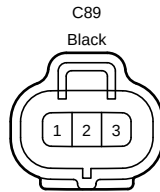


90980-10845

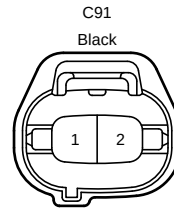


90980-11156

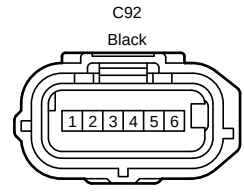


90980-12303

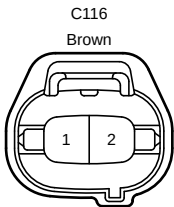

90980-11149

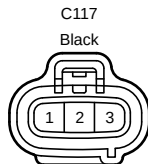

90980-11143

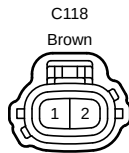

90980-11162




90980-11285




90980-11194



90980-11285

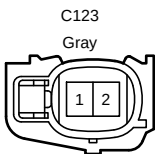

90980-11875

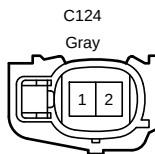

90980-11875



90980-10735