


Position of Parts in Engine Compartment (5L-E)

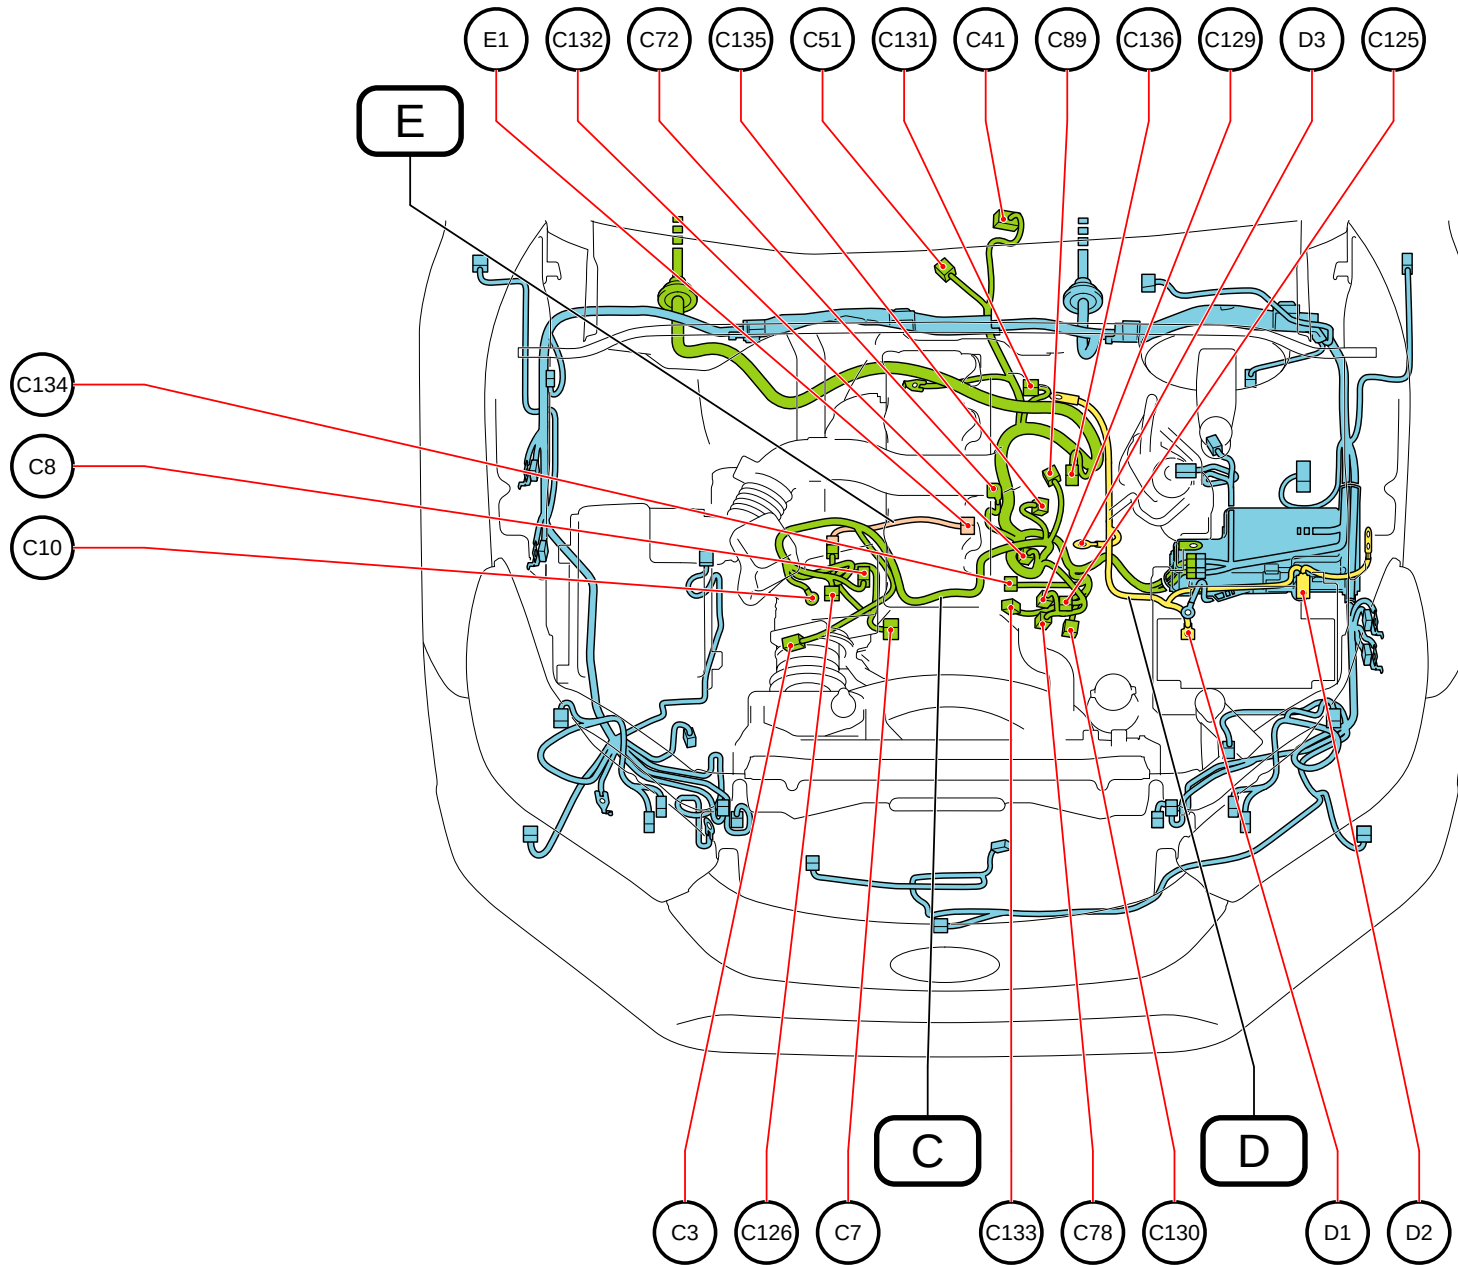

C3	Compressor Assembly
C7	Differential Motor Actuator Assembly
C8	Engine Oil Pressure Switch Assembly
C10	Generator Assembly
C41	Transfer Shift Actuator Assembly
C51	Back-Up Light Switch Assembly
C72	Glow Plug Assembly
C78	Fuel Temperature Sensor
C89	Diesel Turbo Turbo Pressure Sensor
C125	Diesel Engine Engine Coolant Temperature Sensor
C126	Generator Assembly
C129	Crank Position Sensor
C130	Injection or Supply Pump Assembly
C131	Starter Assembly
C132	Spill Control Valve
C133	Timing Control Valve Assembly
C134	Cam Position Sensor
C135	Throttle with Motor Body Assembly
C136	Throttle Open Switch (Venturi Assembly)
D1	No. 1 Battery
D2	No. 1 Battery
D3	Starter Assembly
E1	Oil Temperature Sensor

Position of Parts in Engine Compartment (5L-E)

