



Position of Parts in Body (LHD Extra Cab)

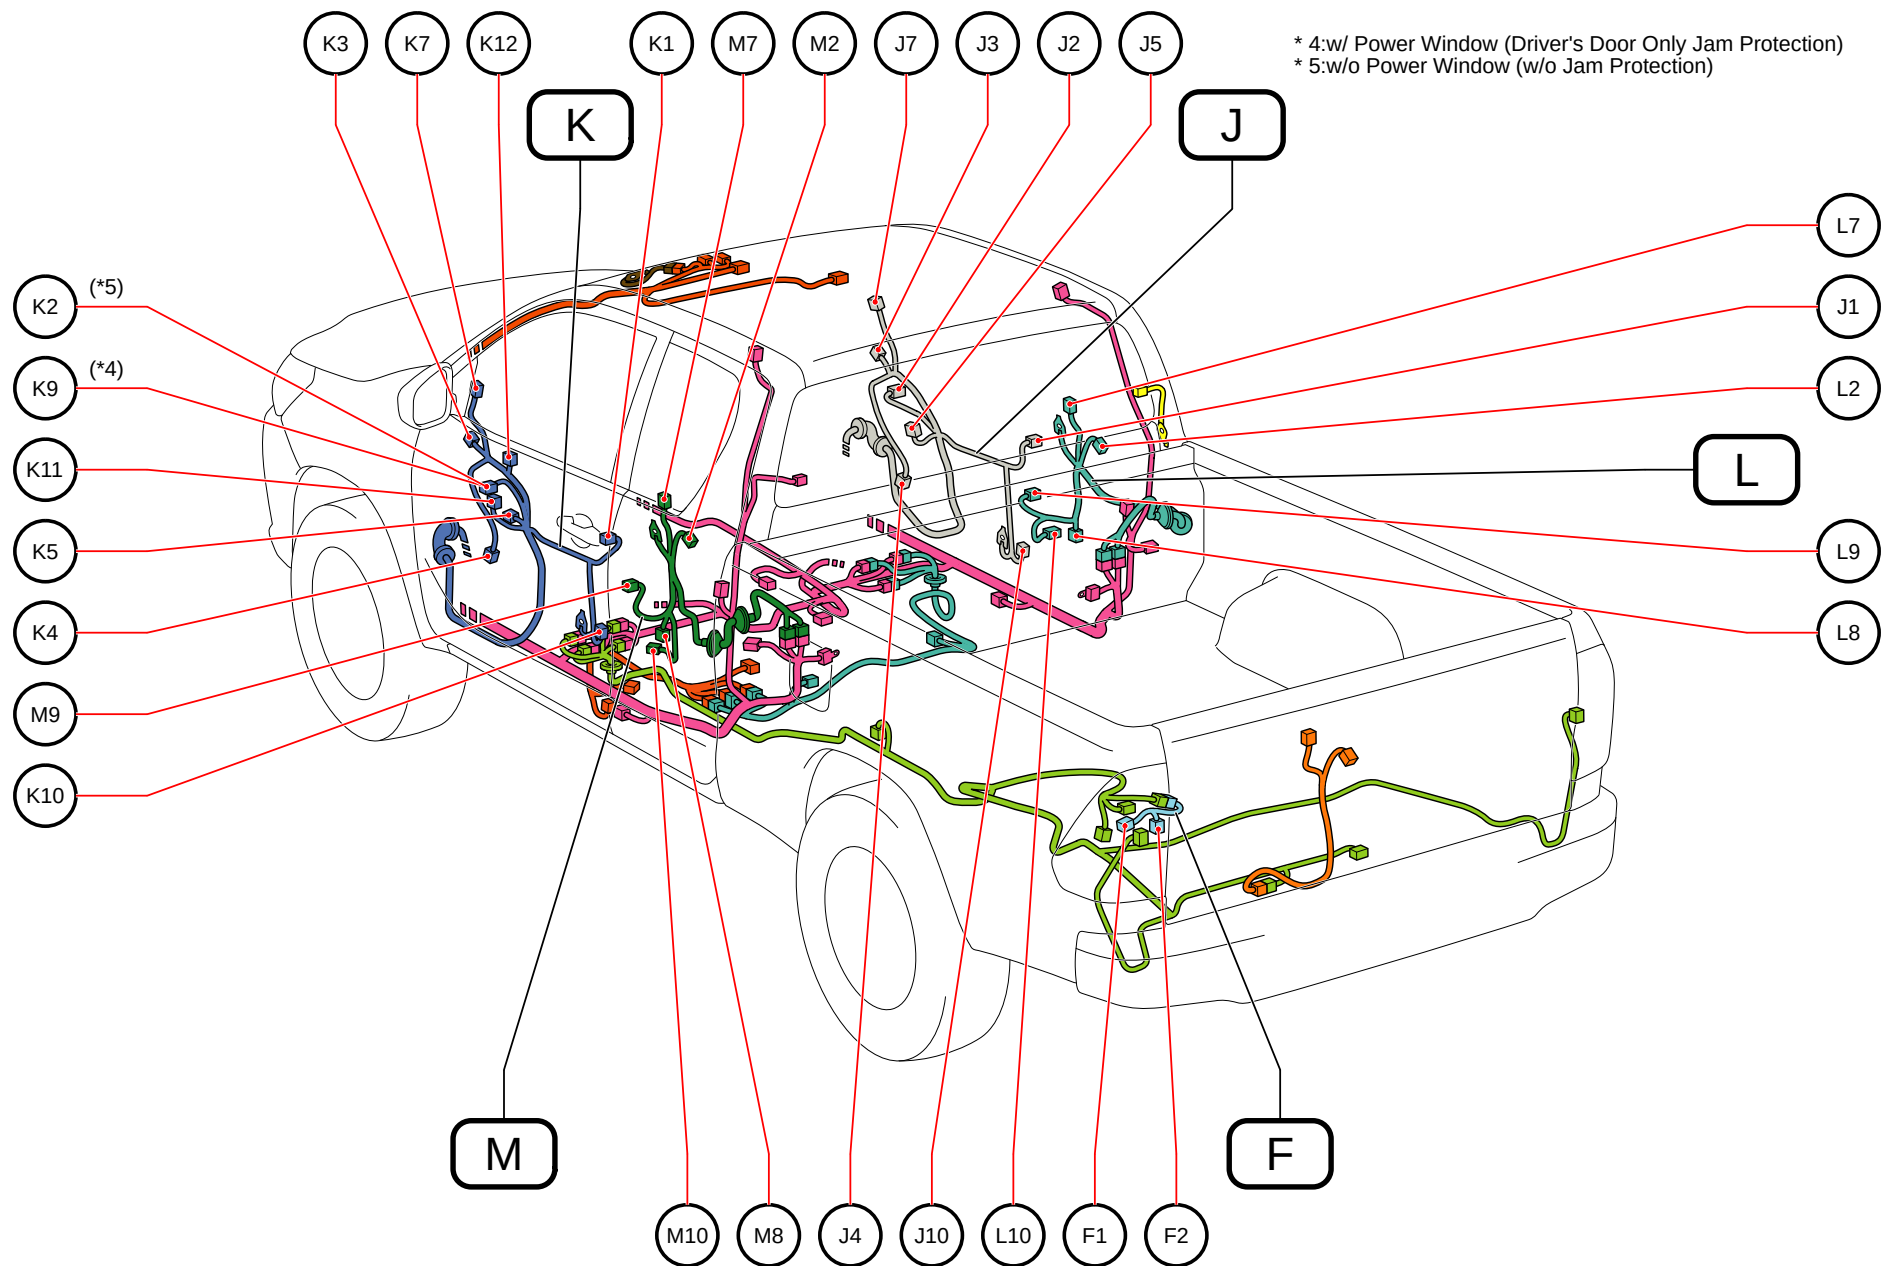

F1	Differential Lock Coil
F2	No. 1 Transfer Indicator Switch
J1	Front Door Lock Assembly RH
J2	Front Power Window Regulator Motor Assembly RH
J3	Outer Rear View Mirror Assembly RH
J4	Front No. 1 Speaker Assembly RH
J5	Front Power Window Regulator Switch Assembly RH
J7	Front No. 2 Speaker Assembly RH
J10	Door Side Airbag Sensor RH
K1	Front Door Lock Assembly LH
K2	Front Power Window Regulator Motor Assembly LH
K3	Outer Rear View Mirror Assembly LH
K4	Front No. 1 Speaker Assembly LH
K5	Power Window Regulator Master Switch Assembly
K7	Front No. 2 Speaker Assembly LH
K9	Front Power Window Regulator Motor Assembly LH
K10	Door Side Airbag Sensor LH
K11	Outer Mirror Switch Assembly
K12	No. 45 Junction Connector
L2	Rear Speaker Assembly RH
L7	Upper Access Panel Lock Assembly RH
L8	Lower Access Panel Lock Assembly RH
L9	Front Door Courtesy Light Switch Assembly RH
L10	Front Seat Outer Belt Assembly RH
M2	Rear Speaker Assembly LH
M7	Upper Access Panel Lock Assembly LH
M8	Lower Access Panel Lock Assembly LH
M9	Front Door Courtesy Light Switch Assembly LH
M10	Front Seat Outer Belt Assembly LH


Position of Parts in Body (LHD Extra Cab)

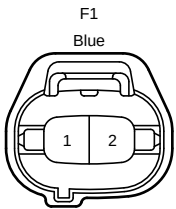


90980-11156




90980-11162

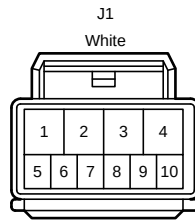


90980-12226

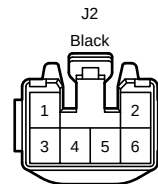


90980-10797

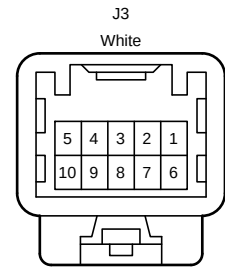


90980-12367

 


90980-11723

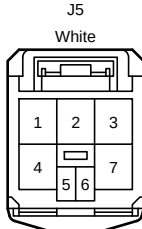


90980-12358

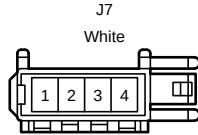


90980-12304

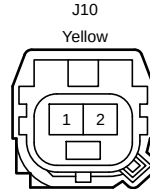


90980-12490

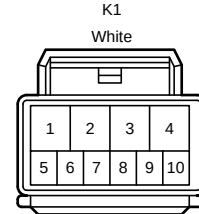

90980-12226

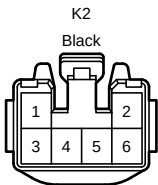


90980-10797

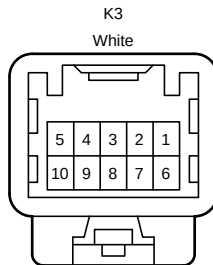


90980-12367




90980-11723

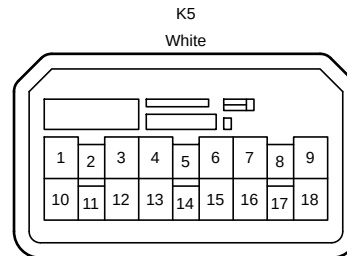


90980-12122

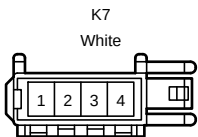


90980-12304

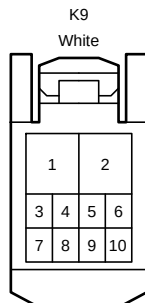


90980-12328

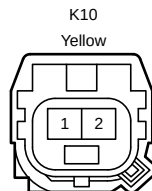


90980-12490

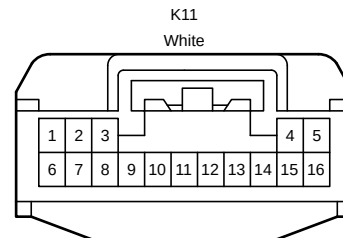


90980-12423

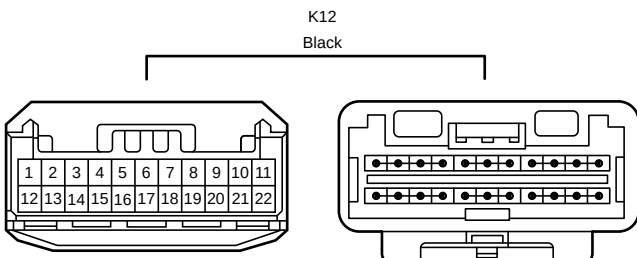


90980-12B54

 

90980-11723

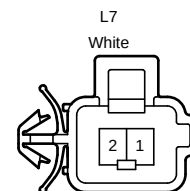

90980-11299

 

90980-11918

Position of Parts in Body (LHD Extra Cab)

