

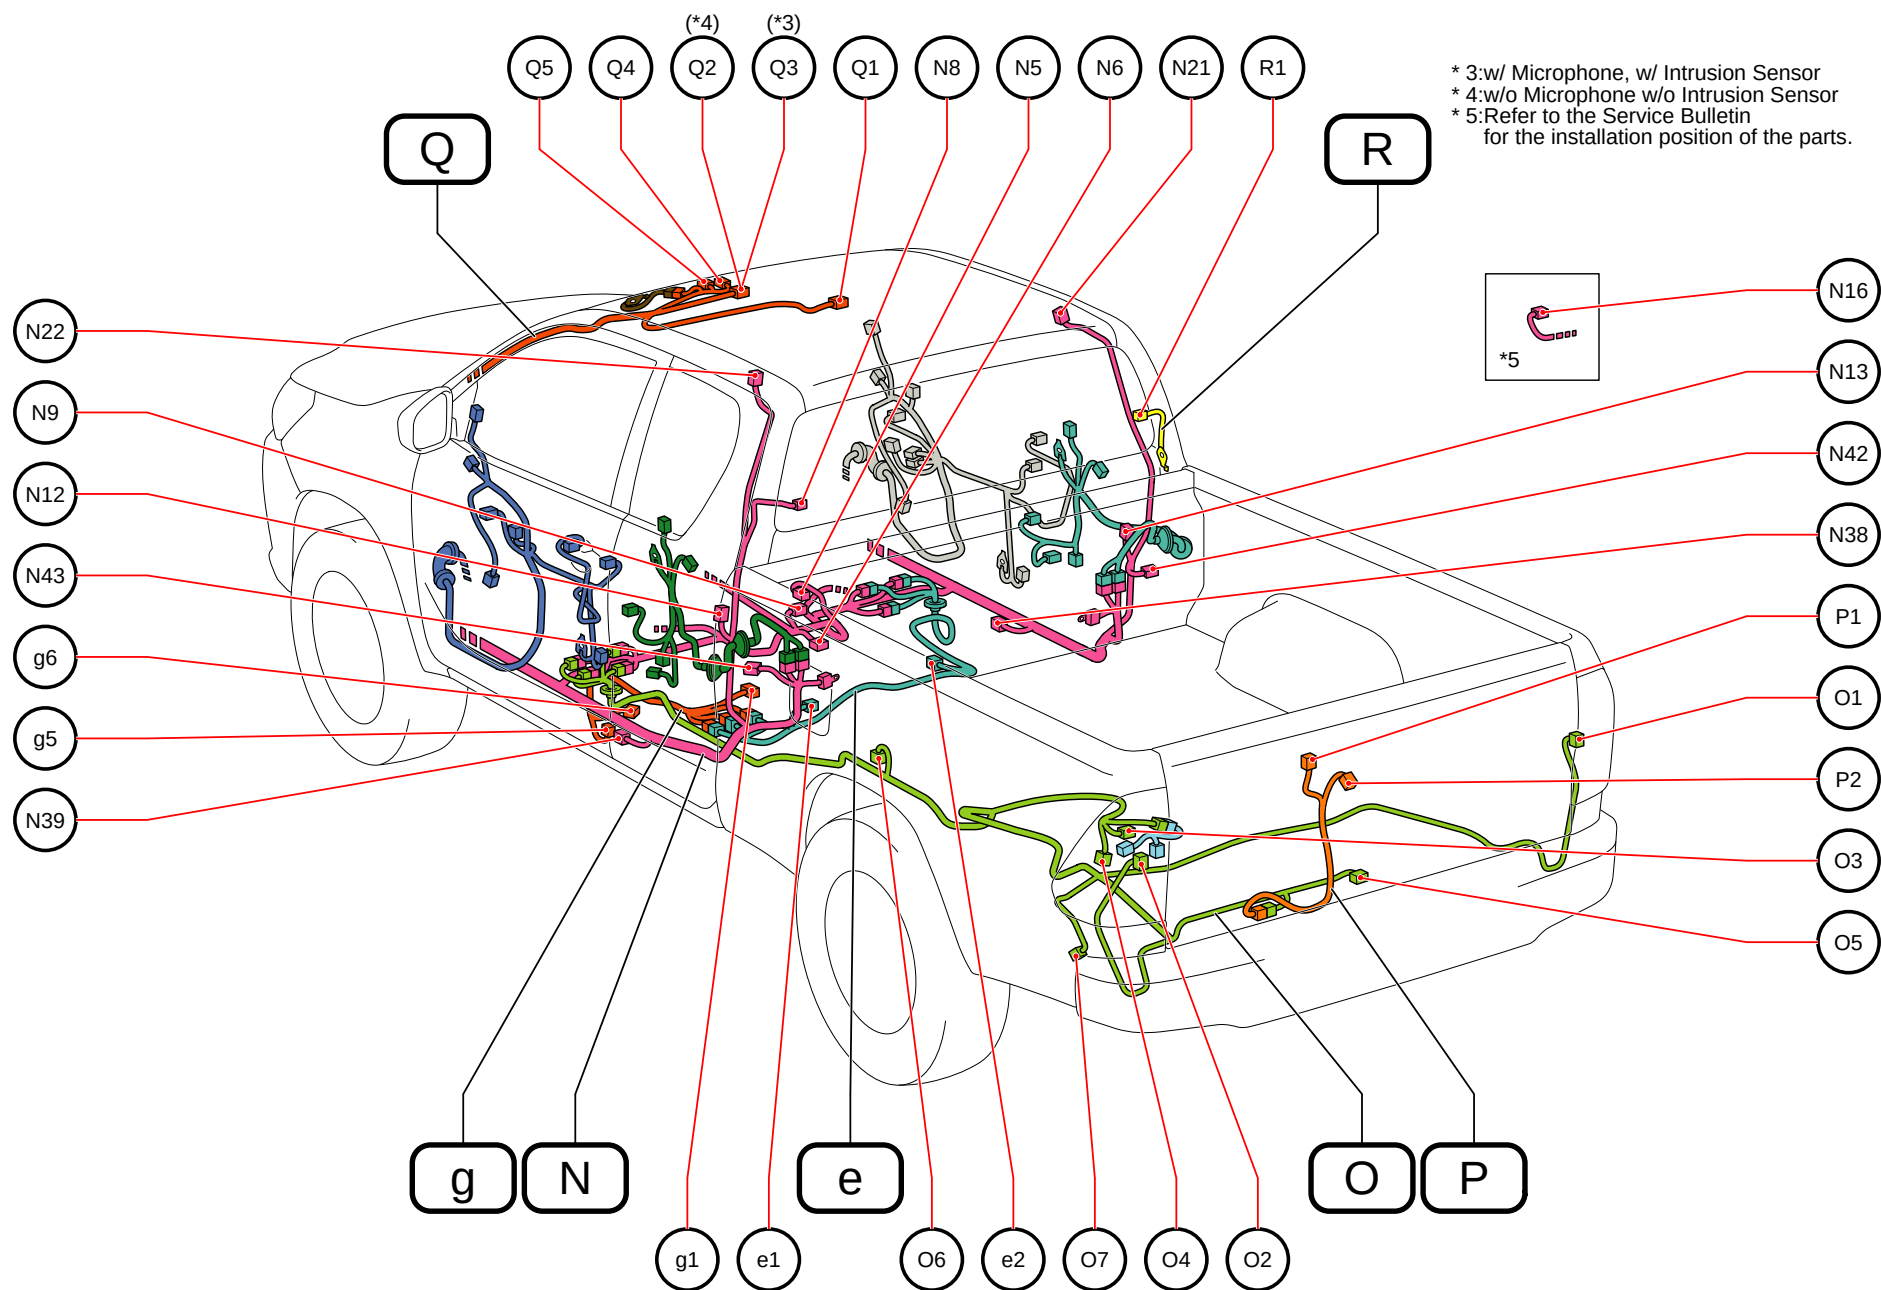
 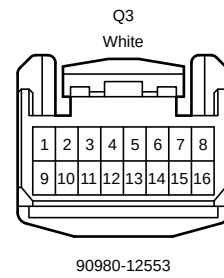
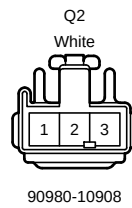

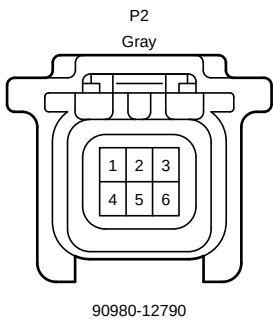
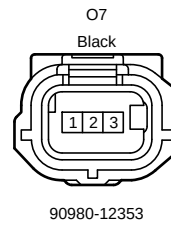
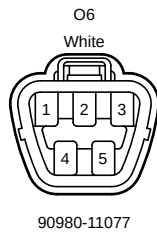
 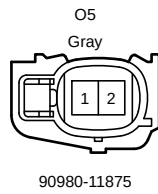
 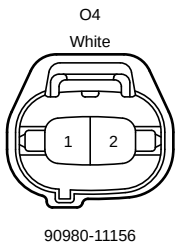


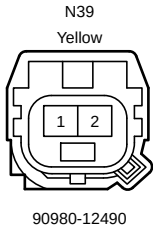
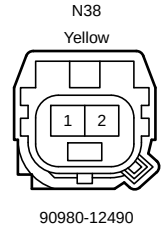
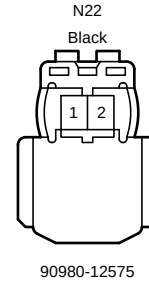
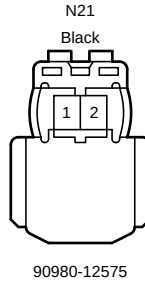
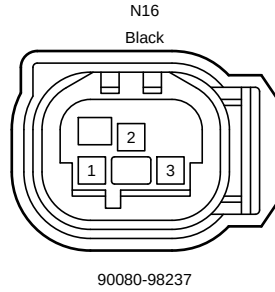
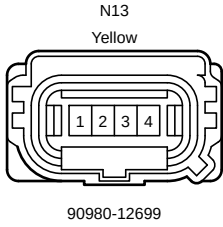
 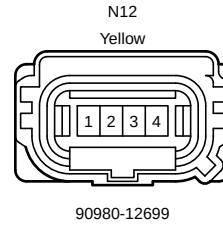
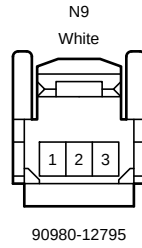


Position of Parts in Body (RHD Extra Cab)




N5	Parking Brake Switch Assembly
N6	Deceleration Sensor
N8	Rear Window Defogger (Back Window Assembly)
N9	No. 2 Indoor Electrical Key Antenna Assembly
N12	Side Airbag Sensor Assembly LH
N13	Side Airbag Sensor Assembly RH
N16	Theft Warning Siren Assembly
N21	Curtain Shield Airbag Assembly RH
N22	Curtain Shield Airbag Assembly LH
N38	Front Floor Side Airbag Sensor RH
N39	Front Floor Side Airbag Sensor LH
N42	Rear No. 1 Seat Outer Belt Assembly RH
N43	Rear No. 1 Seat Outer Belt Assembly LH
O1	Rear Combination Light Assembly RH
O2	Rear Combination Light Assembly LH
O3	Rear Speed Sensor RH
O4	Rear Speed Sensor LH
O5	License Plate Light Assembly
O6	Fuel Sender Gage Assembly
O7	Rear Height Control Sensor Sub-Assembly LH
P1	Center Stop Light Assembly
P2	Rear Television Camera Assembly
Q1	No. 1 Room Light Assembly
Q2	Map Light Assembly
Q3	Map Light Assembly
Q4	Forward Recognition Camera
Q5	Pre-Collision Safety City Heater (Forward Recognition Hood)
R1	Rear Window Defogger (Back Window Assembly)
e1	Nitrogen Oxides Sensor Assembly
e2	No. 4 Exhaust Gas Temperature Sensor
g1	Urea Pump Control ECU
g5	Urea Tube with Heater Assembly
g6	Urea Pump


Position of Parts in Body (RHD Extra Cab)

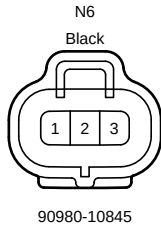


Position of Parts in Body (RHD Extra Cab)

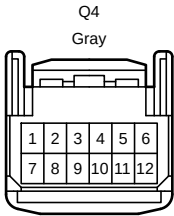


90980-12552

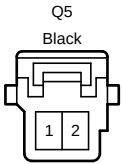


90980-12937

 


90980-10359

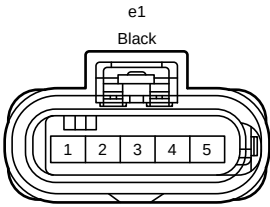


82824-60B00

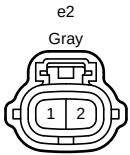


90980-12A02

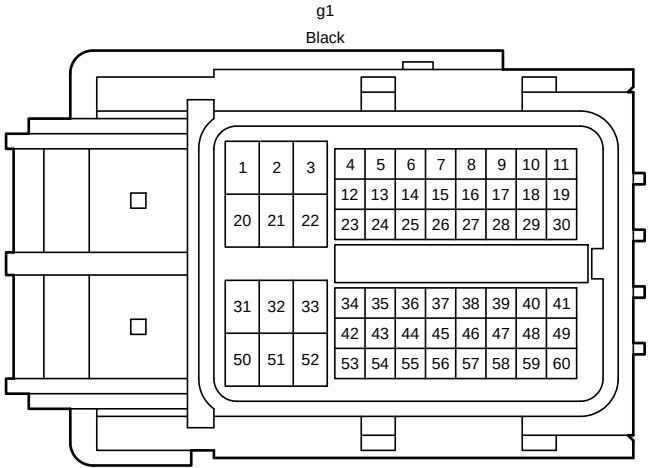

90980-12462

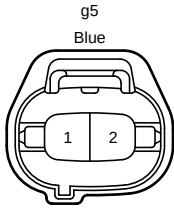

90980-11156

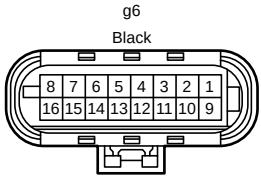

90980-12A18