



Position of Parts in Body (LHD Double Cab)

* 7: Refer to the Service Bulletin for the installation position of the parts.

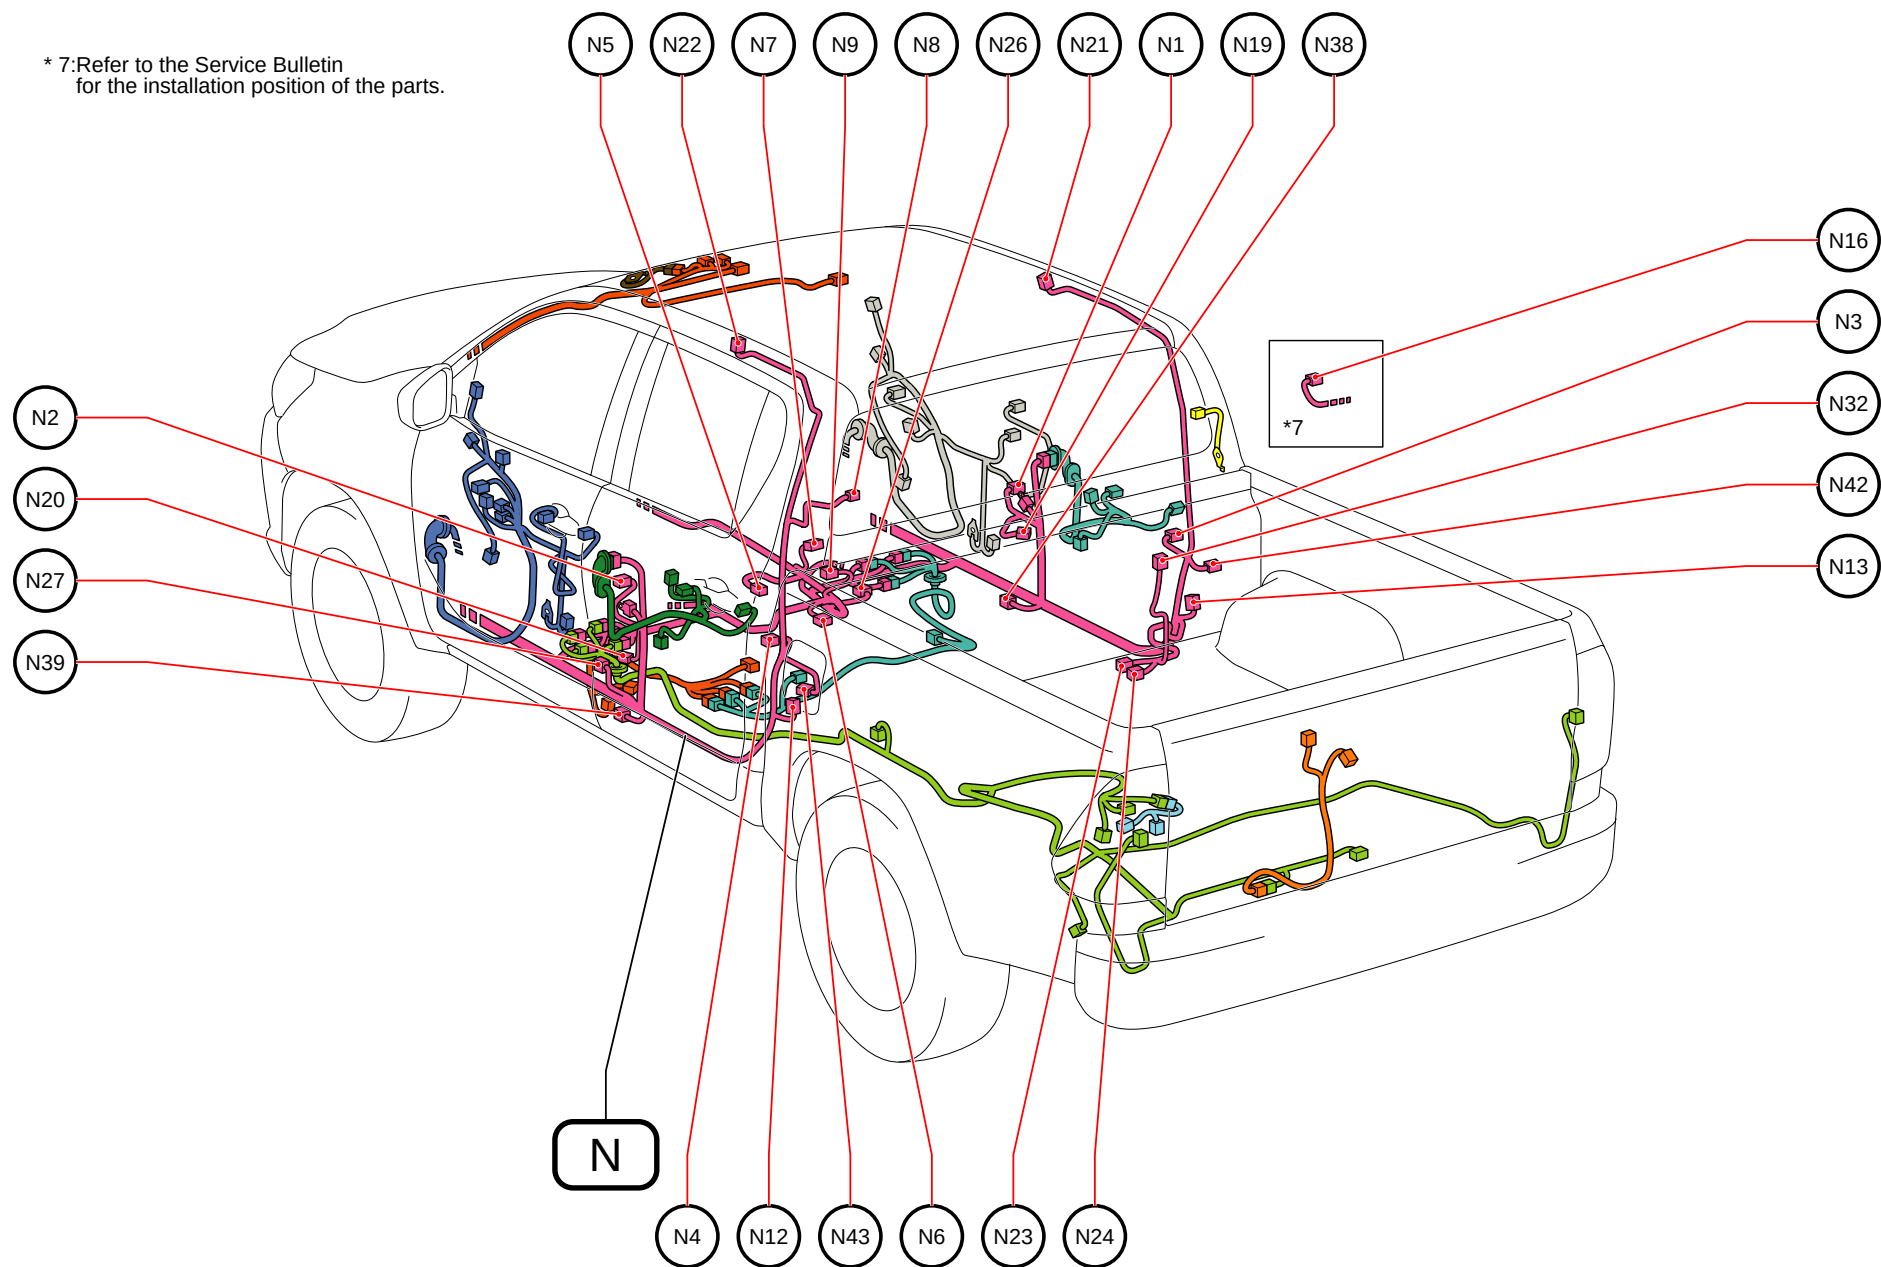

N1	Front Door Courtesy Light Switch Assembly RH
N2	Front Door Courtesy Light Switch Assembly LH
N3	Rear Door Courtesy Light Switch Assembly RH
N4	Rear Door Courtesy Light Switch Assembly LH
N5	Parking Brake Switch Assembly
N6	Deceleration Sensor
N7	Power Outlet Socket
N8	Rear Window Defogger (Back Window Assembly)
N9	No. 2 Indoor Electrical Key Antenna Assembly
N12	Side Airbag Sensor Assembly LH
N13	Side Airbag Sensor Assembly RH
N16	Theft Warning Siren Assembly
N19	Front Seat Outer Belt Assembly RH
N20	Front Seat Outer Belt Assembly LH
N21	Curtain Shield Airbag Assembly RH
N22	Curtain Shield Airbag Assembly LH
N23	Rear No. 1 Seat Inner Belt Assembly RH
N24	Rear No. 1 Seat Inner Belt Assembly LH
N26	Voltage Inverter Assembly
N27	No. 46 Junction Connector
N32	Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
N38	Front Floor Side Airbag Sensor RH
N39	Front Floor Side Airbag Sensor LH
N42	Rear No. 1 Seat Outer Belt Assembly RH
N43	Rear No. 1 Seat Outer Belt Assembly LH

 Position of Parts in Body (LHD Double Cab)



90980-10871



90980-10871




90980-10871




90980-10871




90980-10871

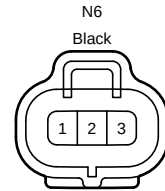


90980-10845

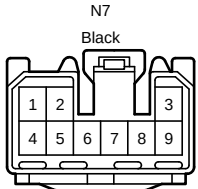


90980-11535

 


90980-10359

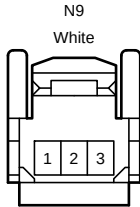


90980-12795

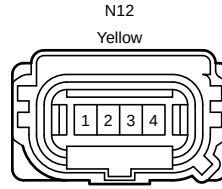


90980-12699

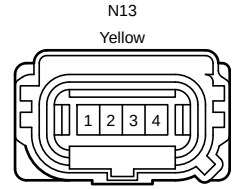


90980-12699

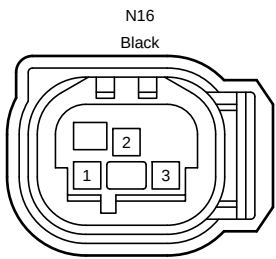


90080-98237

 


90980-12452

 


90980-12452

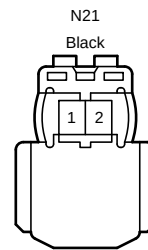


90980-12575

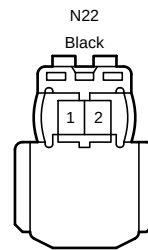


90980-12575

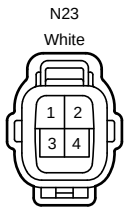


90980-10869

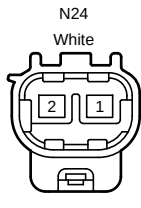


90980-11466

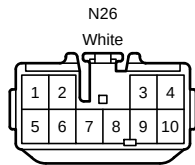


90980-10997

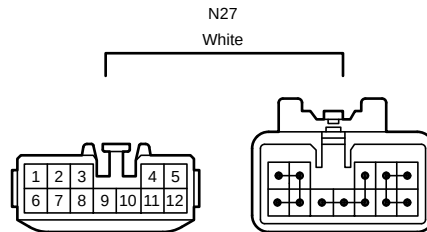


90980-10803

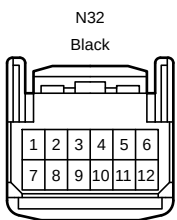


90980-12552

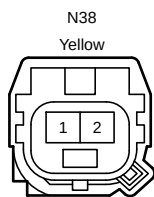


90980-12490

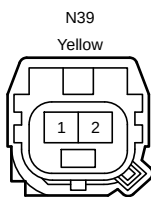

90980-12490

 

90980-12452

 

90980-12452