



Position of Parts in Instrument Panel (LHD)

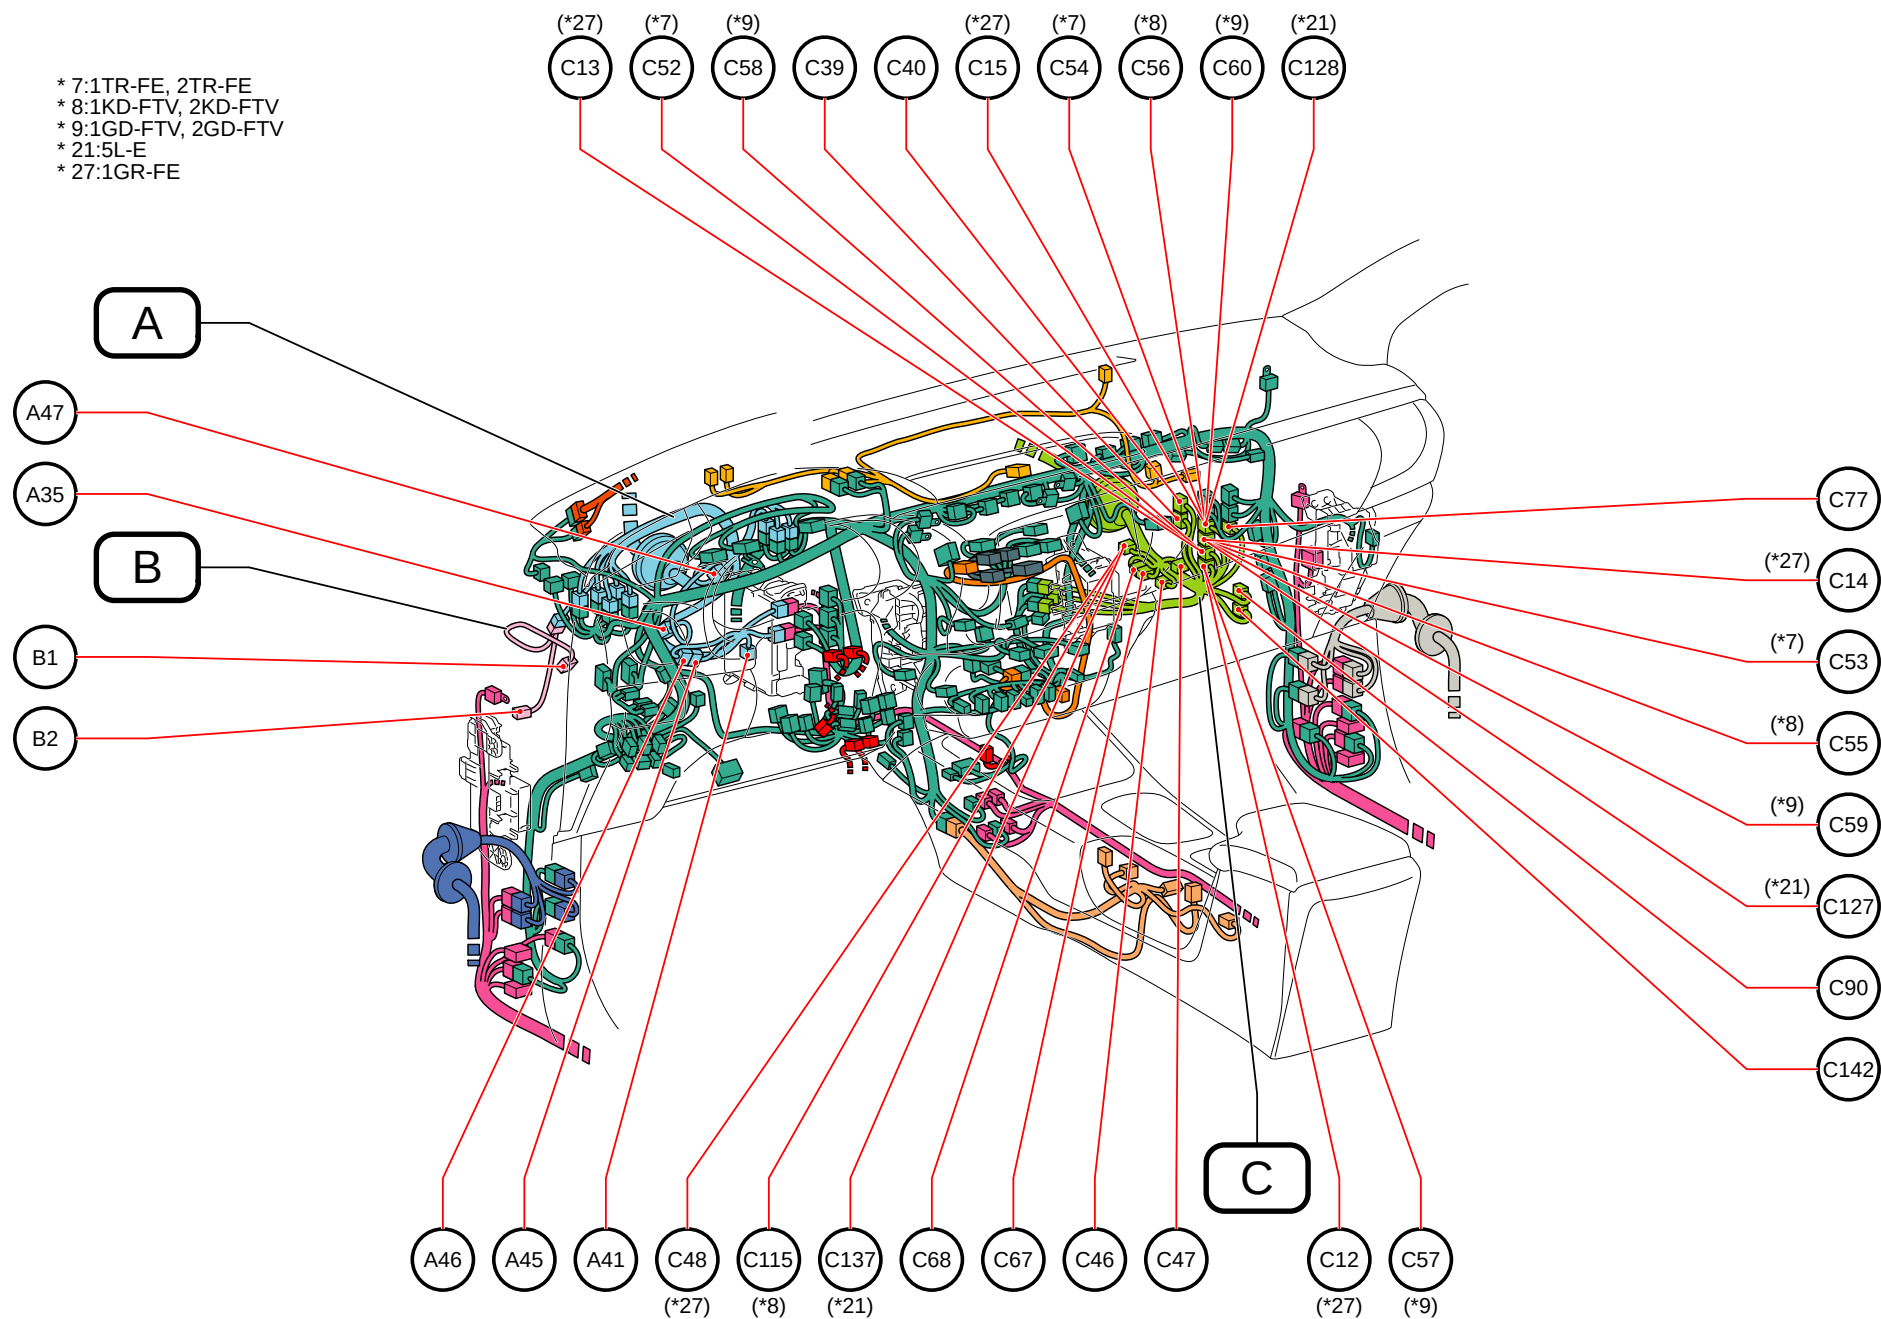


A35	Stop Light Switch Assembly
A41	Accelerator Pedal Sensor Assembly
A45	No. 1 Junction Connector
A46	No. 1 Junction Connector
A47	No. 2 Junction Connector
B1	Clutch Switch Assembly
B2	Clutch Start Switch Assembly
C12	ECM
C13	ECM
C14	ECM
C15	ECM
C39	4WD Control ECU
C40	4WD Control ECU
C46	No. 3 Junction Connector
C47	No. 4 Junction Connector
C48	No. 5 Junction Connector
C52	ECM
C53	ECM
C54	ECM
C55	ECM
C56	ECM
C57	ECM
C58	ECM
C59	ECM
C60	ECM
C67	No. 6 Junction Connector
C68	No. 6 Junction Connector
C77	Transmission Control ECU Assembly
C90	Turbo Motor Driver
C115	No. 7 Junction Connector
C127	ECM
C128	ECM
C137	No. 53 Junction Connector
C142	Engine Stop & Start Solenoid Filter


Position of Parts in Instrument Panel (LHD)

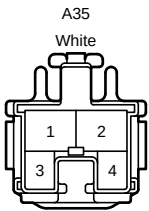


90980-11118

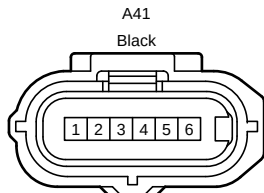


90980-12831

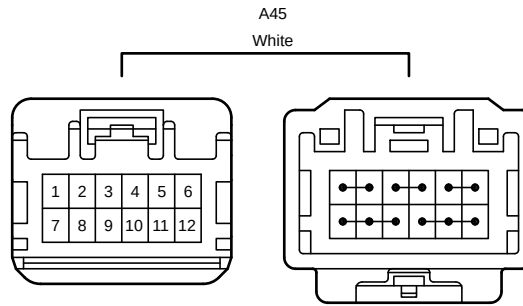


90980-12737

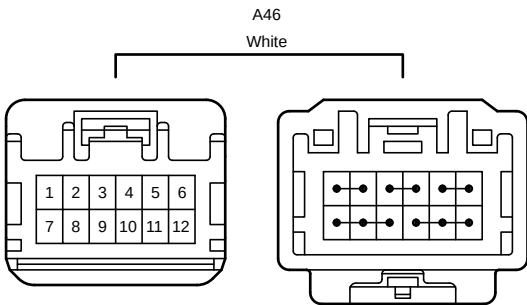


90980-12737

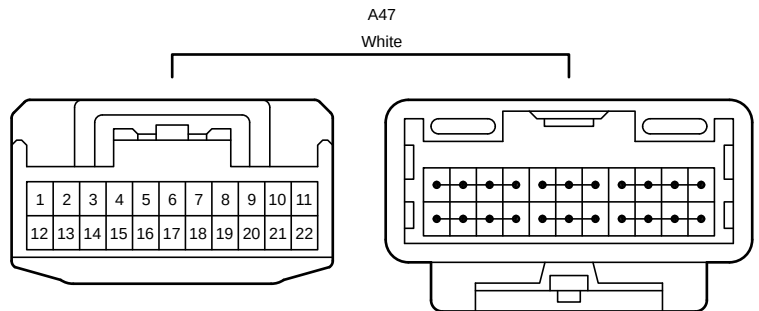


90980-12372

 


90980-10906

 

 
90980-10825
(Before Nov. 2017 Production)




90980-10825
(From Nov. 2017 Production)

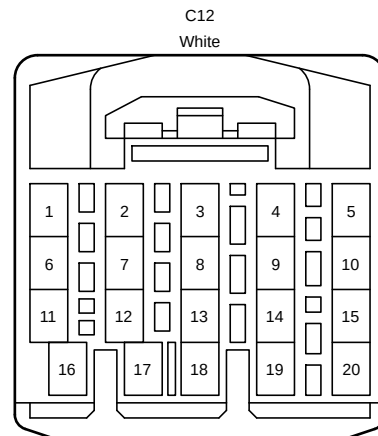


82824-26160

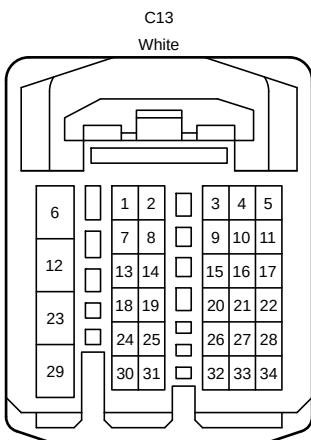

82824-26150












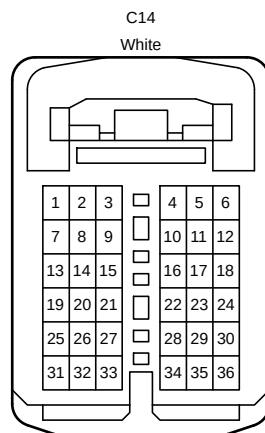


82824-26140

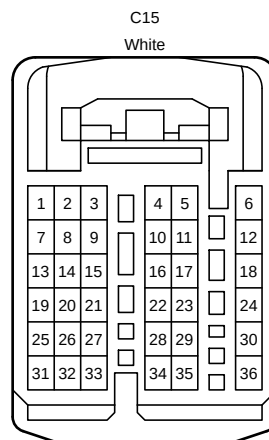


82824-26130


Position of Parts in Instrument Panel (LHD)

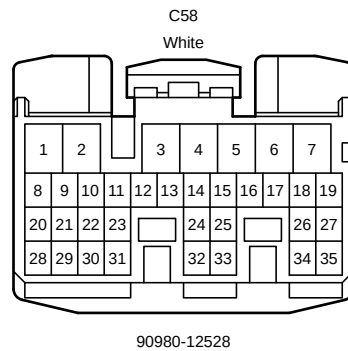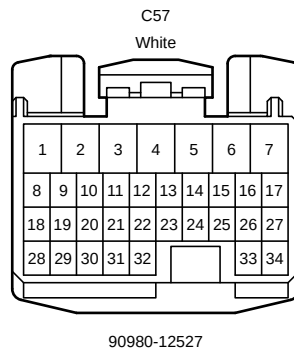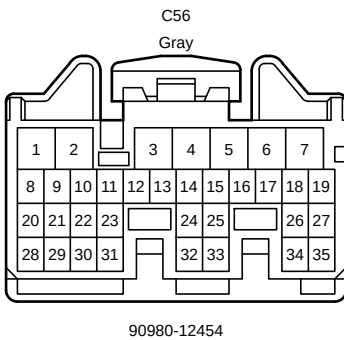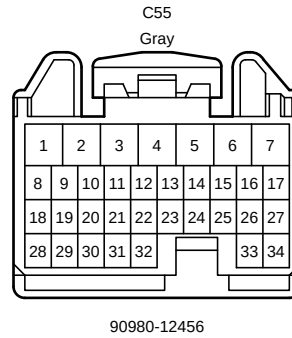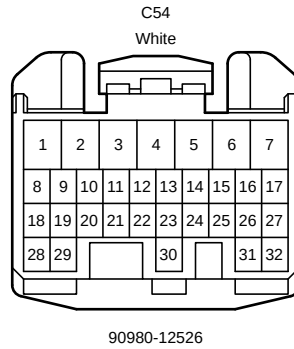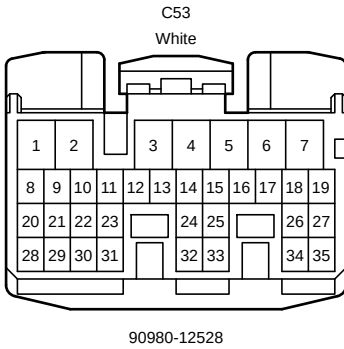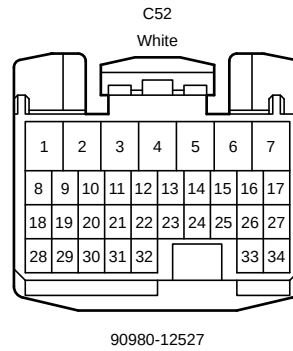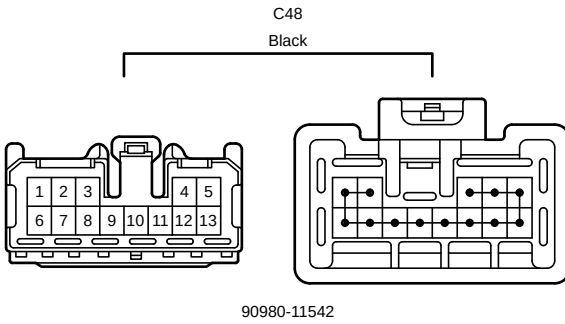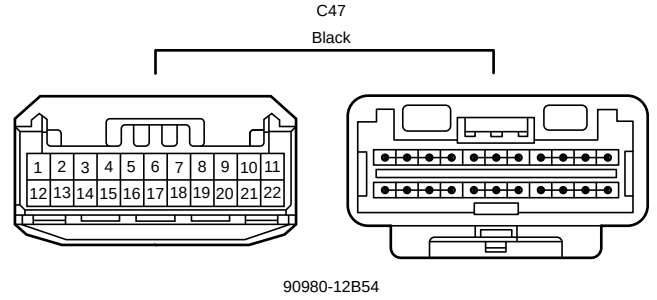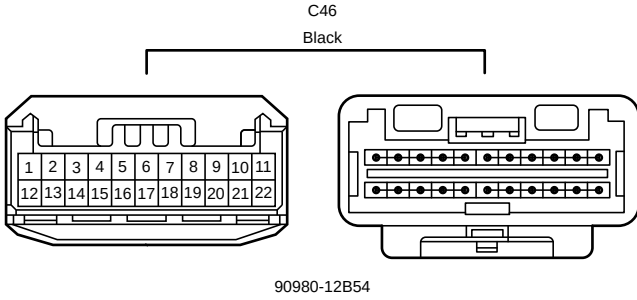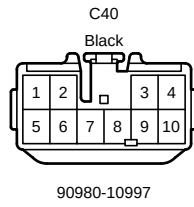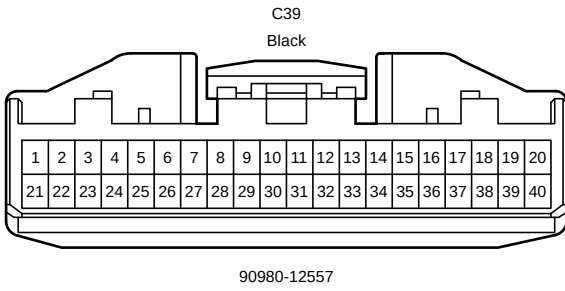


Position of Parts in Instrument Panel (LHD)

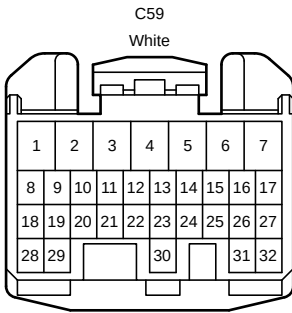


90980-12526

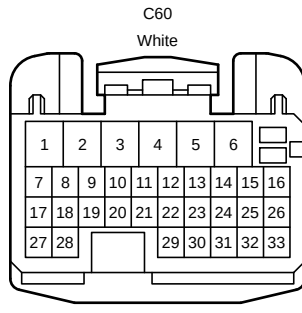


90980-12700

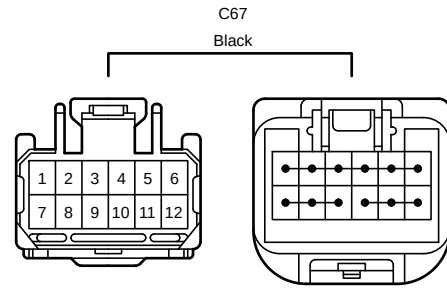


90980-11661

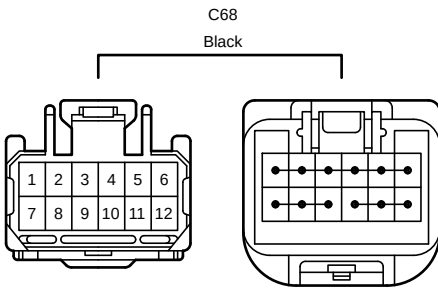


90980-11661

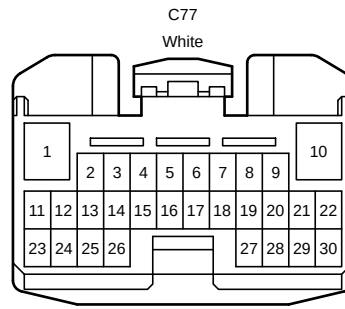


90980-12562

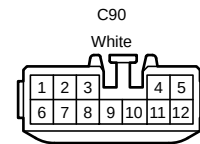


90980-10803

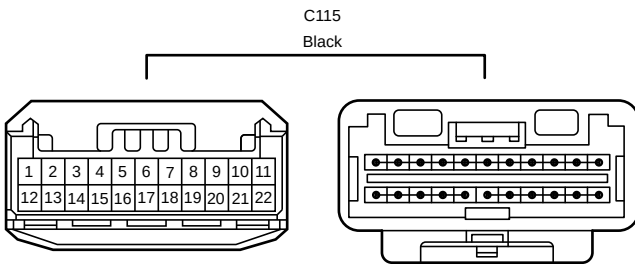


90980-12B54

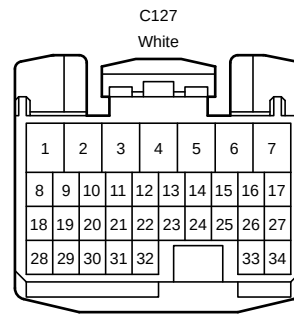


90980-12527

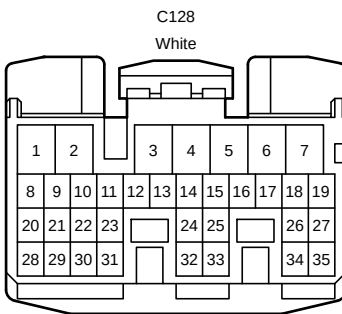

90980-12528

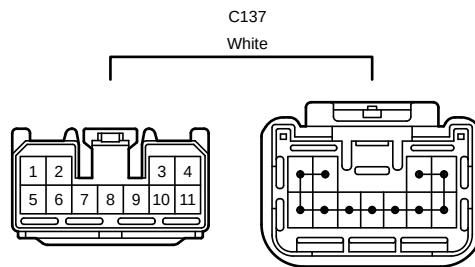

90980-11539

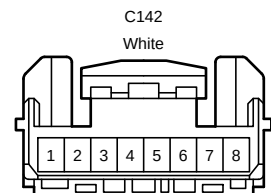

90980-12558