



Position of Parts in Instrument Panel (LHD)

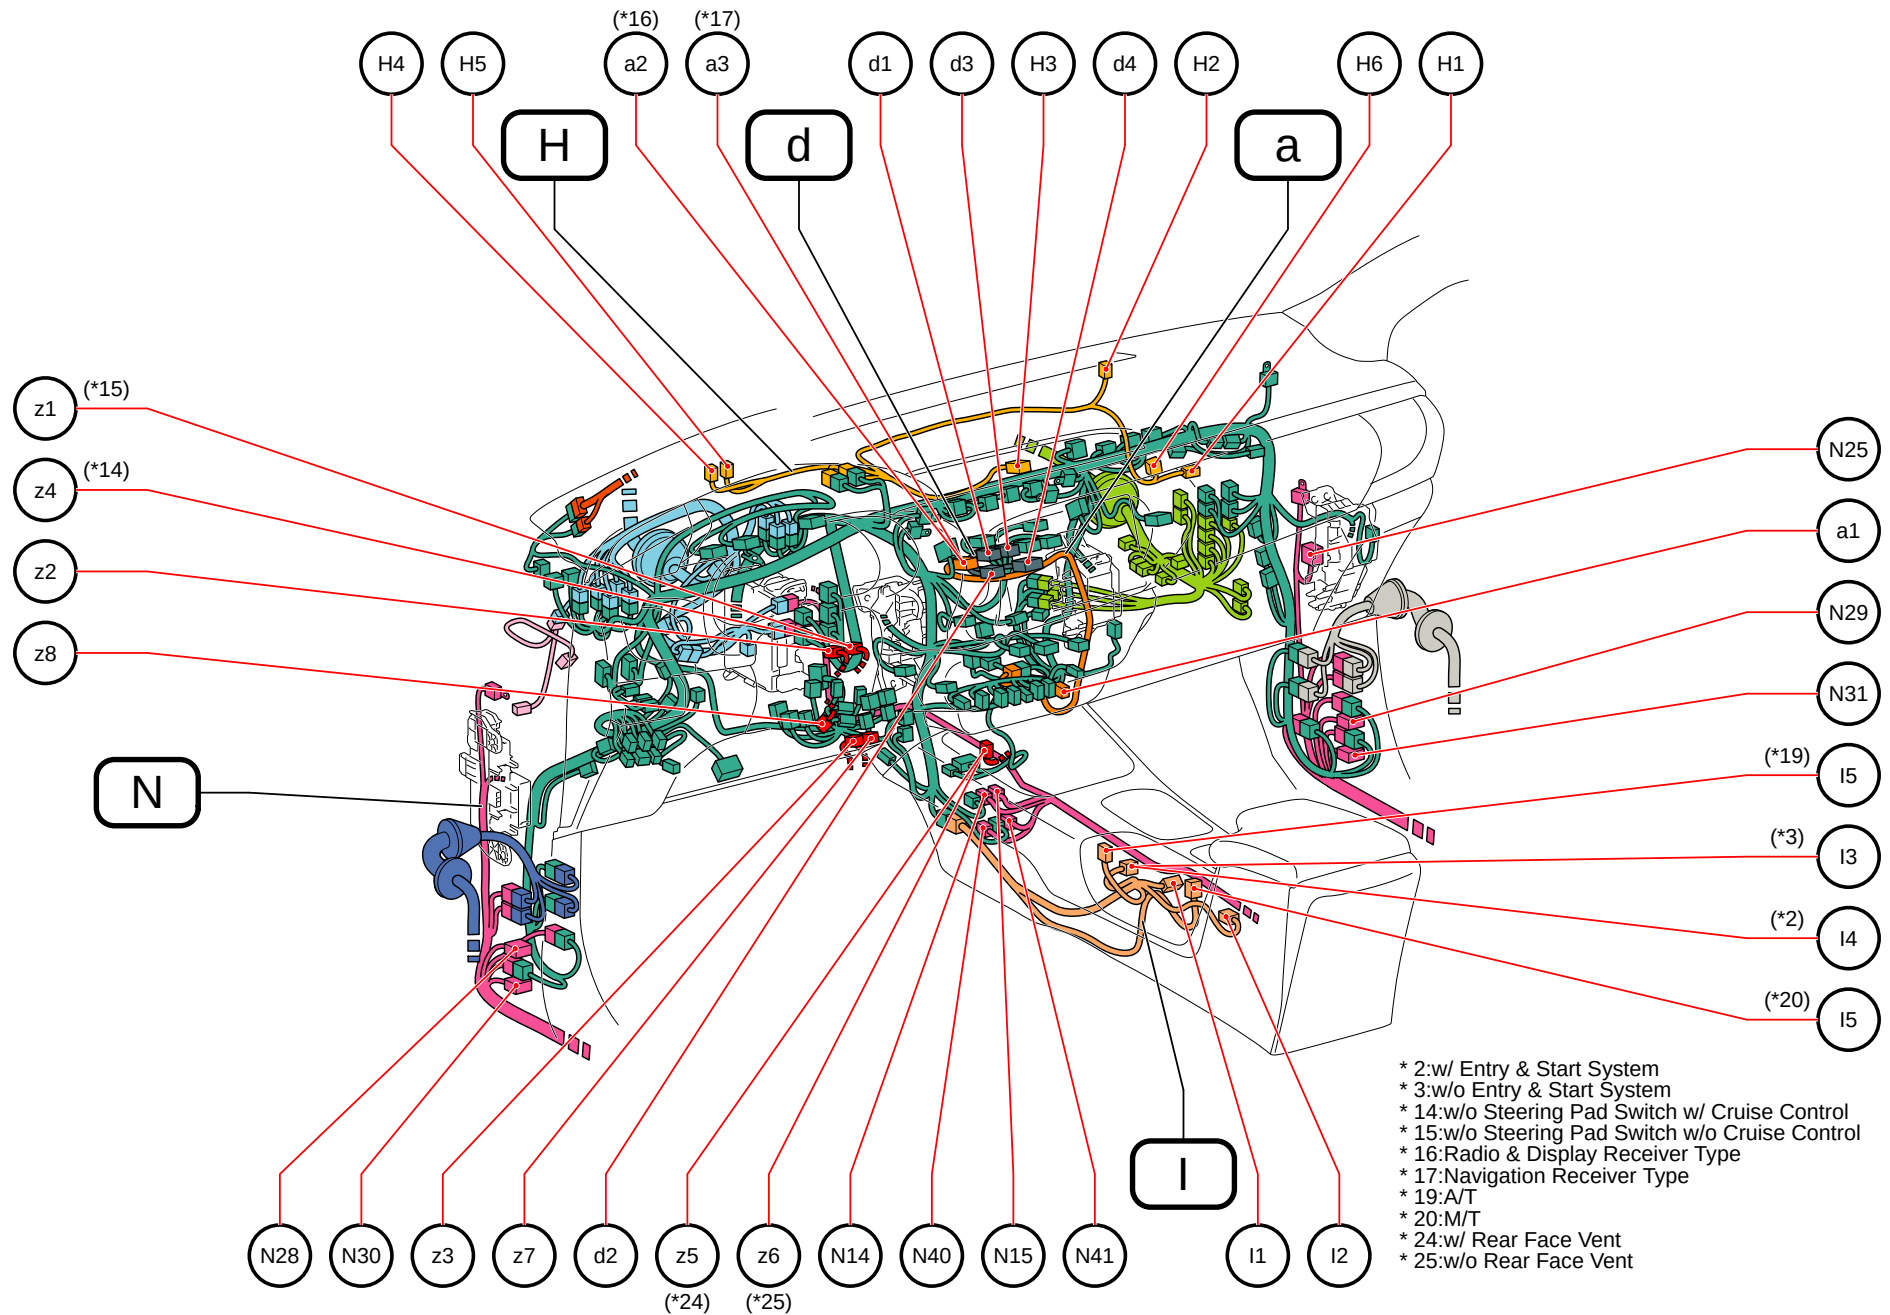


Position of Parts in Instrument Panel (LHD)

H1	Instrument Panel Passenger Airbag without Door Assembly
H2	Theft Warning Indicator Light Assembly
H3	Clock Assembly
H4	Cooler (Solar Sensor) Thermistor
H5	Automatic Light Control Sensor
H6	Instrument Panel Passenger Airbag without Door Assembly
I1	Transmission Control Switch (Transmission Floor Shift Assembly)
I2	Shift Position Indicator (Position Indicator Housing Assembly)
I3	Shift Lock Control ECU (Transmission Floor Shift Assembly)
I4	Shift Lock Control ECU (Transmission Floor Shift Assembly)
I5	Combination Switch Assembly
N14	Airbag Sensor Assembly
N15	Airbag Sensor Assembly
N25	Door Control Battery
N28	No. 47 Junction Connector
N29	No. 48 Junction Connector
N30	No. 49 Junction Connector
N31	No. 50 Junction Connector
N40	Airbag Sensor Assembly
N41	Airbag Sensor Assembly
a1	No. 1 Stereo Jack Adapter Assembly
a2	Radio & Display Receiver Assembly
a3	Navigation Receiver Assembly
d1	Radio & Display Receiver Assembly
d2	Navigation ECU
d3	Radio & Display Receiver Assembly
d4	Navigation ECU
z1	Horn Button Wire Sub-Assembly , Spiral Cable Sub-Assembly
z2	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z3	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
z4	Spiral Cable Sub-Assembly , Cruise Control Main Switch
z5	A/C Amplifier Assembly , A/C Harness Assembly
z6	A/C Amplifier Assembly , A/C Harness Assembly
z7	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
z8	Spiral Cable Sub-Assembly , Steering Wheel Assembly

 
Position of Parts in Instrument Panel (LHD)




90980-12224

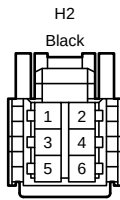


90980-12056

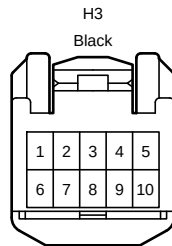


90980-12361

 


90980-11918

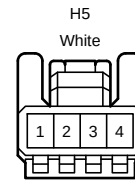


82824-50130

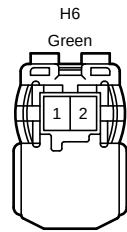


90980-12998

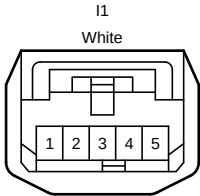


90980-12954

 


90980-11918

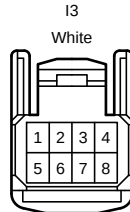


90980-12551

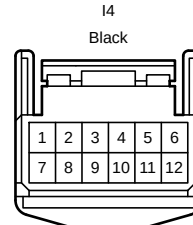


90980-12559

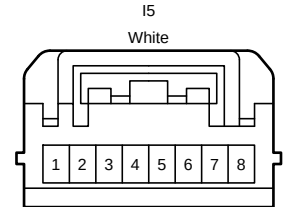


90980-12550

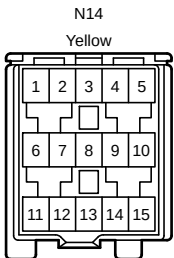


90980-12449

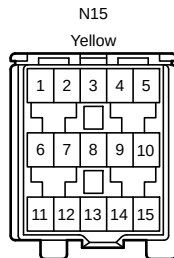


90980-12450

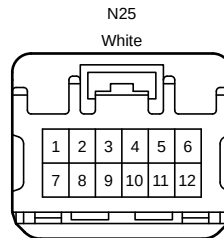


90980-12737

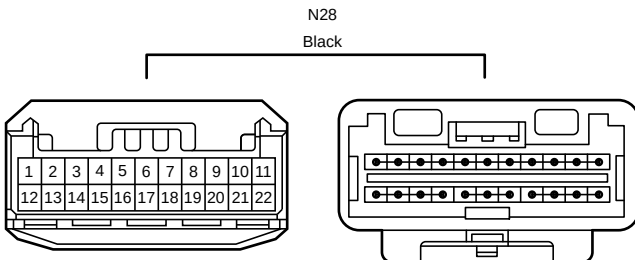


90980-12B54

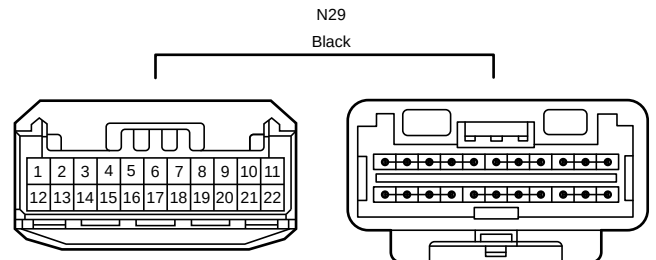

90980-12B54

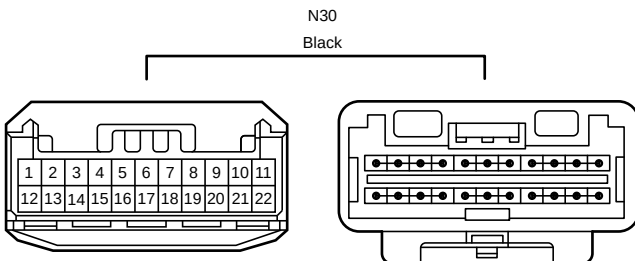


90980-12B54

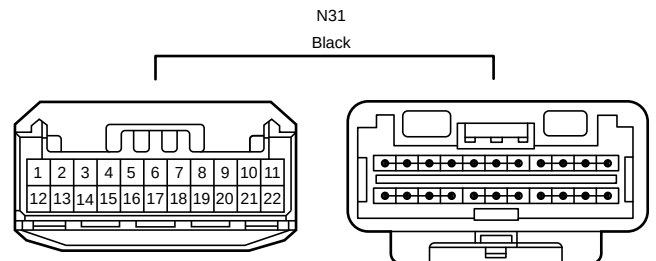


90980-12B54


Position of Parts in Instrument Panel (LHD)

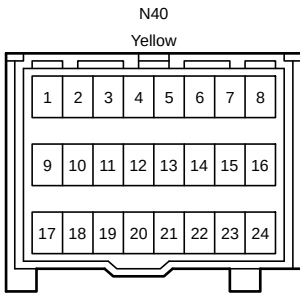


90980-12392

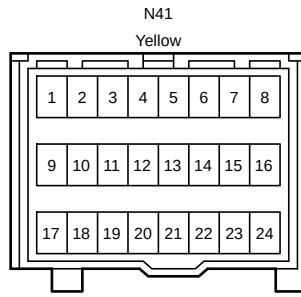


90980-12390

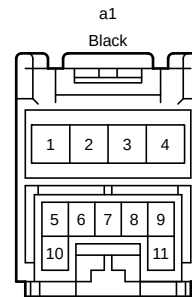


90980-12A69

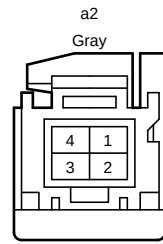


90980-12A52

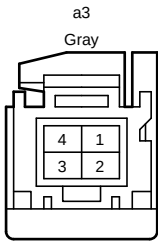


90980-12A52

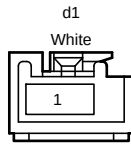


90980-12960

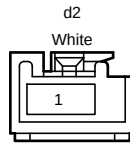


90980-12960

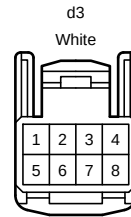


90980-12221

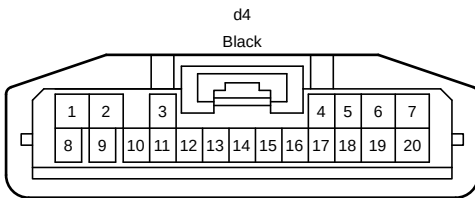


90980-12976

 


90980-12360

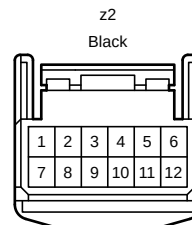


90980-12559

 


90980-12224

 


90980-12360

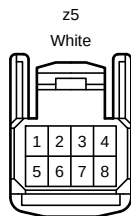


90980-12551

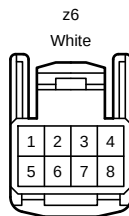

90980-12221

 

90980-12219

 

90980-12A94