



# Position of Parts in Instrument Panel (RHD)

- \* 1: Refer to the Service Bulletin for the installation position of the parts.
- \* 2: w/ Entry & Start System
- \* 3: w/o Entry & Start System
- \* 24: Before Aug. 2017 Production
- \* 25: From Aug. 2017 Production
- \* 26: w/ Immobiliser System
- \* 27: w/o Immobiliser System

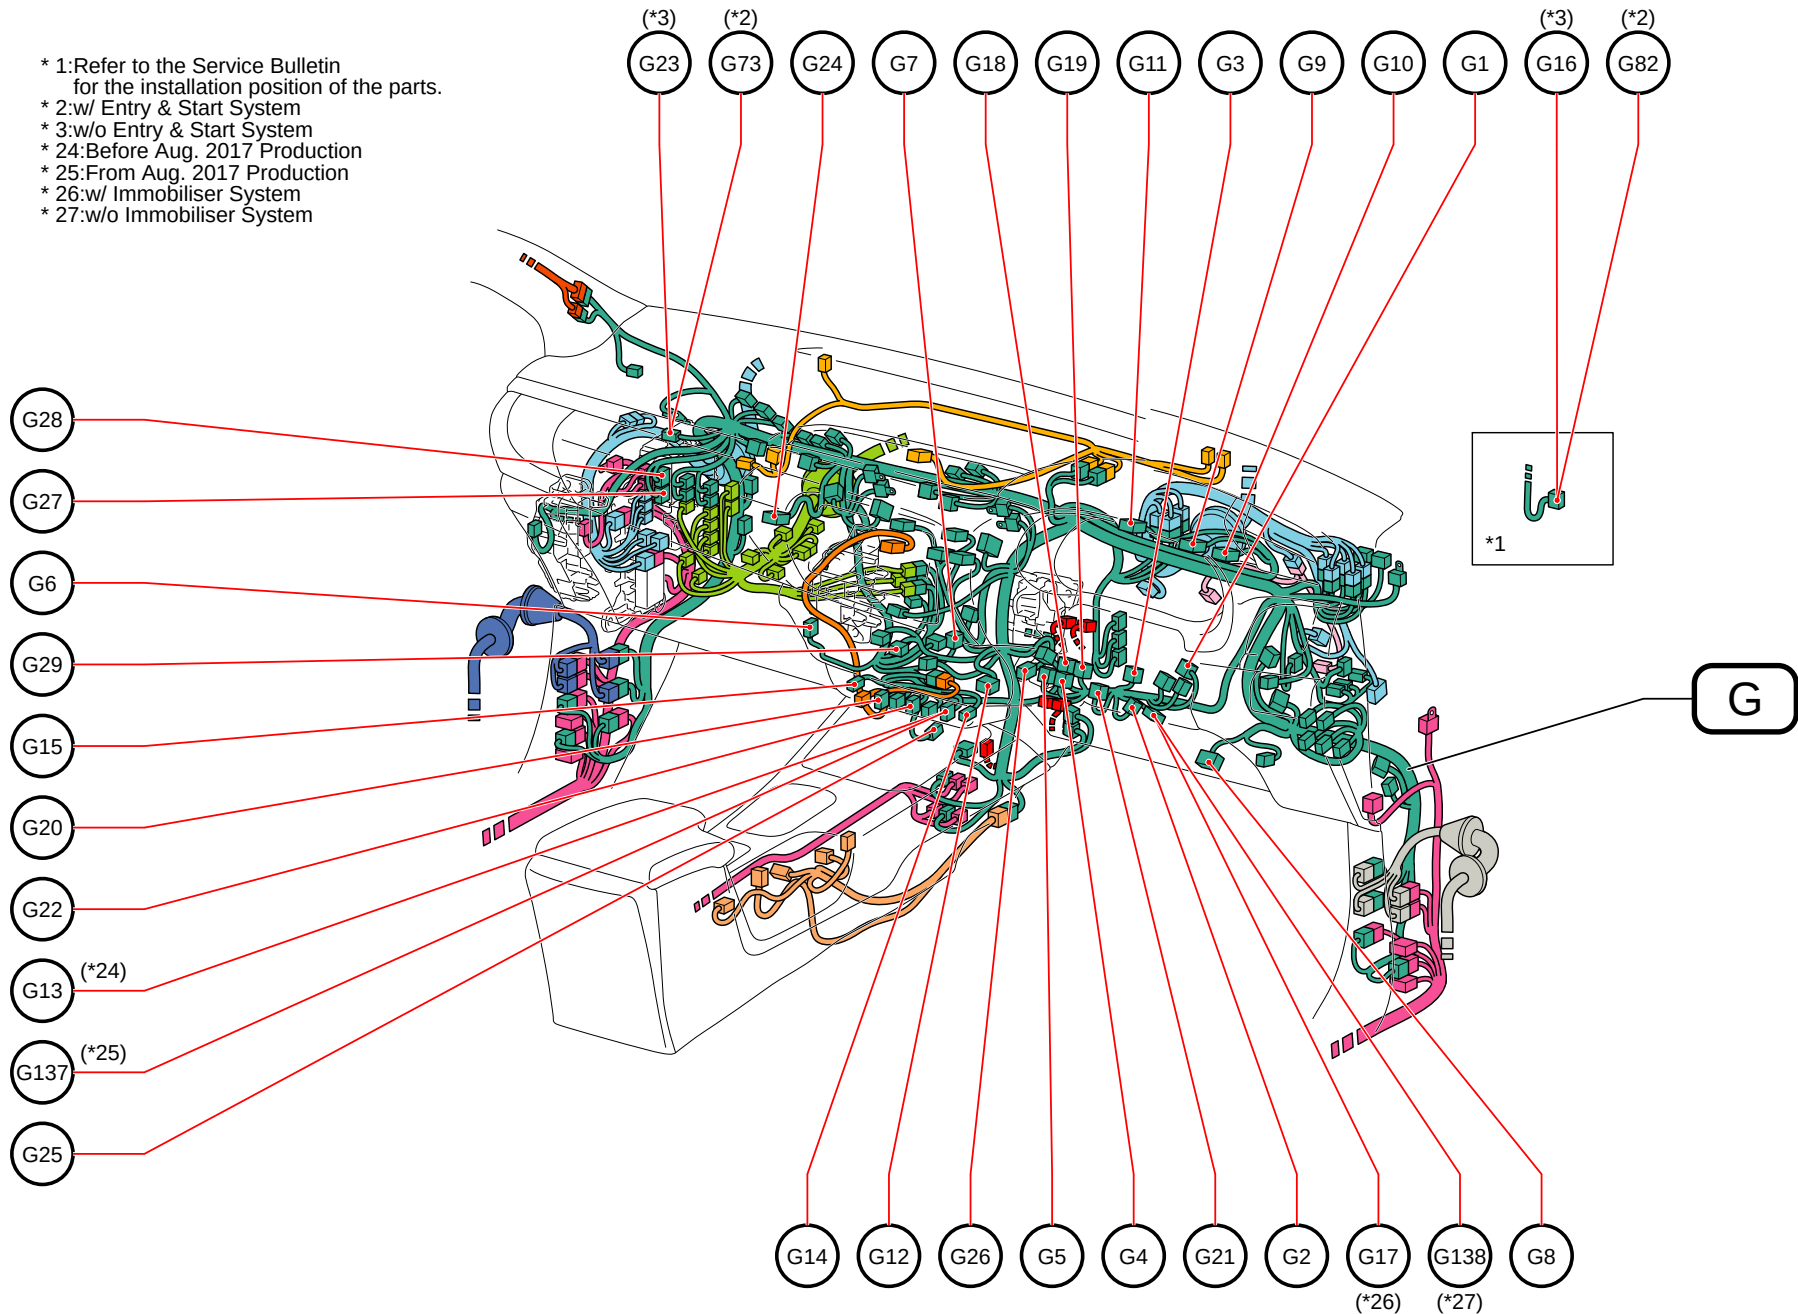


|      |                                                         |
|------|---------------------------------------------------------|
| G1   | Ignition or Starter Switch Assembly                     |
| G2   | Un-Lock Warning Switch Assembly                         |
| G3   | Headlight Dimmer Switch Assembly                        |
| G4   | Spiral Cable Sub-Assembly                               |
| G5   | Spiral Cable Sub-Assembly                               |
| G6   | Blower Motor with Fan Sub-Assembly                      |
| G7   | Blower Resistor                                         |
| G8   | DLC3                                                    |
| G9   | Combination Meter Assembly                              |
| G10  | Combination Meter Assembly                              |
| G11  | Combination Meter Assembly                              |
| G12  | Transfer Position Switch                                |
| G13  | Differential Lock Switch                                |
| G14  | No. 1 Power Outlet Socket Assembly                      |
| G15  | No. 2 Power Outlet Socket Assembly                      |
| G16  | Transponder Key ECU Assembly                            |
| G17  | Transponder Key Coil                                    |
| G18  | Windshield Wiper Switch Assembly                        |
| G19  | Windshield Wiper Switch Assembly                        |
| G20  | Seat Heater Switch                                      |
| G21  | Steering Sensor (Spiral Cable with Sensor Sub-Assembly) |
| G22  | VSC Off Switch                                          |
| G23  | Door Control Receiver                                   |
| G24  | Telltale Light Assembly                                 |
| G25  | No. 1 Cooler Thermistor                                 |
| G26  | Cooler (Room Temperature Sensor) Thermistor             |
| G27  | Body ECU                                                |
| G28  | Body ECU                                                |
| G29  | A/C Control Assembly                                    |
| G73  | Smart Door Control Receiver Assembly                    |
| G82  | ID Code Box                                             |
| G137 | Differential Lock Switch                                |
| G138 | Key Cylinder Light Assembly                             |


## Position of Parts in Instrument Panel (RHD)

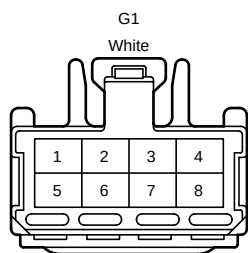


90980-11615

 


90980-12063

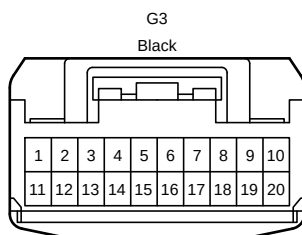


90980-12460

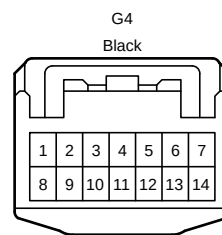


90980-12370

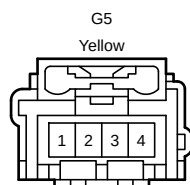


90980-12160

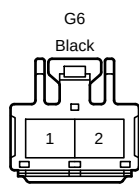


90980-11579

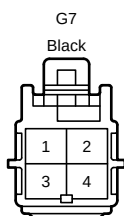


90980-11136

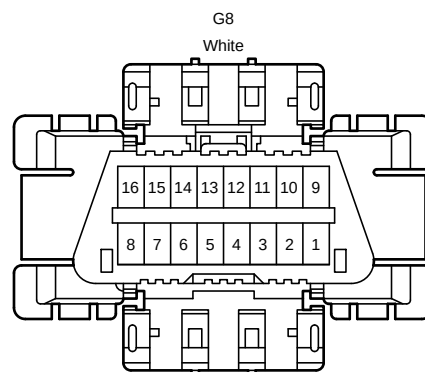


90980-11978

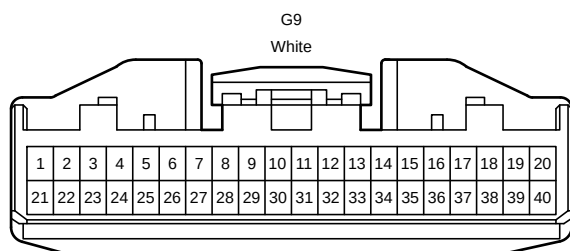


90980-12557

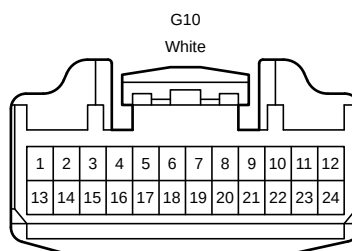


90980-12554

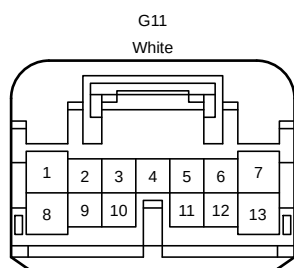


90980-12767

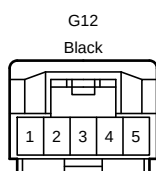


90980-11909

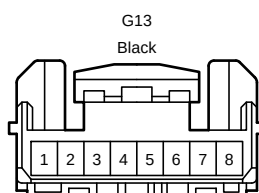


90980-12558

 


90980-12498

 

90980-12498

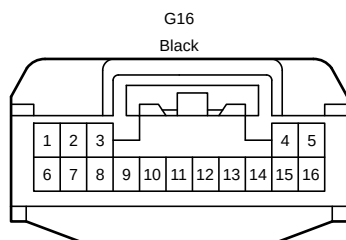


90980-12423

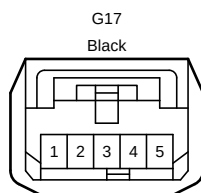

90980-12954




90980-12358

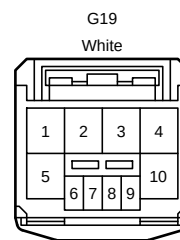


90980-12359


## Position of Parts in Instrument Panel (RHD)

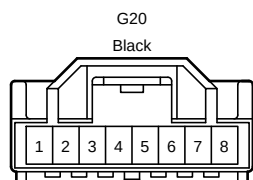


90980-11989

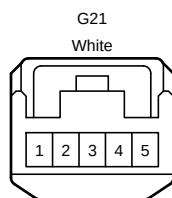


90980-12366

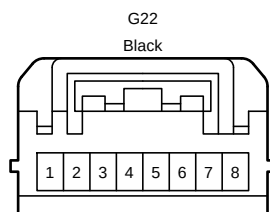


90980-12550

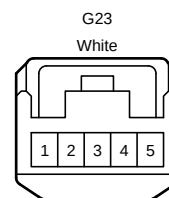


90980-12366

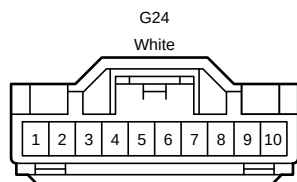


90980-12162

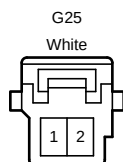


90980-12937

 


90980-11918

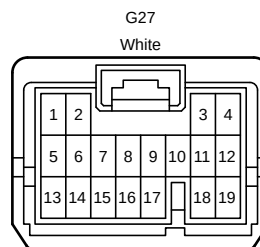


90980-12A45

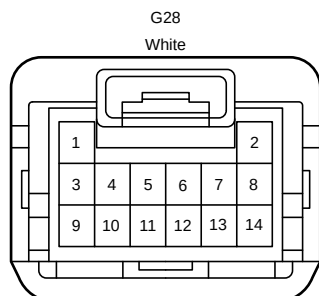


90980-12A46

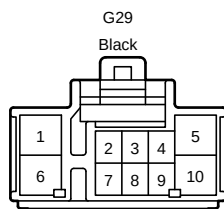


90980-10993

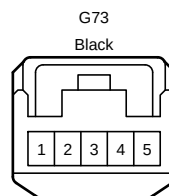


90980-12366

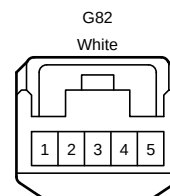

90980-12366

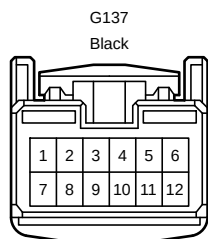

90980-12614

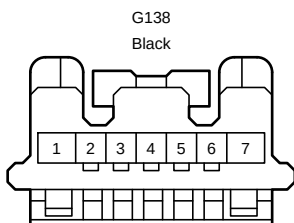

90980-12092