



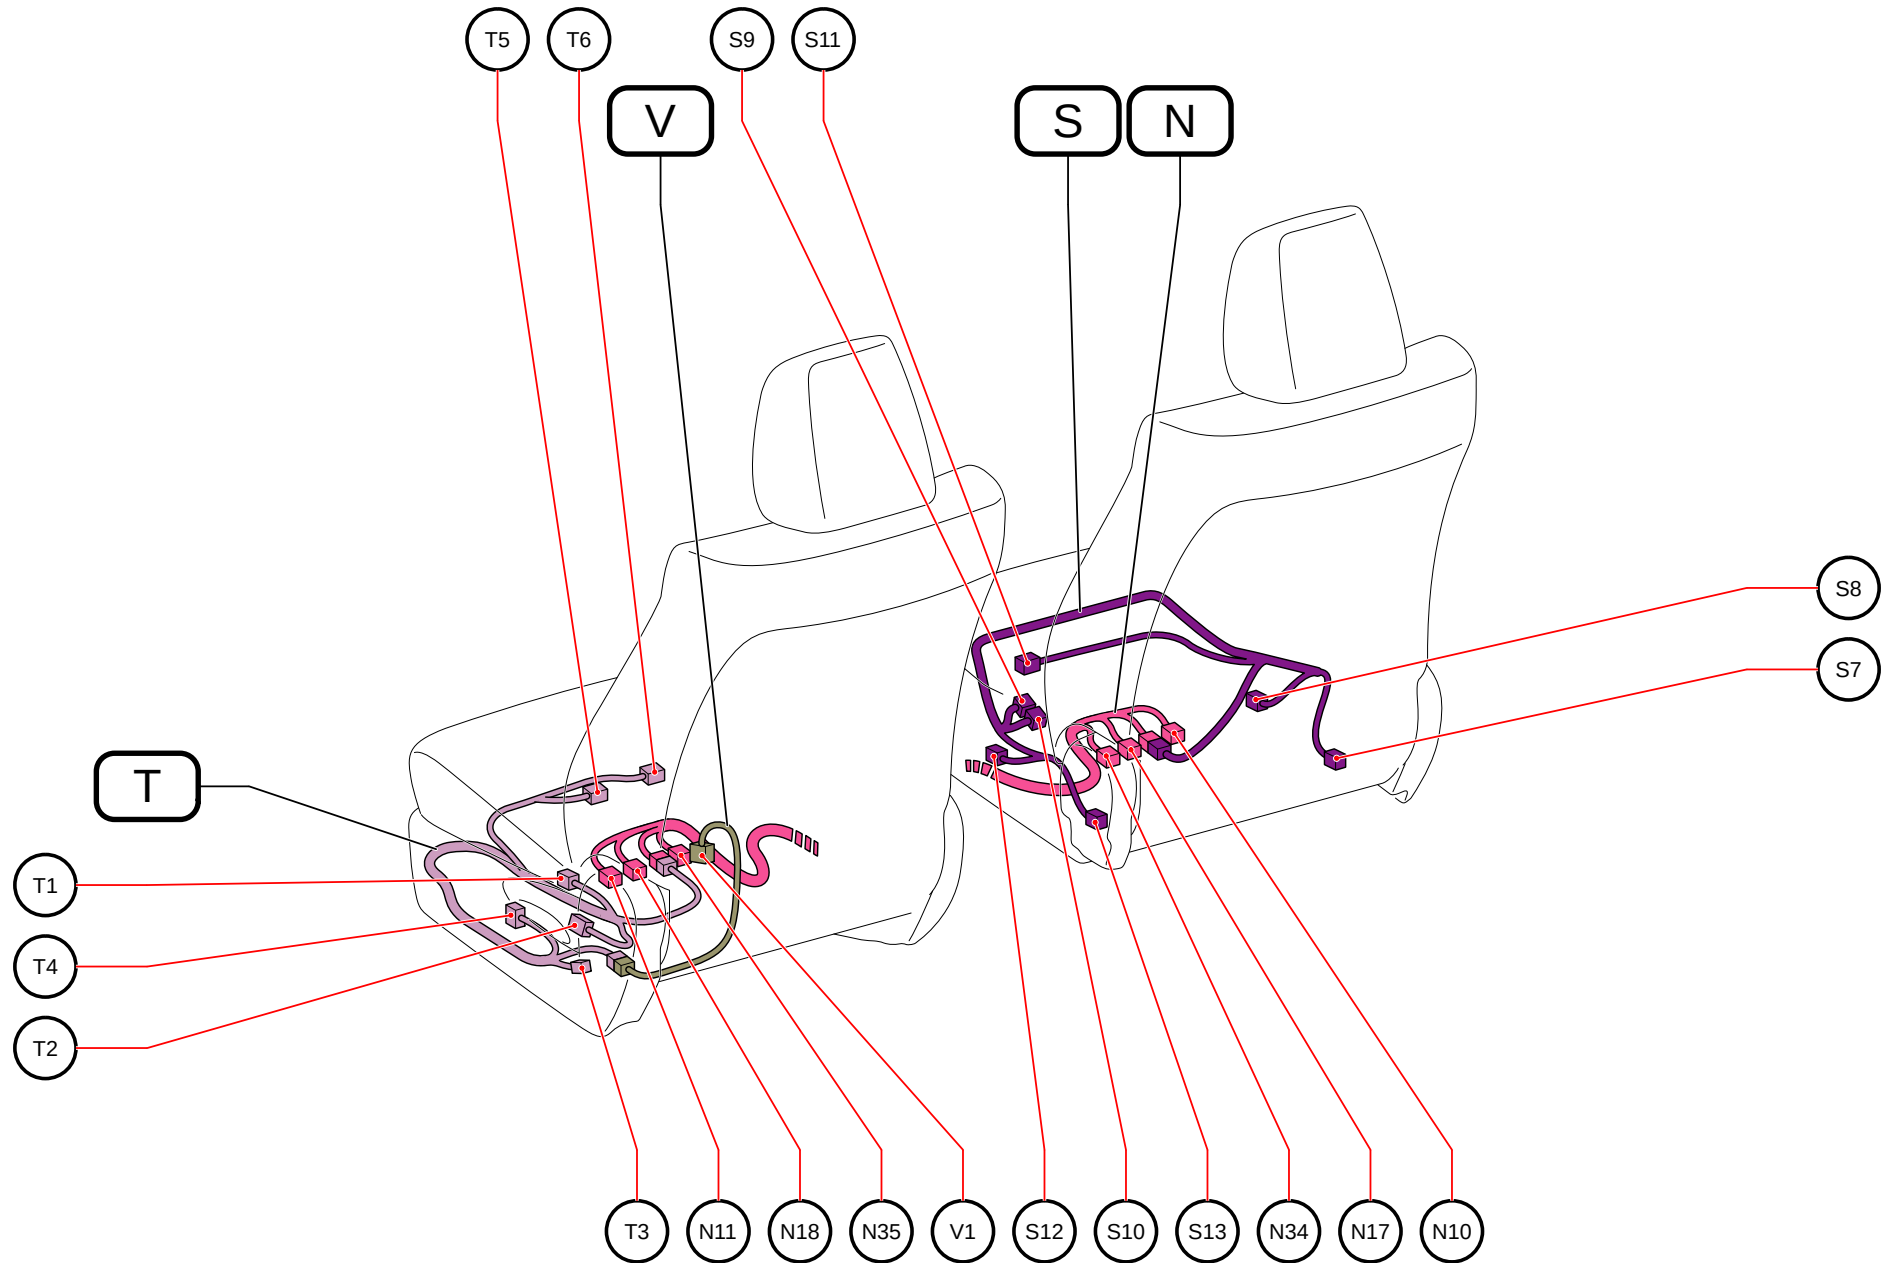


N10	Front Seat Airbag Assembly RH
N11	Front Seat Airbag Assembly LH
N17	Front Seat Inner Belt Assembly RH
N18	Front Seat Inner Belt Assembly LH
N34	Front Seat Cushion Heater Assembly RH
N35	Front Seat Cushion Heater Assembly LH
S7	Rear Out Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
S8	Front Out Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
S9	Occupant Detection ECU
S10	Occupant Detection ECU
S11	Front Seat Inner Belt Assembly RH
S12	Front In Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
S13	Rear In Weight Detection Sensor Sub-Assembly (Separate Type Front Seat Cushion Spring Assembly)
T1	Front Power Seat Slide Position Motor LH (Front Seat Adjuster Assembly LH)
T2	Front Power Seat Tilt Position Motor LH (Front Seat Adjuster Assembly LH)
T3	Front Power Seat Lift Position Motor LH (Front Seat Adjuster Assembly LH)
T4	Front Power Seat Switch LH
T5	Front Seat Cushion Heater Assembly LH
T6	No. 52 Junction Connector
V1	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)


Position of Parts in Seat (LHD w/ Power Seat)

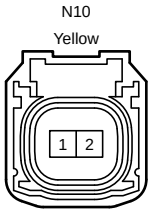


90980-12698

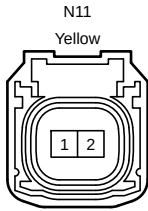


90980-12698

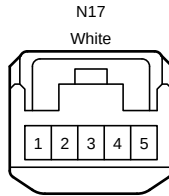


90980-12366

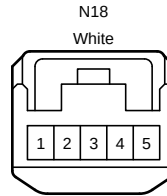


90980-12366

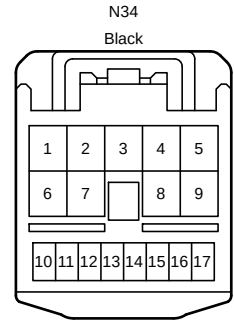


90980-12374

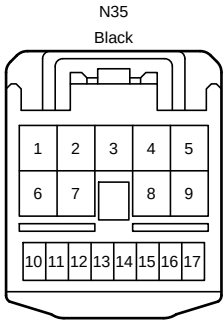


90980-12374

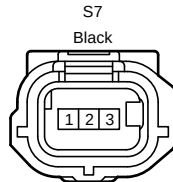


90980-12353

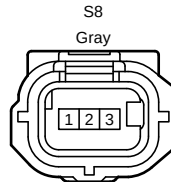

90980-12354

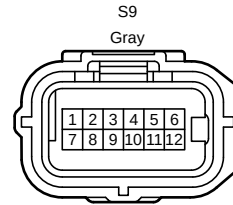


90980-12357

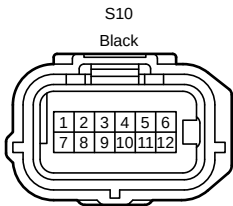


90980-12356




90980-11155

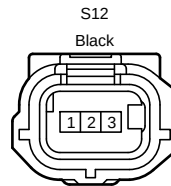


90980-12353

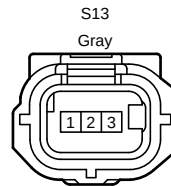


90980-12354

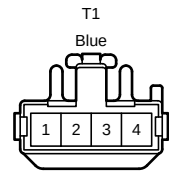


90980-12335

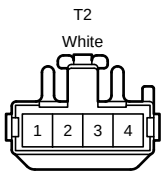


90980-12335

 


90980-12341

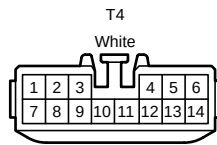


90980-10807

 

90980-11735

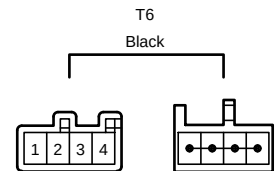

90980-11398

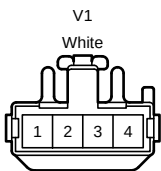

90980-12335