
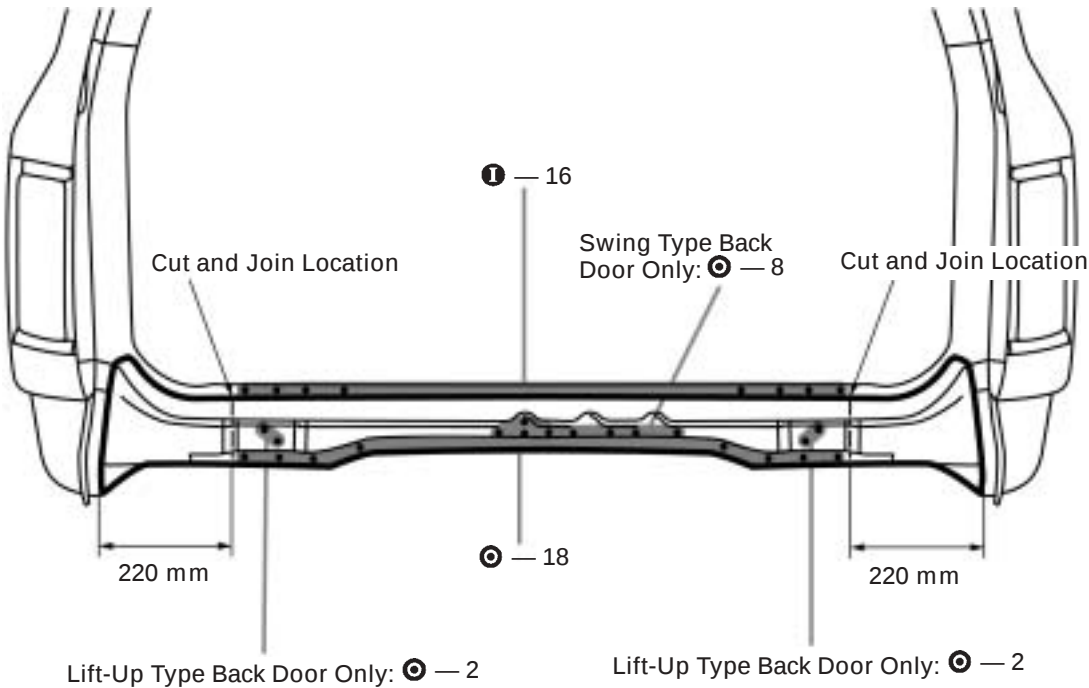


BODY LOWER BACK OUTER PANEL (CUT)


REMOVAL

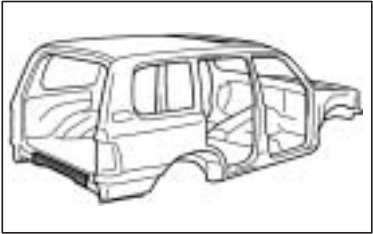

mm	in.
220	8.66

1. Cut and join the parts at the locations as shown above.
2. Leave the body lower back inner panel to the vehicle side.




INSTALLATION

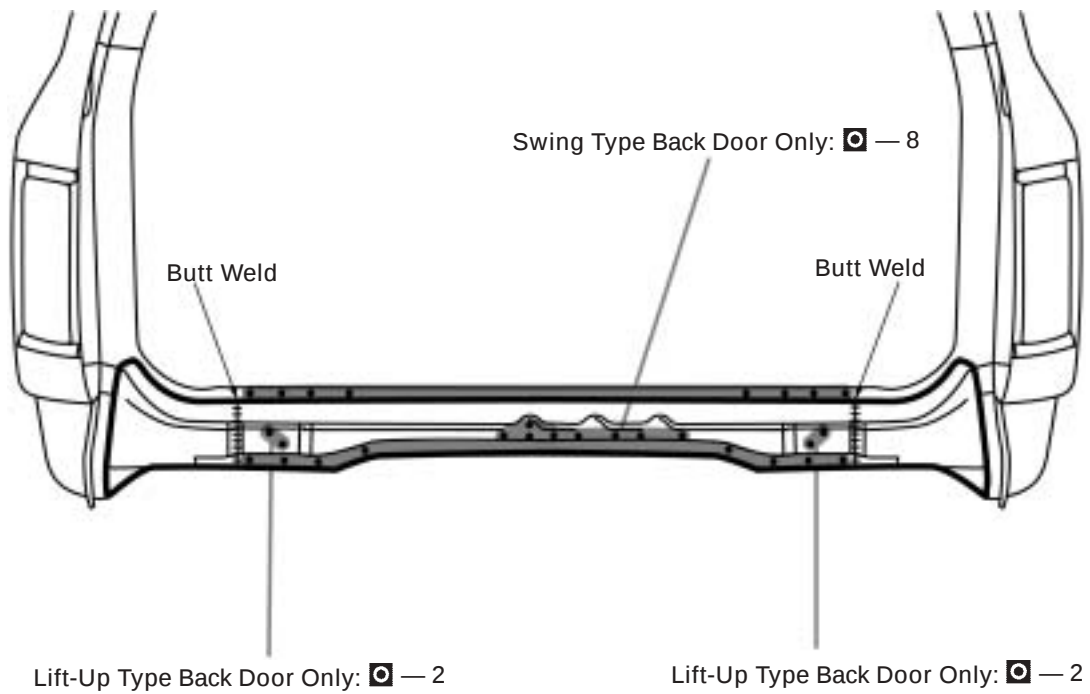

1. Temporarily install the new parts and check the fit of the tail gate or back door.

BODY LOWER BACK OUTER PANEL (CUT)

REMOVAL (With the quarter panel rear extension removed.)

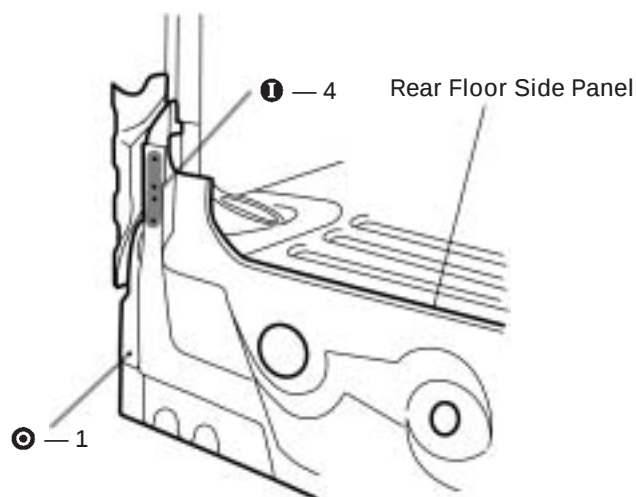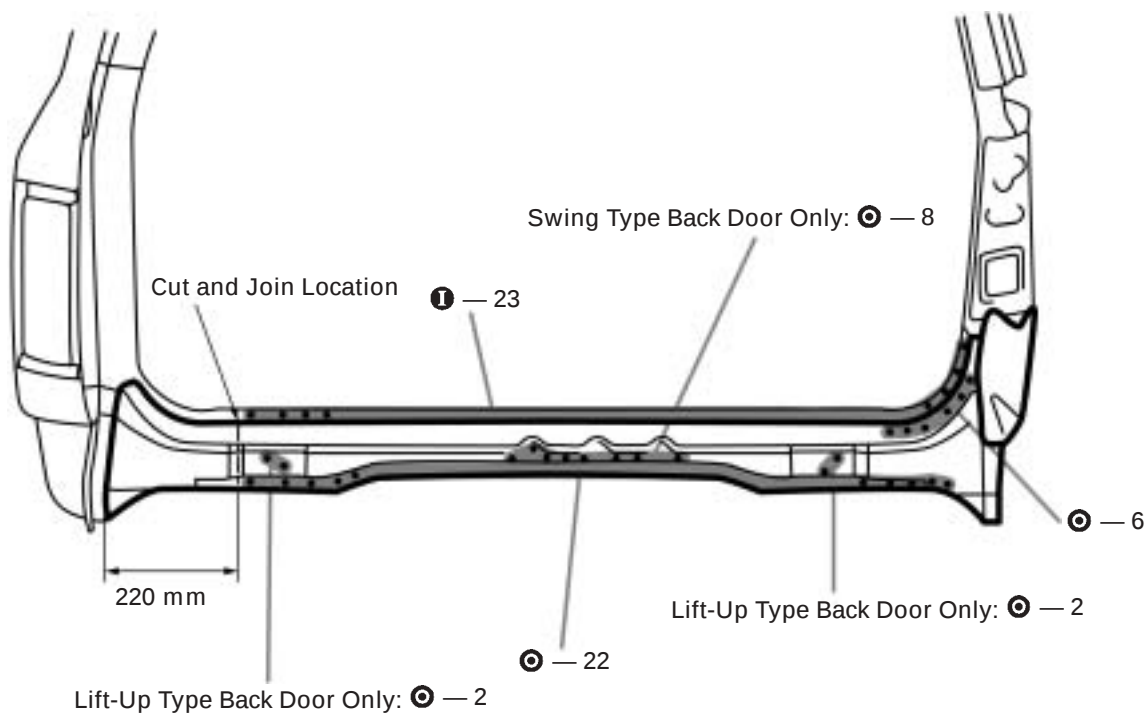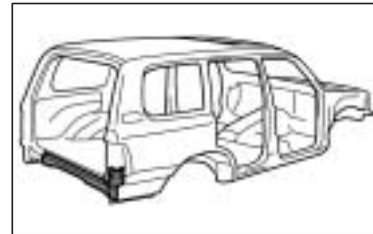

mm	in.
220	8.66

1. Cut and join the parts at the location as shown above.
2. Leave the body lower back inner panel and rear floor side panel to the vehicle side and remove the body lower back outer panel.

INSTALLATION

