


HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

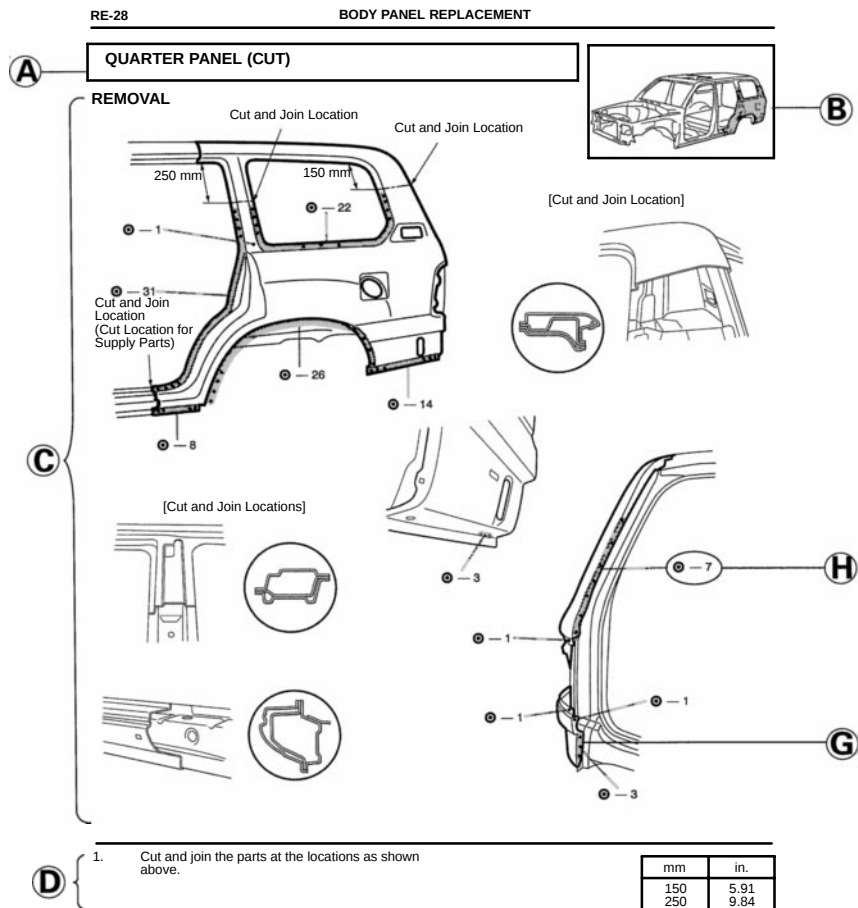

**A** : REPLACEMENT PARTS AND METHOD


QUARTER PANEL (CUT)

- Replacement method
  - (ASSY) . . . . . Assembly replacement
  - (CUT) . . . . . Major cutting (less than 1/2 of parks used)
  - (CUT-H) . . . . . Half cutting (about 1/2 of parks used)
  - (CUT-P) . . . . . Partial cutting (most of parts used)
- Replacement Parts

**B** : PARTS LOCATION

**C** : REMOVAL DIAGRAM  
Describes in detail removal of the damaged parts involving repair by cutting.

**D** : REMOVAL GUIDE  
Provides additional information to more efficiently help you perform the removal.

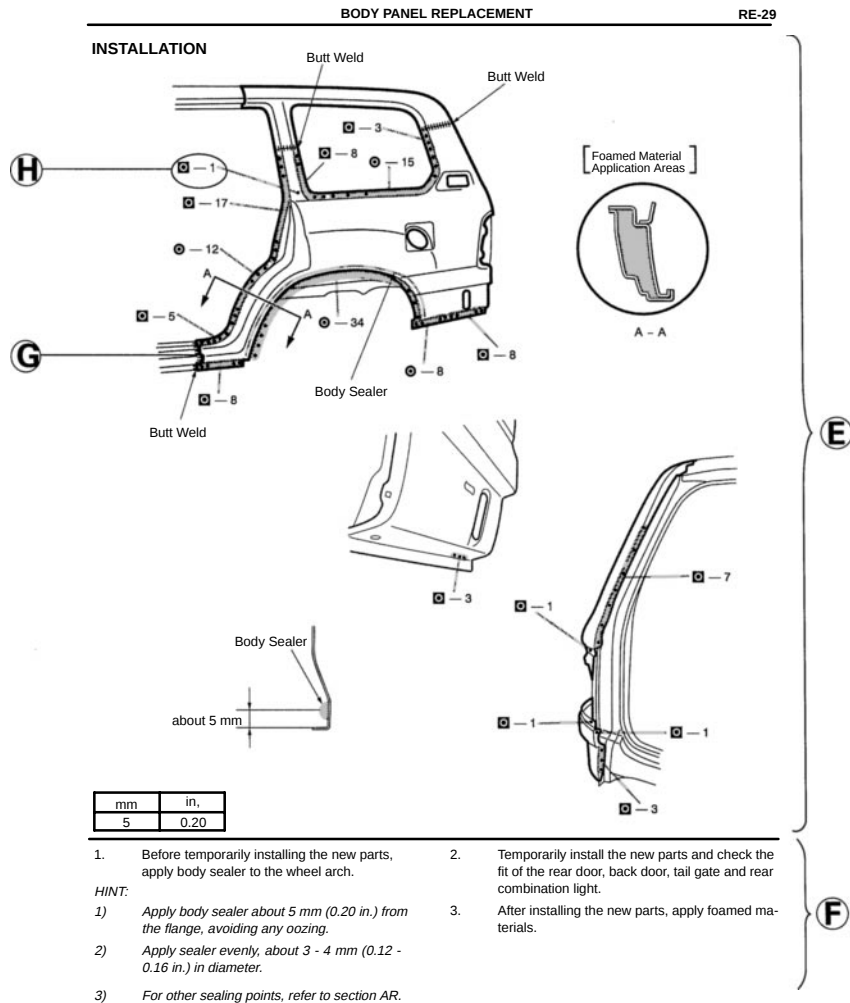

**E : INSTALLATION DIAGRAM**

Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.

**F : INSTALLATION GUIDE**

Provides additional information to more efficiently help you perform the installation.

**G : SYMBOLS**

See page [IN-4](#).

**H : ILLUSTRATION of WELD POINTS**

Weld method and panel position symbols.  
See page [IN-5](#).