


SHIFT POSITION SWITCH (M/T) ON-VEHICLE INSPECTION

ED022-01

INSPECT SHIFT POSITION SWITCH CONTINUITY

- (a) Disconnect the switch connector.

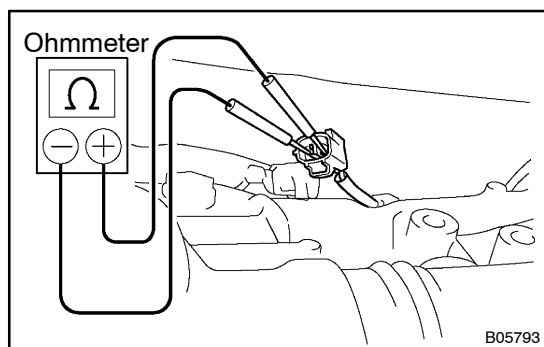

- (b) Using an ohmmeter, check the switch continuity.

Continuity:

Transmission position	Specified continuity
1	Continuity
Others	No continuity

If continuity is not as specified, replace the shift position switch.

- (c) Reconnect the switch connector.