


## REMOVAL

### 1. REMOVE TRANSMISSION

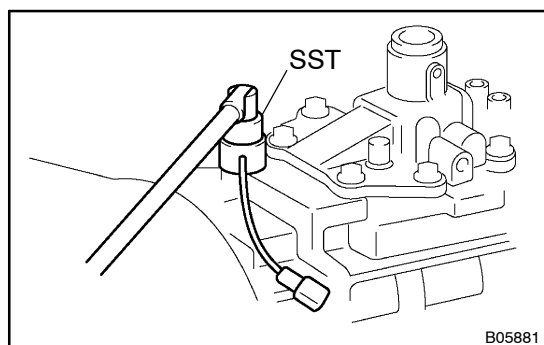

### 2. REMOVE SHIFT POSITION SWITCH

- (a) Using SST, remove the shift position switch.  
SST 09817-16011
- (b) Remove the gasket from the shift position switch.