


FUEL DAMPER REPLACEMENT

FU04X-01

1. DRAIN[FUEL] FILTER AND DAMPER
(See page FU-1)

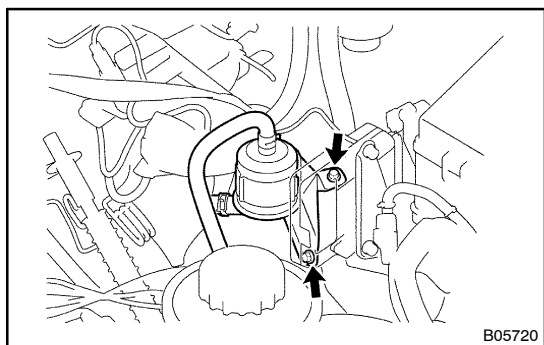

2. REPLACE[FUEL] DAMPER
 - (a) Remove the fuel damper.
 - (1) Disconnect the 2 fuel hoses.
 - (2) Remove the 2 bolts and fuel damper.
 - (b) Install the fuel damper.
 - (1) Install the fuel damper with the 2 bolts.
Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)
 - (2) Connect the 2 fuel hoses.
3. FILL[FUEL] FILTER AND DAMPER WITH[FUEL]
(See page FU-1)