


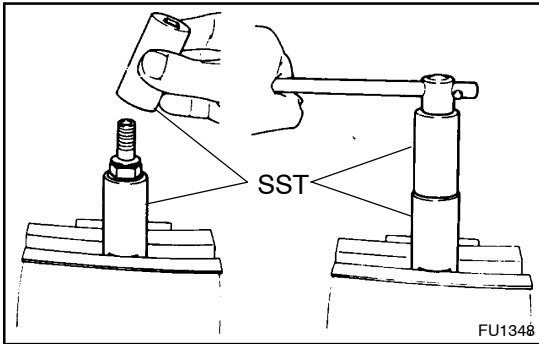

DISASSEMBLY

DISASSEMBLE INJECTION NOZZLES

- (a) Using SST, remove the nozzle holder body.
SST 09268-64010 (09268-64020, 09268-64030)

NOTICE:

When disassembling the nozzle, be careful not to drop the inner parts.

- (b) Remove the pressure spring, shim, pressure pin, distance piece, nozzle assembly and identification ring.