


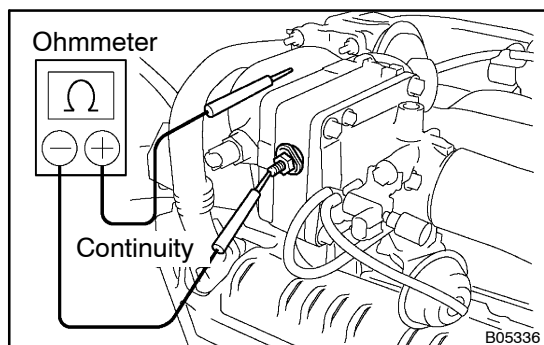

INSPECTION

INSPECT INTAKE HEATER

Using an ohmmeter, check that there is continuity between terminal of the intake heater and ground.

If there is no continuity, replace the intake heater.