

DTC	P1335/13	Crankshaft Position Sensor Circuit Malfunction (during engine running)
------------	-----------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0335/12, 13 (Crankshaft Position Sensor Circuit Malfunction) on [page DI-72](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335/13	No crankshaft position sensor signal to engine ECU with engine speed 1,000 rpm or more	• Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Starter • Engine ECU

WIRING DIAGRAM

Refer to DTC P0335/12, 13 (Crankshaft Position Sensor Circuit Malfunction) on [page DI-72](#) for the WIRING DIAGRAM.

INSPECTION PROCEDURE

Refer to DTC P0335/12, 13 (Crankshaft Position Sensor Circuit Malfunction) on [page DI-72](#).