


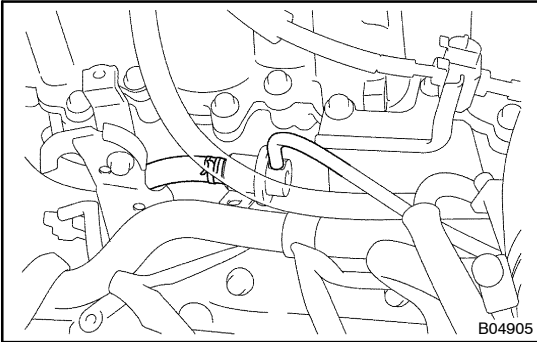


REMOVAL

1. **REMOVE V-BANK COVER**
2. **REMOVE FUEL PRESSURE REGULATOR**
 - (a) Disconnect these hoses from the pressure regulator:
 - Vacuum sensing hose from intake air resonator
 - Fuel return hose

CAUTION:

Put a shop towel under the pressure regulator.

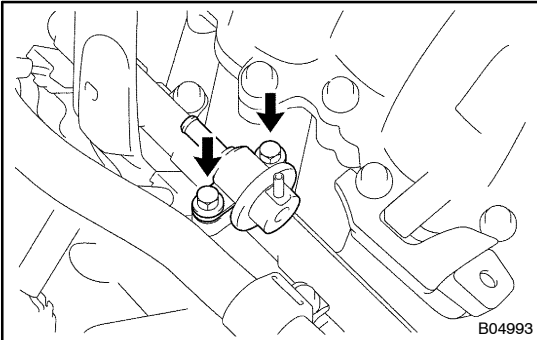

- (b) Remove the 2 bolts, and pull out the pressure regulator.
- (c) Remove the O-ring from the pressure regulator.