


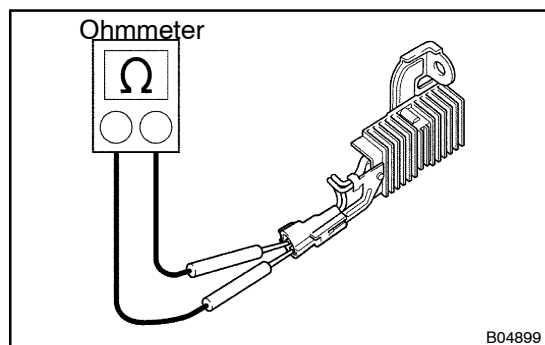

## INSPECTION

1. REMOVE FUEL PUMP RESISTOR
2. INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance:**

**0.71 – 0.75  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the resistor.

3. REINSTALL FUEL PUMP RESISTOR