



STARTER COMPONENTS

ST0EG-01

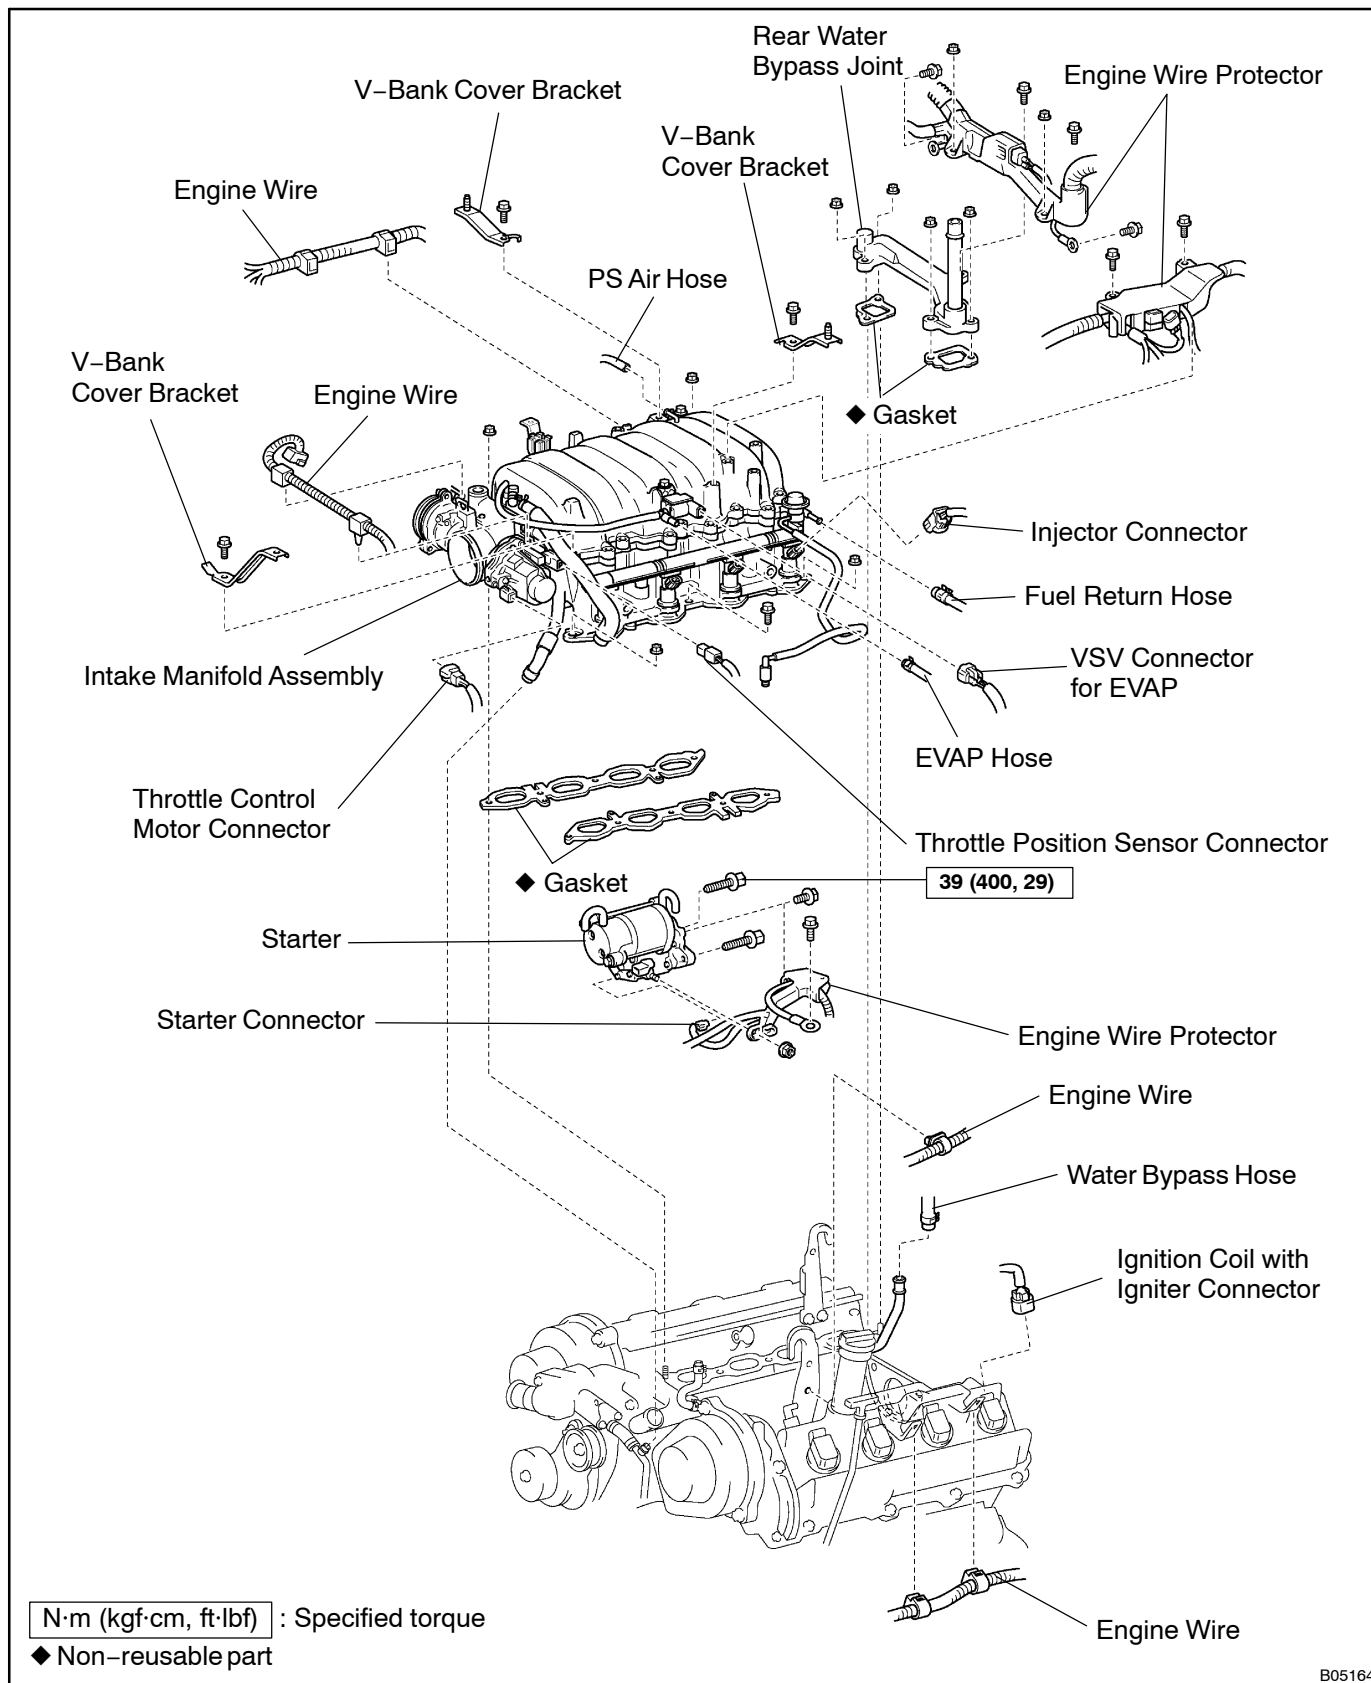


B05164

1.4 kW

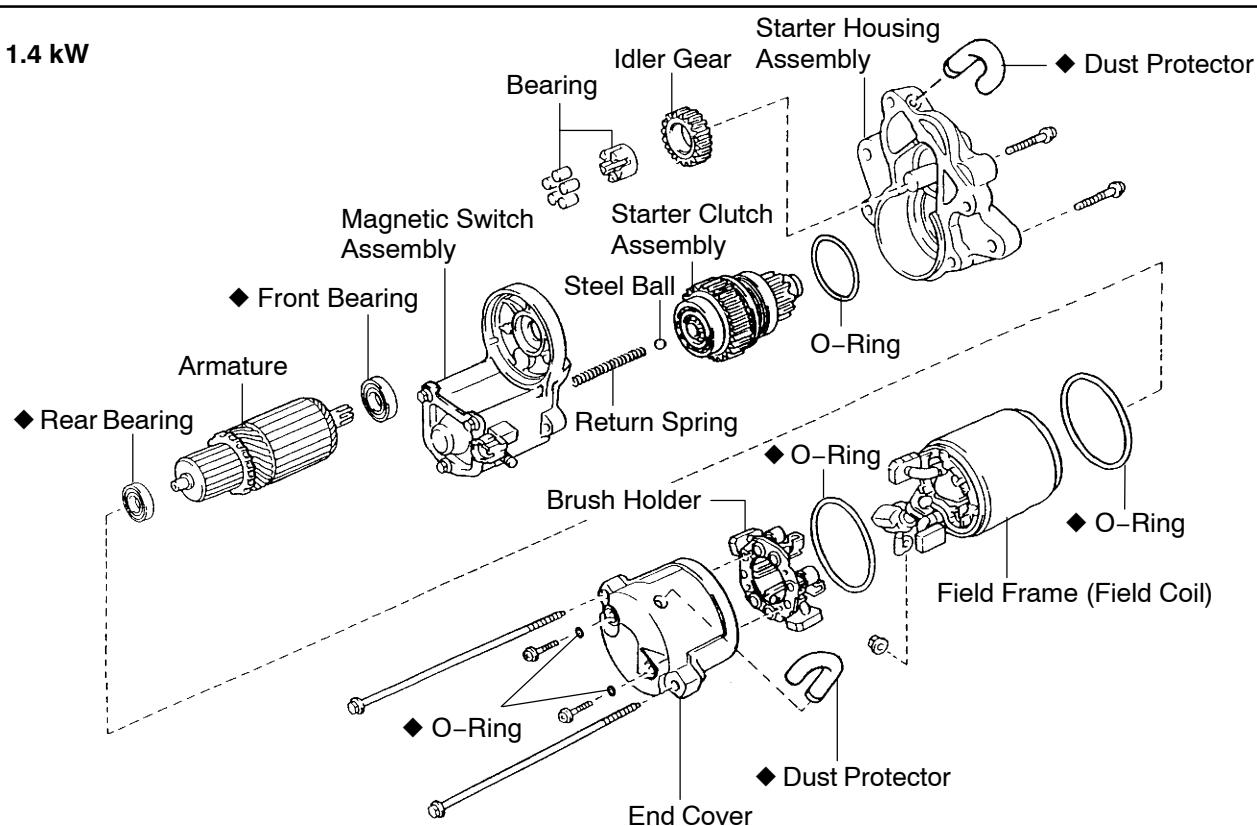


Magnetic Switch Assembly

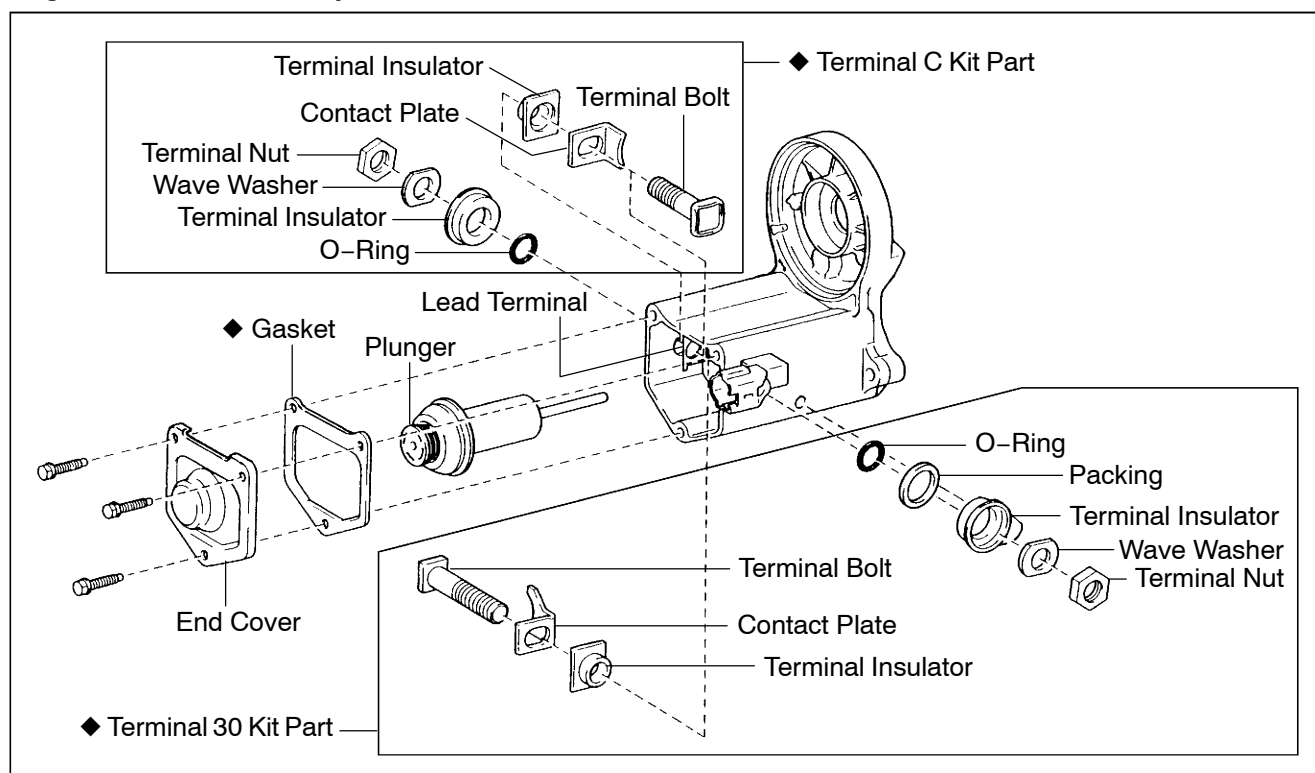


◆ Non-reusable part

B04888

2.0 kW

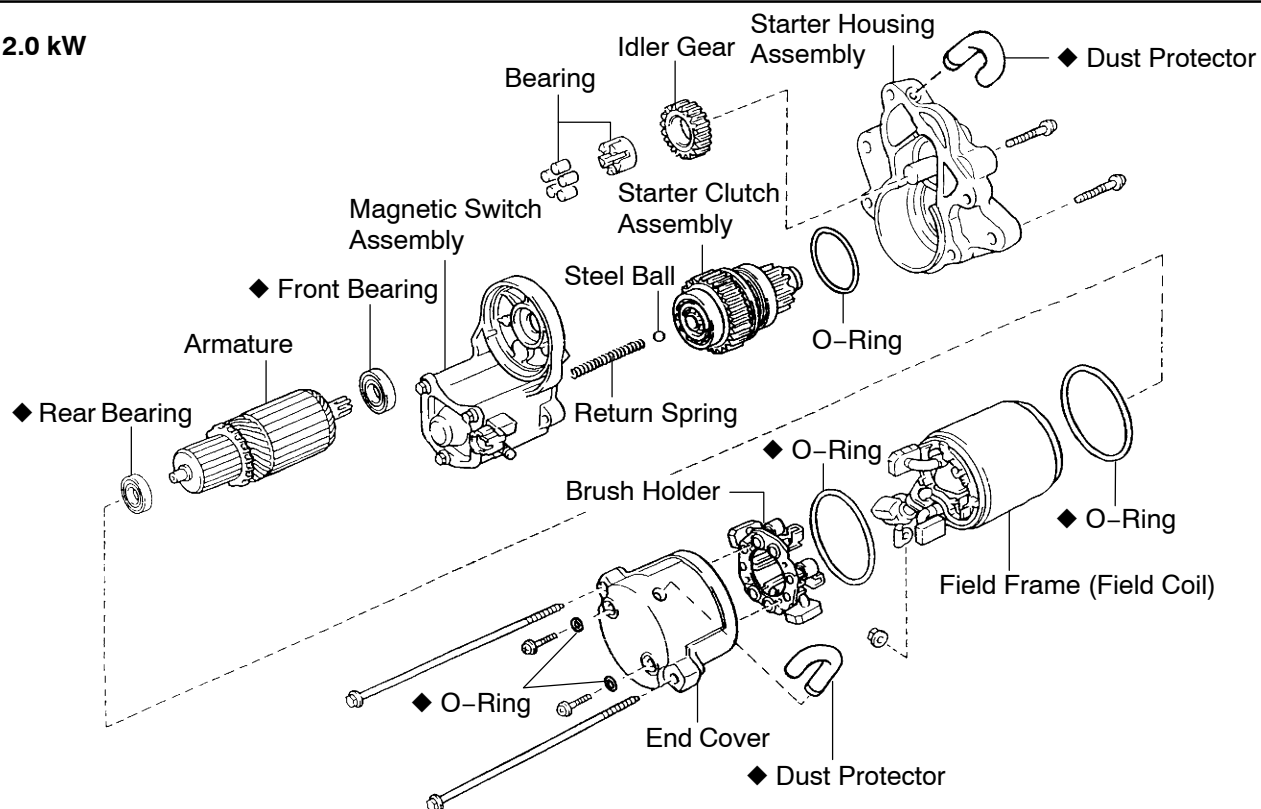

Magnetic Switch Assembly

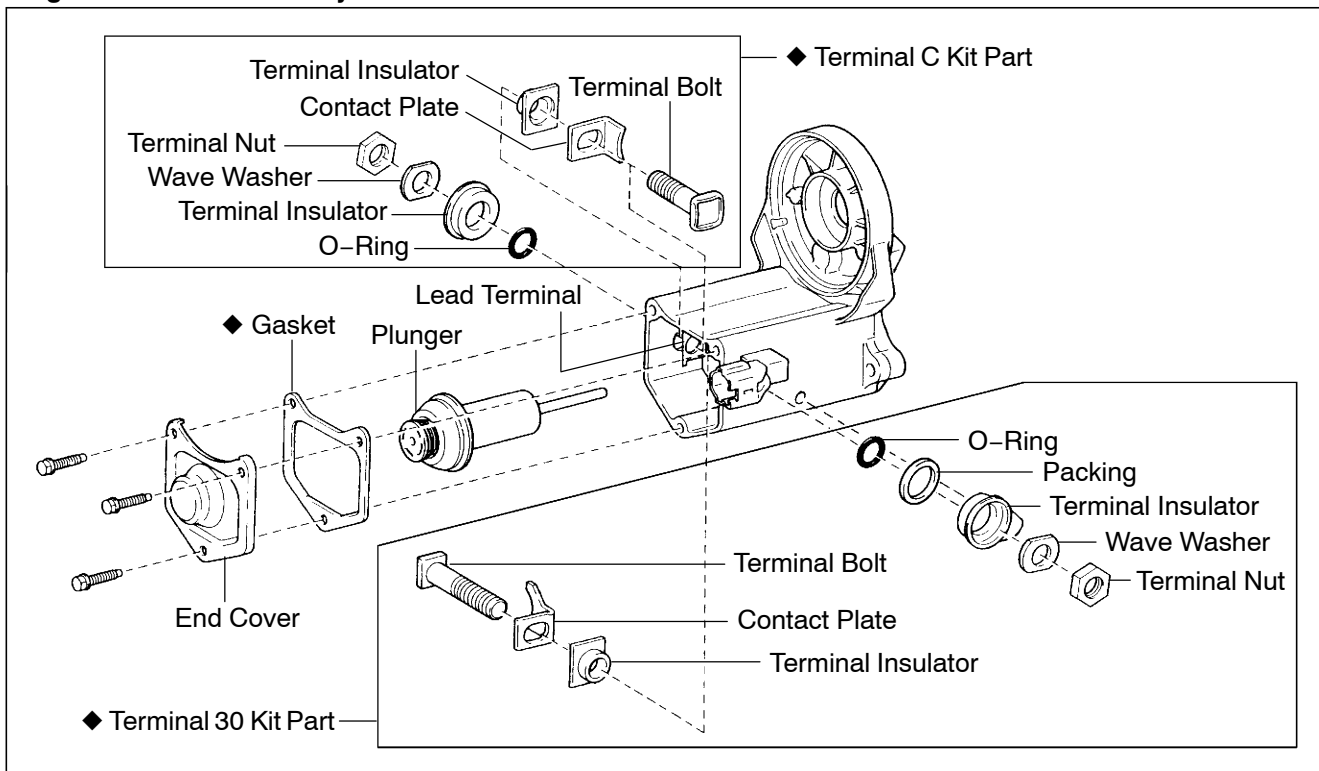

◆ Non-reusable part

B04547