


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 1FZ-FE]

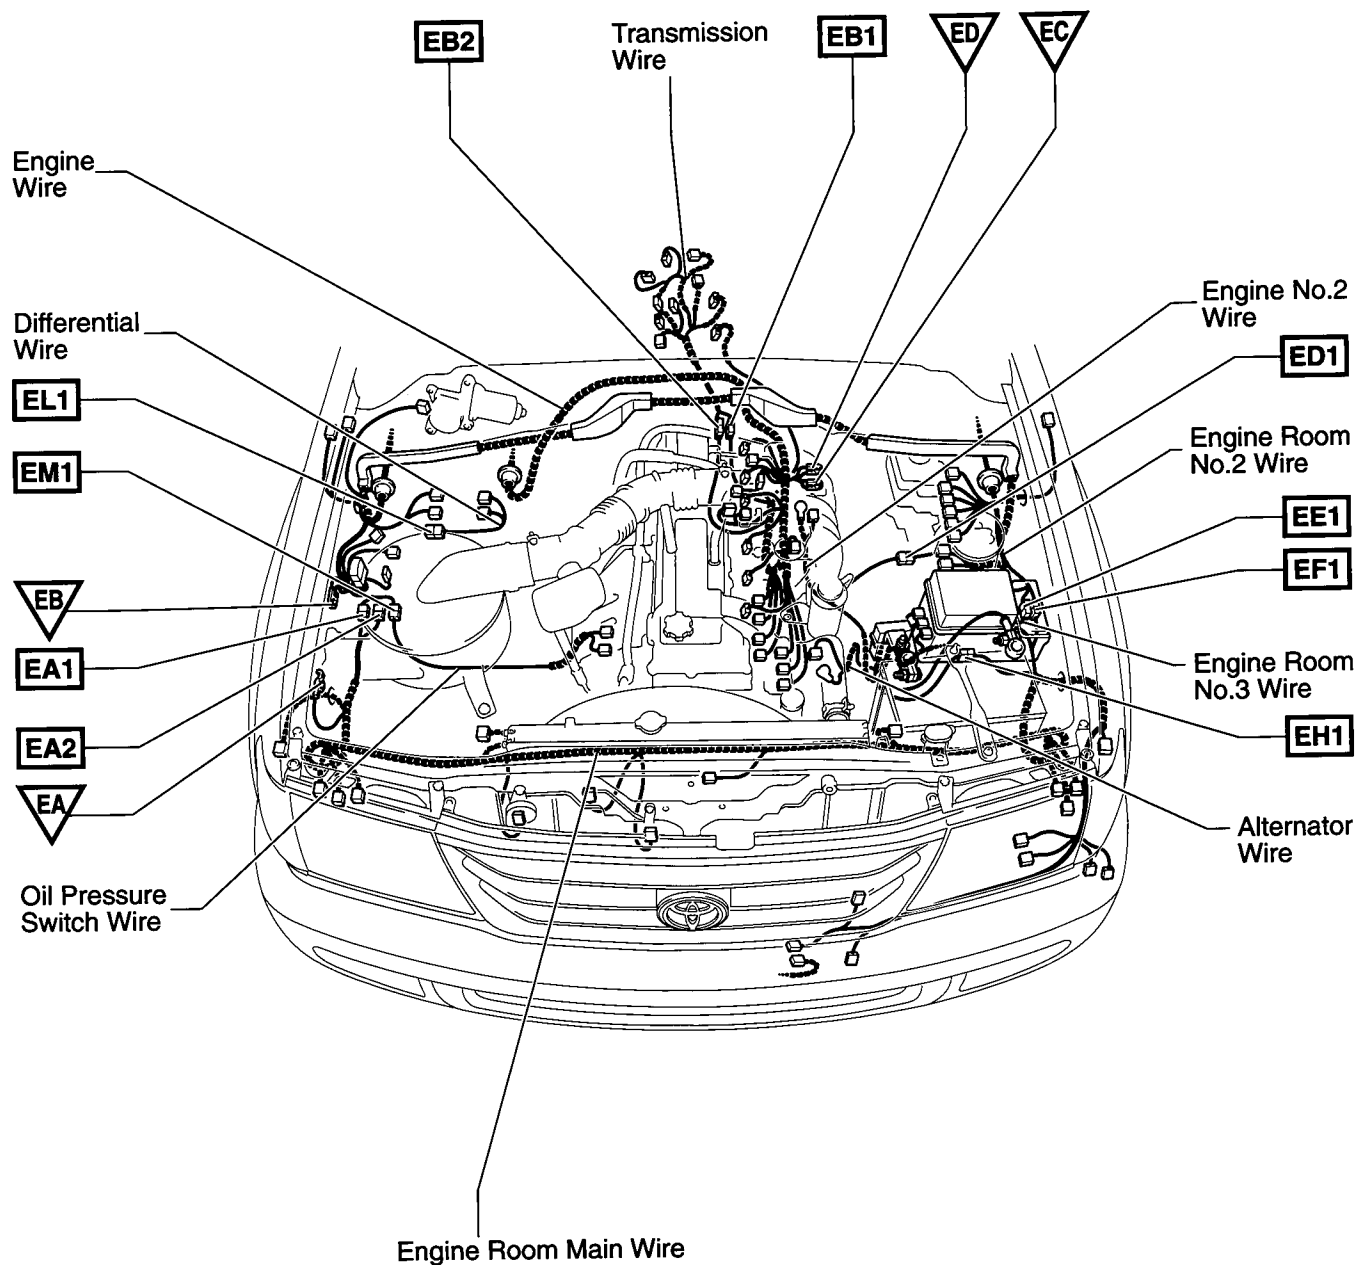

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	Engine Wire and Transmission Wire (On the Transmission)
EB2	
ED1	Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)
EE1	Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EH1	Engine Room Main Wire and Engine Room No.3 Wire (Near the Battery)
EL1	Engine Room No.2 Wire and Differential Wire (Engine Compartment Right)
EM1	Oil Pressure Switch Wire and Engine Room No.2 Wire (Engine Compartment Right)