


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : Liftgate Type]

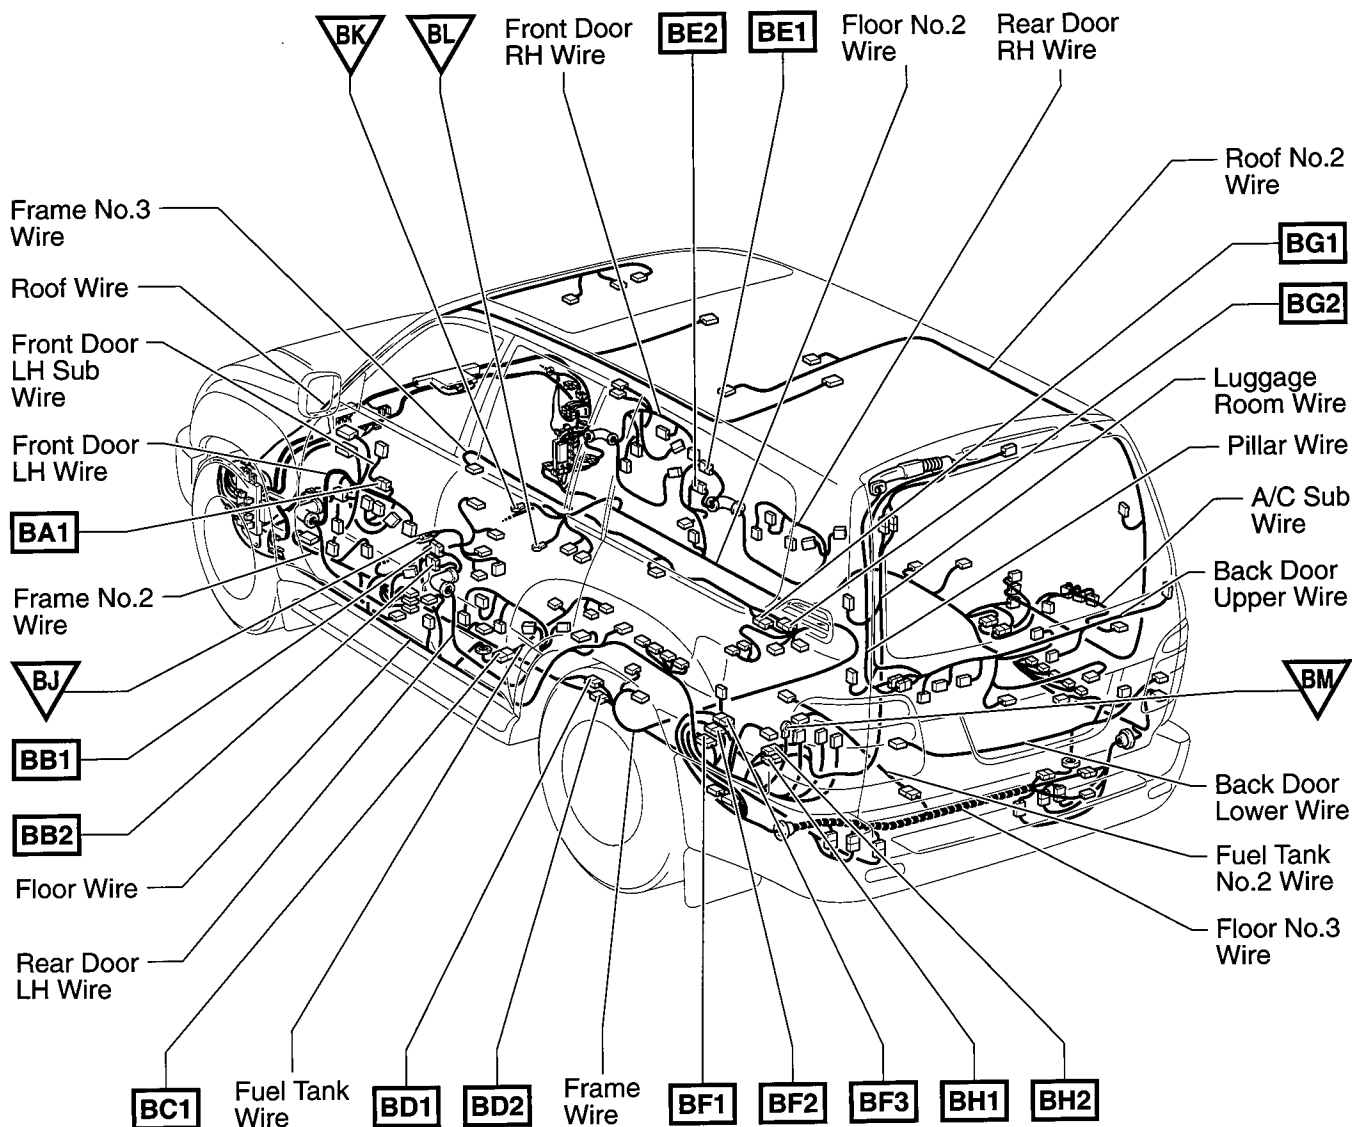

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Front Door LH Sub Wire (Front Door LH)
BB1	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BB2	
BC1	Floor Wire and Fuel Tank Wire (Near the Fuel Tank)
BD1	Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BD2	
BE1	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BE2	
BF1	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BF2	
BF3	
BG1	Frame No.3 Wire and Frame Wire (Near the Right Rear Suspension Support)
BG2	
BH1	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BH2	