

The diagram illustrates the electrical system for a Power Source and a Viscous Heater. It is divided into two main sections: 1. Power Source and 2. Viscous Heater.


Power Source (1):

- BATTERY:** Connected to the ground (EE) and the front left side of the fender apron.
- F17 FUSIBLE LINK BLOCK:** A 140A ALT fuse connected to the battery.
- IG1 NO. 2 RELAY:** A relay with terminals 1, 2, 3, and 4. It is connected to the battery and the junction connector.
- 20A AM1 NO. 1:** A fuse connected to the relay.
- 20A AM1 NO. 2:** A fuse connected to the relay.
- 100A POWER HTR:** A heater connected to the relay.
- 20A A.C.:** A fuse connected to the relay.
- J15 JUNCTION CONNECTOR:** A connector with terminals A, L-B, and A.
- I26 IGNITION SW:** An ignition switch with terminals 2, 4, and 6. It is connected to the junction connector.
- IG1:** A relay with terminals 1, 2, 3, 4, 5, 6, 14, 15, 16, and 17. It is connected to the junction connector and the viscous heater.

Viscous Heater (2):

- V4 VISCIOUS HEATER MAGNETIC CLUTCH:** A magnetic clutch connected to the ground (EE) and the front left side of the fender apron.
- V5 VISCIOUS HEATER RELAY:** A relay with terminals 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100. It is connected to the junction connector and the magnetic clutch.
- Wiring:** The diagram shows various wiring paths between the components, including a main power line (R-L) and a ground line (Y-B).

LAND CRUISER Station Wagon (EWD342F)

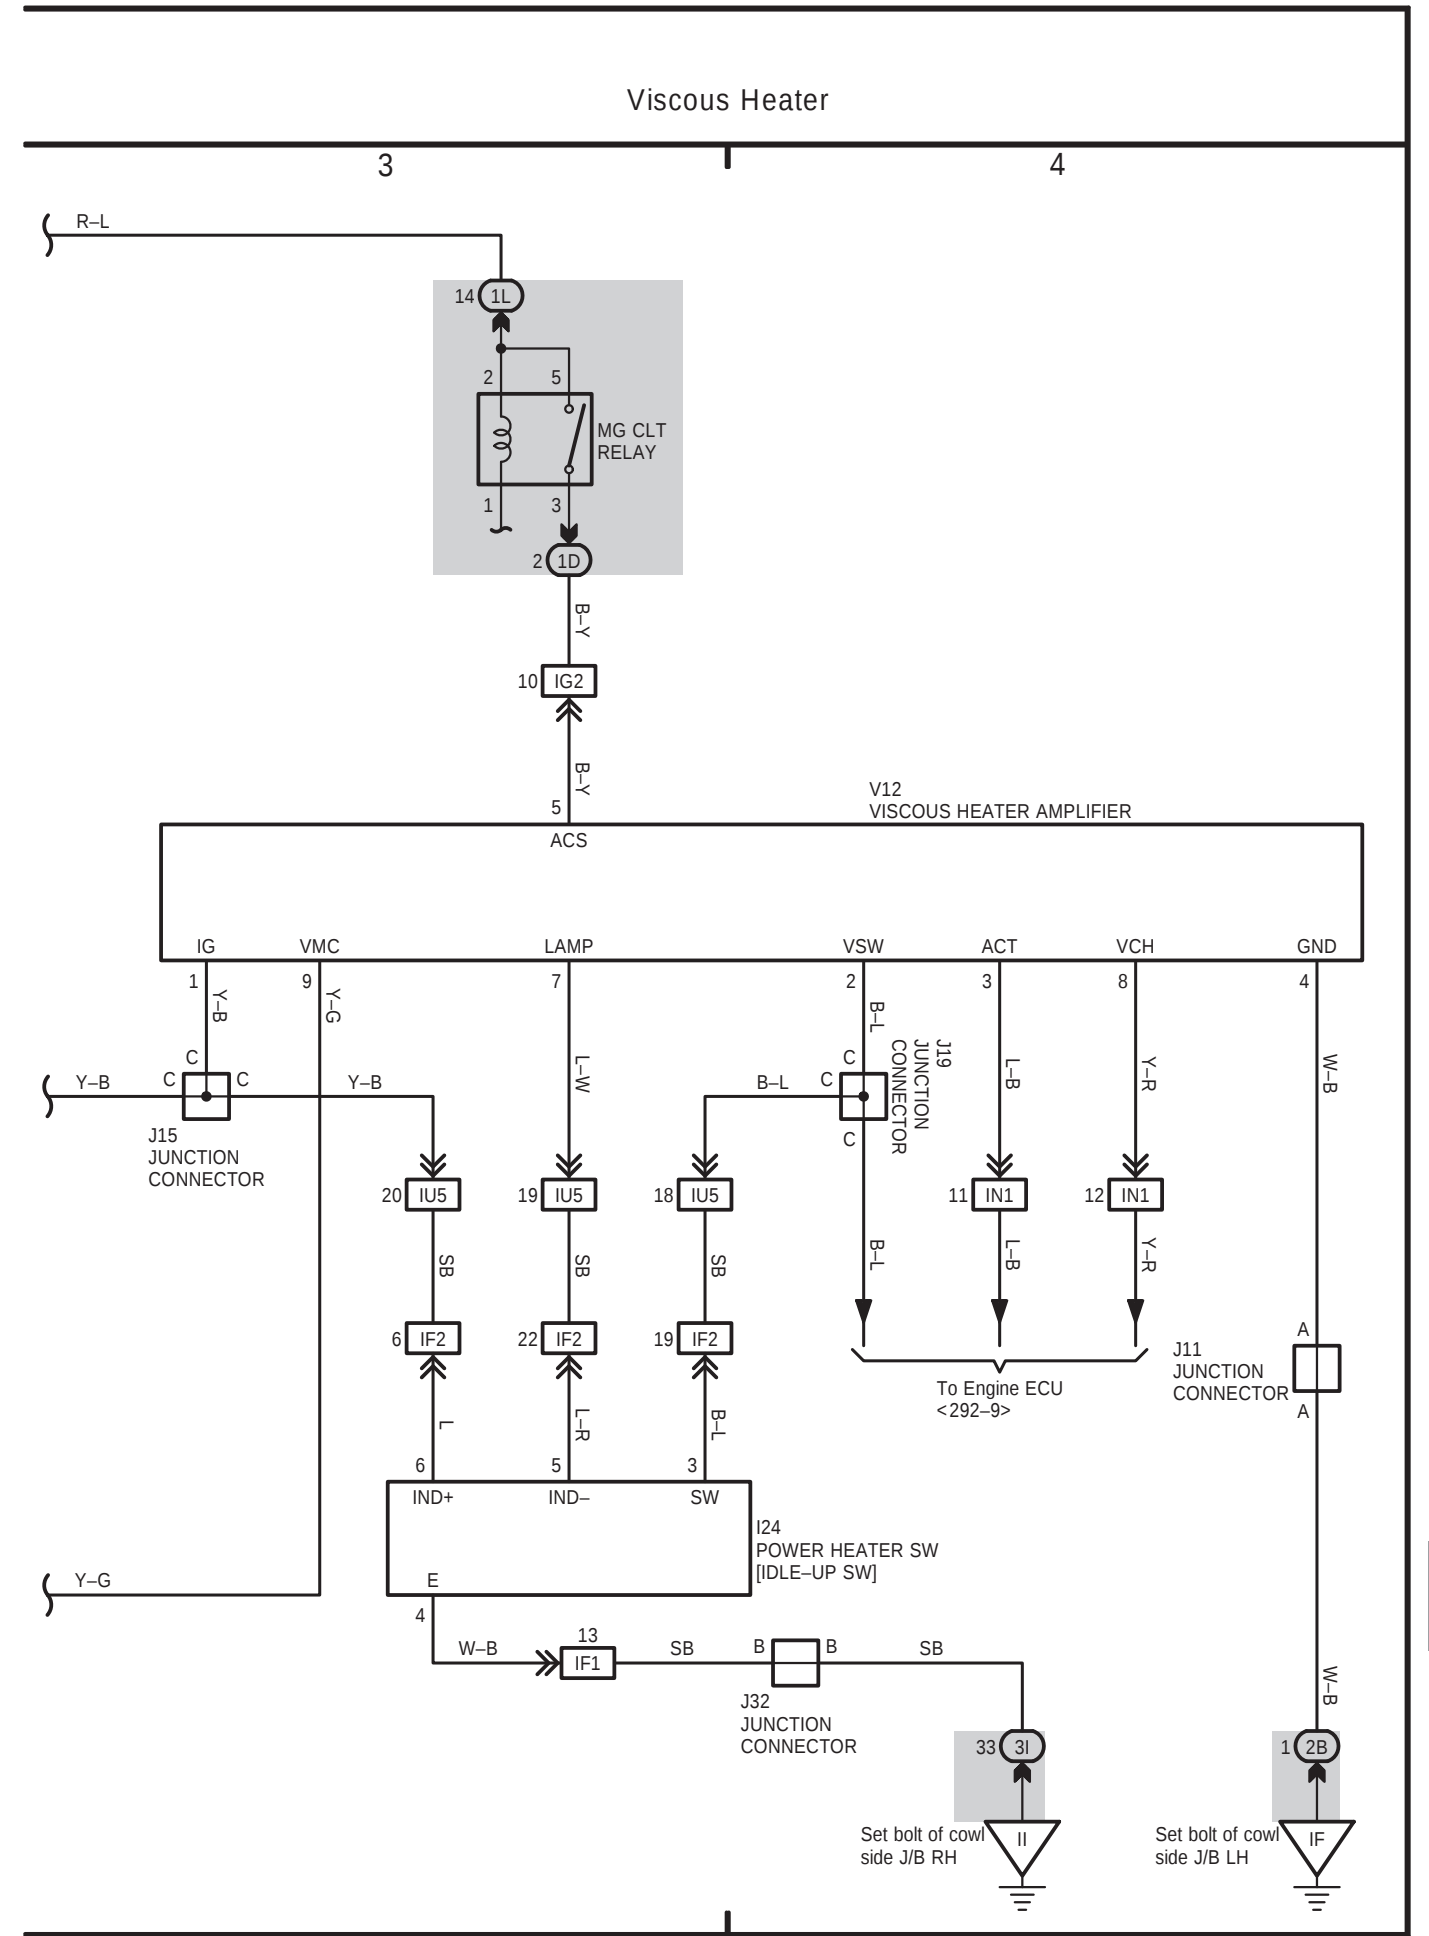

LAND CRUISER Station Wagon (EWD342F)