


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

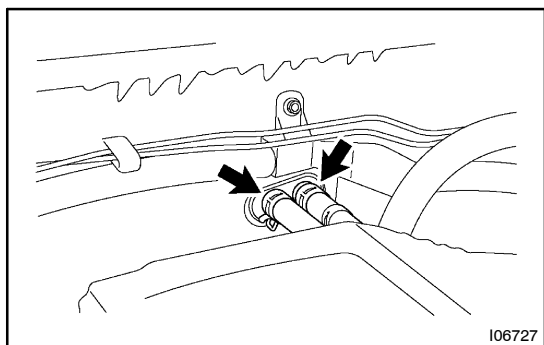

2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Using pliers, grip the claws of the hose clip and slide the clip along the hose.
- (b) Disconnect the water hoses from heater radiator pipes.

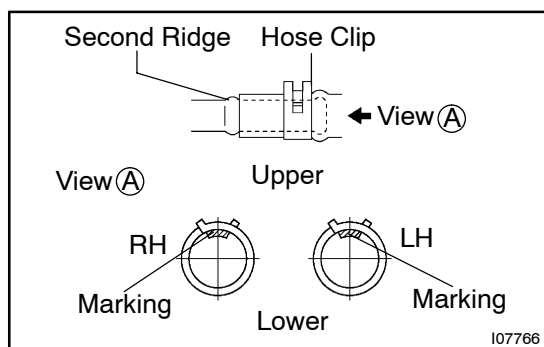

HINT:

At the time of installation, please refer to the following items.


- Push the water hose onto the heater radiator pipe as far as second ridge on the pipe.
- Install a hose clip in the position as shown in the illustration.

3. REMOVE INSTRUMENT PANEL AND REINFORCEMENT

(See page BO-127)


4. REMOVE FRONT COOLING UNIT

(See page AC-38)

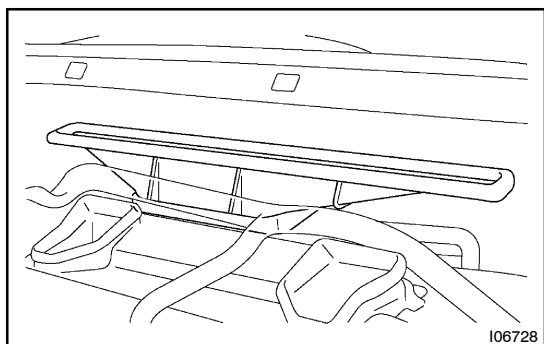

5. REMOVE HEATER UNIT

- (a) Remove the lower defroster nozzle.

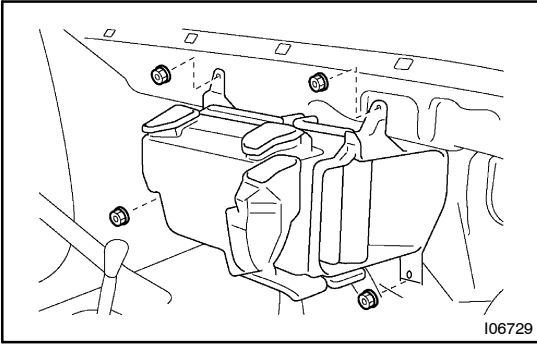

- (b) Disconnect the connector.
- (c) Remove the 4 nuts and heater unit.