

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

Single A/C w/ Cool Box (*1 RFS Condenser Models):

800 ± 50 g (28.22 ± 1.76 oz.)

Single A/C w/ Cool Box (*2 IFS Condenser Models):


950 ± 50 g (33.51 ± 1.76 oz.)

Dual A/C (w/ Cool Box):

1,150 ± 50 g (40.56 ± 1.76 oz.)

***1: Condenser Part No.: 88460-60280**

***2: Condenser Part No.: 88460-60260**

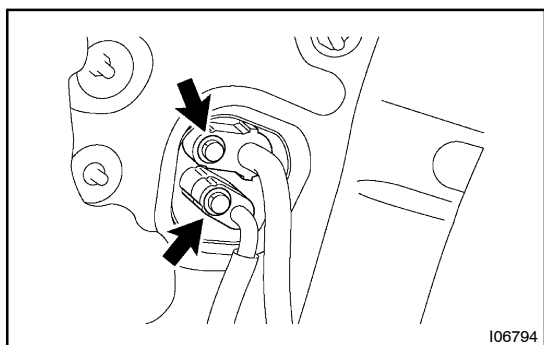

2. DISCONNECT LIQUID AND SUCTION TUBES

Remove the 2 bolts and disconnect the both tubes.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.


HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.

3. REMOVE THESE PARTS:

- (a) Rear console end panel
- (b) Manual A/C w/ Rear Heater:
Rear heater control assembly
- (c) Upper console panel
- (d) Console box

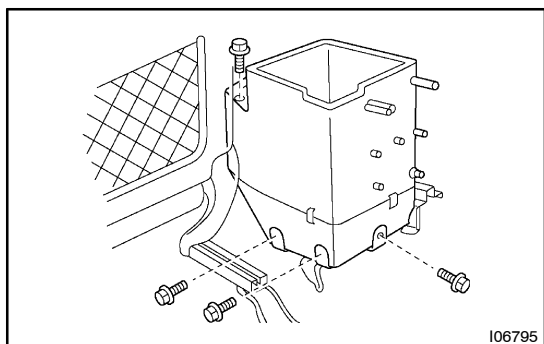

4. REMOVE COOL BOX

- (a) Disconnect the connector.
- (b) Remove the 4 bolts and cool box.