

## INSPECTION

### 1. INSPECT FINS FOR BLOCKAGE


If the fins are clogged, clean them with compressed air.

#### NOTICE:

**Never use water to clean the evaporator.**


### 2. INSPECT FITTINGS FOR CRACKS OR SCRATCHES

If necessary, repair or replace.

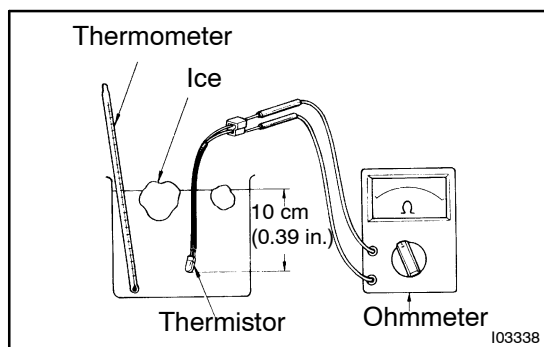

### 3. INSPECT EVAPORATOR TEMPERATURE SENSOR

- (a) Place the thermistor in cold water, and while changing the temperature of water, measure resistance at the connector and at the same time, measure temperature of water with a thermometer.

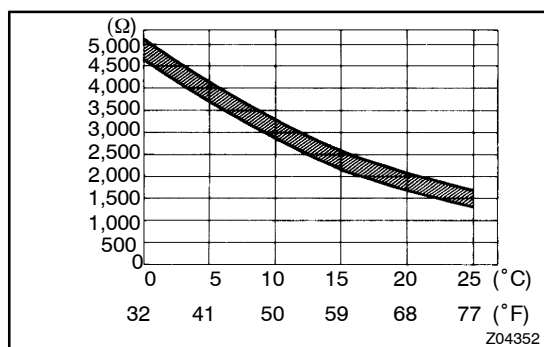

- (b) Compare the 2 readings on the chart.  
If resistance value is not as specified, replace the thermistor.