


## BLOWER MOTOR (for Cool Box) INSPECTION

AC1TH-01


1. REMOVE REAR CONSOLE BOX  
(See page BO-127)

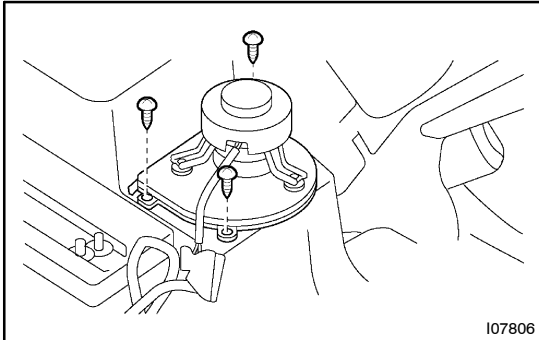

I07806


2. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and motor with fan.

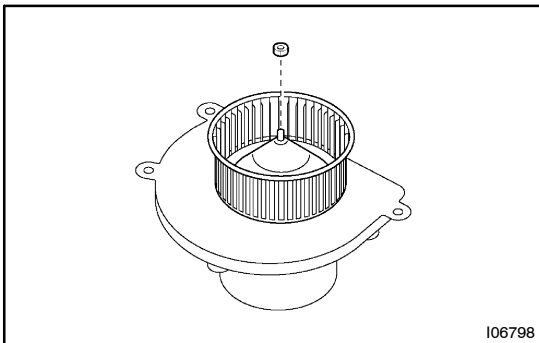


I06798

- (c) Remove the nut and fan.

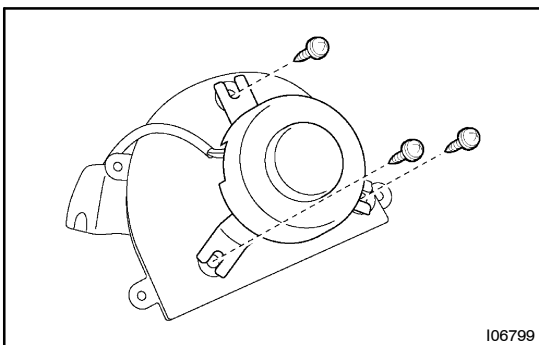

I06799

- (d) Remove the 3 screws and motor.

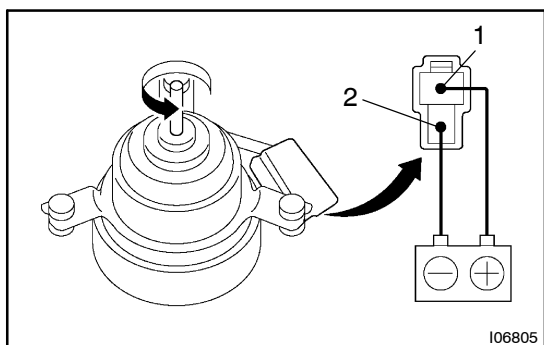**3. INSPECT BLOWER MOTOR OPERATION**

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operations smoothly.

If operation is not as specified, replace the blower motor.

**4. INSTALL BLOWER MOTOR**

- (a) Install the blower motor with 3 screws.
- (b) Install the fan with the nut.
- (c) Install the motor with fan to cool box with the 3 screws.
- (d) Connect the connector.

**5. INSTALL REAR CONSOLE BOX**