


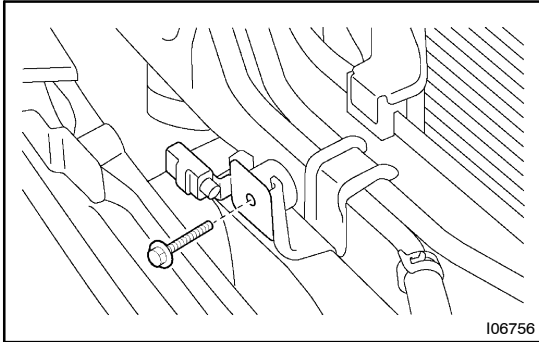


AMBIENT TEMPERATURE SENSOR INSPECTION

AC1TT-01

1. REMOVE AMBIENT TEMPERATURE SENSOR

- Disconnect the connector.
- Remove the bolt and the sensor.

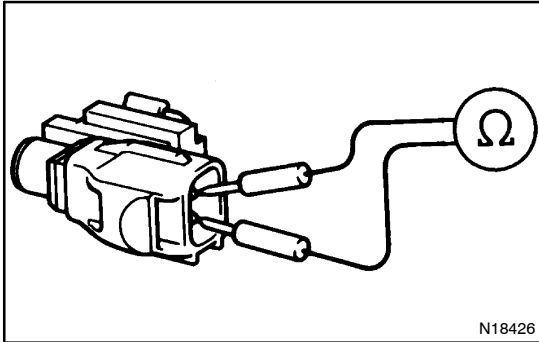

2. INSPECT AMBIENT TEMPERATURE SENSOR

Measure resistance between terminals.

Standard resistance: 1.6 – 1.8 k Ω at 25 °C (77 °F)

If resistance is not as specified, replace the sensor.

3. INSTALL AMBIENT TEMPERATURE SENSOR

- Install the sensor to condenser upper bracket.
- Connect the connector.