

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

Single A/C (*¹ RFS Condenser Models):

650 ± 50 g (22.93 ± 1.76 oz.)

Single A/C (*² IFS Condenser Models):

800 ± 50 g (28.22 ± 1.76 oz.)

Single A/C w/ Cool Box (*¹ RFS Condenser Models):

800 ± 50 g (28.22 ± 1.76 oz.)

Single A/C w/ Cool Box (*² IFS Condenser Models):

950 ± 50 g (33.51 ± 1.76 oz.)

Dual A/C (w/o Cool Box):

1,050 ± 50 g (37.03 ± 1.76 oz.)


Dual A/C (w/ Cool Box):

1,150 ± 50 g (40.56 ± 1.76 oz.)

***1: Condenser Part No.: 88460-60280**

***2: Condenser Part No.: 88460-60260**

2. REMOVE RADIATOR GRILL

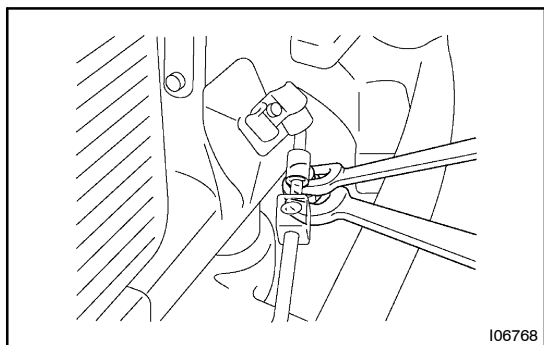

3. REMOVE PRESSURE SWITCH FROM LIQUID TUBE

Disconnect the connector and remove the pressure switch.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

HINT:

- Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.
- At the time of installation, please refer to the following item.

Lubricate a new O-ring with compressor oil and install the switch.