


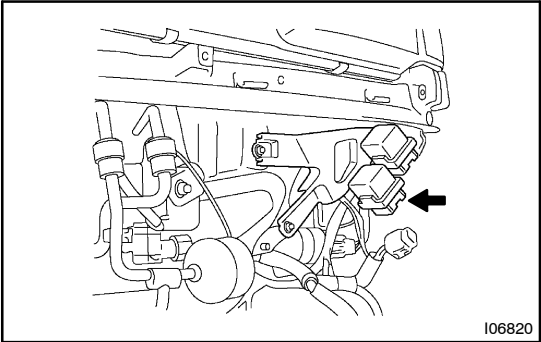

WATER TEMPERATURE CUT RELAY (1HZ, 1HD-T) INSPECTION

AC1U4-01

1. REMOVE CONDENSER FAN RELAY

- (a) Remove the front bumper cover
(See page BO-4)
- (b) Disconnect the connector.
- (c) Release the claw and remove the relay.

2. INSPECT CONDENSER FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 – 4	Continuity
Apply B+ between terminals 3 and 4.	1 – 2	Continuity

If continuity is not as specified, replace the relay.

3. INSTALL CONDENSER FAN RELAY

