


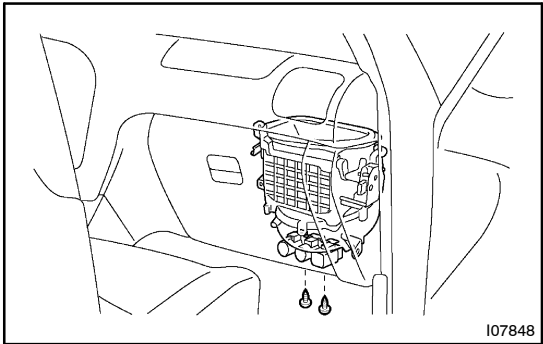


BLOWER SPEED CONTROL RELAY (Front A/C for LHD) INSPECTION

AC1U5-01

1. REMOVE BLOWER SPEED CONTROL RELAY


- (a) Disconnect the connectors.
- (b) Remove the 2 screws and relay.

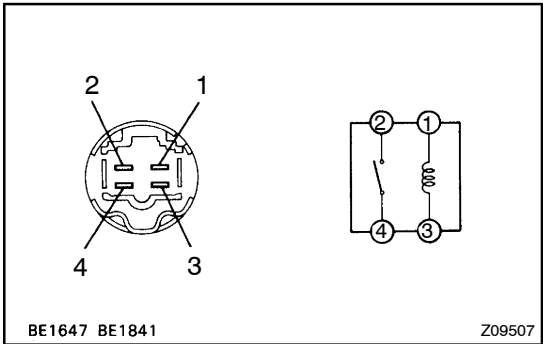

2. INSPECT BLOWER AND ME RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 3.	2 – 4	Continuity

If continuity is not as specified, replace the relay.

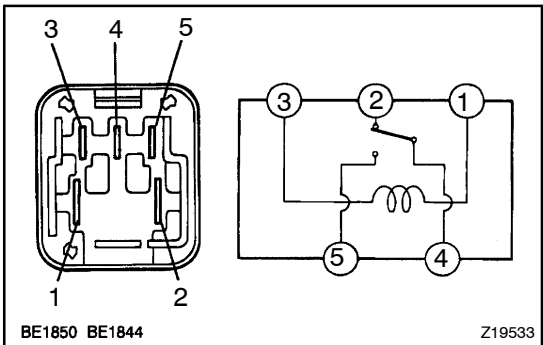

3. INSPECT BLOWER HI RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3 2 – 4	Continuity
Apply B+ between terminals 1 and 3.	4 – 5	Continuity

If continuity is not as specified, replace the relay.

4. INSTALL BLOWER SPEED CONTROL RELAY