


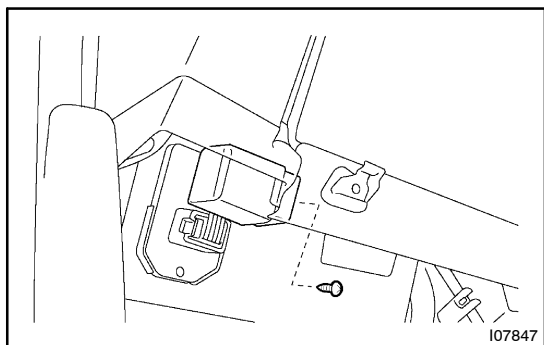


BLOWER SPEED CONTROL RELAY (Front A/C for RHD) INSPECTION

AC1U6-01


1. REMOVE BLOWER HI RELAY

- (a) Disconnect the connector.
- (b) Remove the screw and relay.

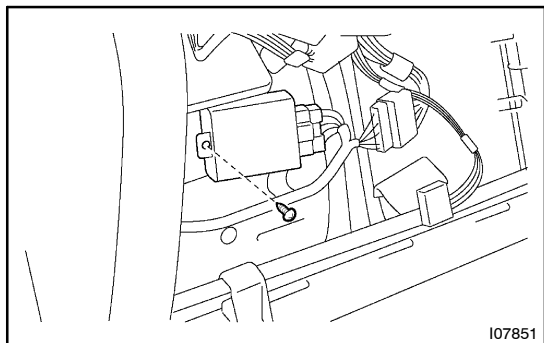

2. REMOVE RELAY BOX


- (a) Remove the engine (and ECT) ECU.
- (b) Disconnect the connector.
- (c) Remove the screw and relay box.

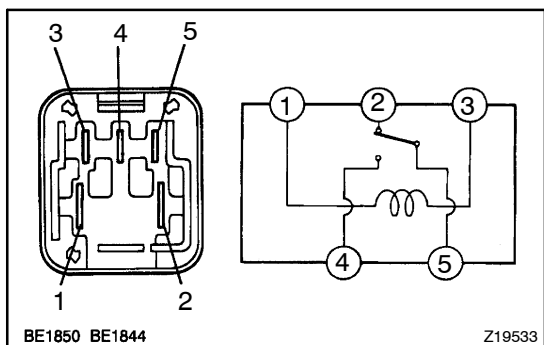

3. INSPECT BLOWER HI RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4	Continuity
	3 - 5	
Apply B+ between terminals 3 and 5.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

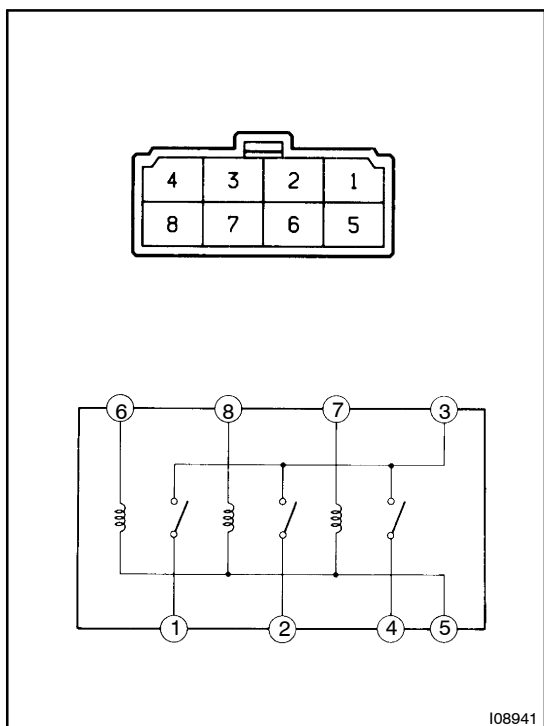

4. INSPECT RELAY BOX CONTINUITY

Condition	Tester connection	Specified condition
Constant	5 - 6	Continuity
	5 - 7	
	5 - 8	
Apply B+ between terminals 5 and 6.	1 - 3	Continuity
Apply B+ between terminals 5 and 7.	3 - 4	Continuity
Apply B+ between terminals 5 and 8.	2 - 3	Continuity

If continuity is not as specified, replace the relay.

5. INSTALL RELAY BOX

6. INSTALL BLOWER HI RELAY