
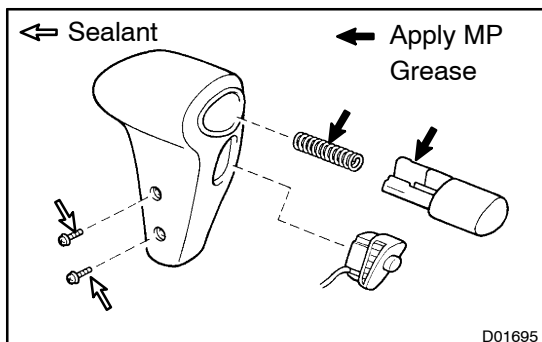
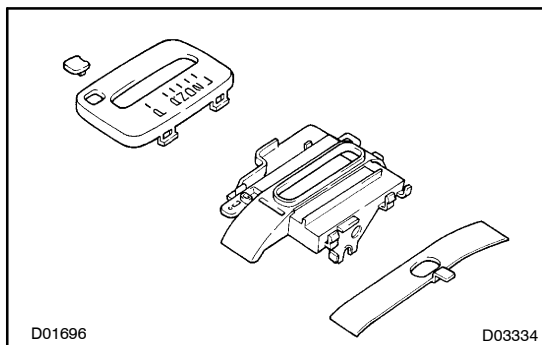
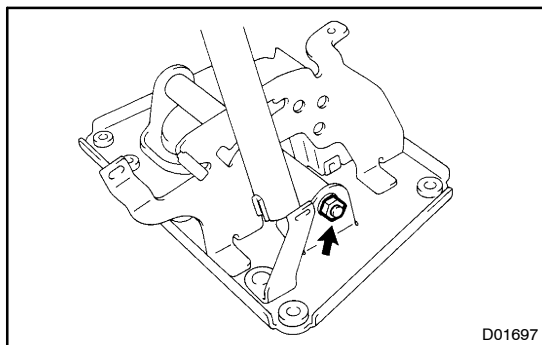
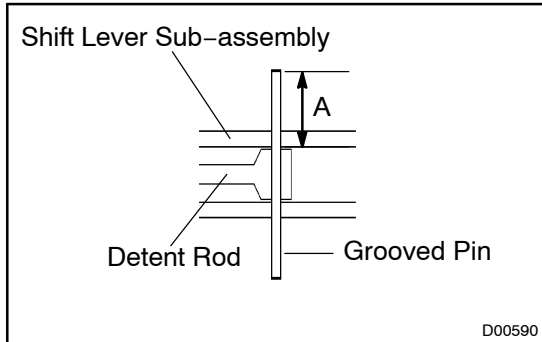


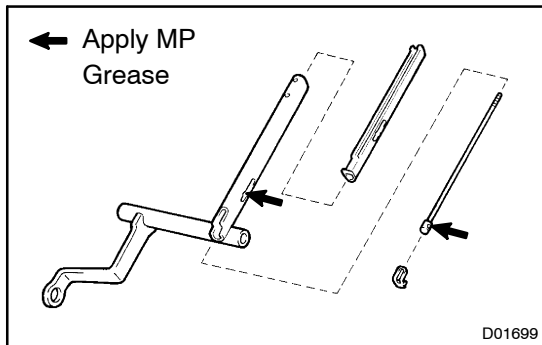

REASSEMBLY

1. INSTALL COLLARS AND BUSHINGS

2. ASSEMBLE SHIFT LEVER SUB-ASSEMBLY

- Apply MP grease on the detent rod and shift lever sub-assembly.
- Install the wire guide, wire guide No.2 and detent rod.
- Insert the grooved pin in the detent rod pin hole.
- Aligning the grooved pin with the notch of the guide hole.

- Using a hammer, install the grooved pin.

A: 13.5 ± 0.3 mm (0.531 ± 0.012 in.)

NOTICE:

When pressing in the grooved pin at the place other than the notch, there the shift lever sub-assembly might be damaged.

- Check the detent rod operation.
- Install the spring and shift lever sleeve.
- Apply MP grease on 2 bushings and install 2 bushings to the shift lever sub-assembly.

3. INSTALL SHIFT LEVER SUB-ASSEMBLY

- Install the shift lever sub-assembly to the shift lever plate with the control rod and nut.

Torque: 13 N·m(130 kgf·cm, 9 ft·lbf)

- Install the shift lever boot and 3 collars.

4. INSTALL SHIFT LEVER STOPPER

5. ASSEMBLE INDICATOR HOUSING

- Install the position indicator slider cover to the position indicator upper housing.
- Install the position indicator lower housing to the position indicator upper housing.
- Install the cap to the indicator housing.

6. INSTALL INDICATOR HOUSING

Install the indicator housing and screw.

7. INSTALL BULB AND CAP TO INDICATOR LIGHT WIRE

8. INSTALL INDICATOR LIGHT

9. INSTALL SHIFT LEVER KNOB


- Apply MP grease to the shift lever knob button.
- Install the spring and shift lever knob button to the shift lever knob.
- Install the shift lever knob to the shift lever sub-assembly.
- Install the O/D main switch to the shift lever knob.
- Coat the threads of the 2 screws with sealant.

Sealant: Part No. 08833-00080, THREE BOND 1344, LOCATE 242 or equivalent

- (f) Install the shift lever knob and 2 screws to the shift lever sub-assembly.

NOTICE:

Make sure not to catch O/D main switch wire harness.

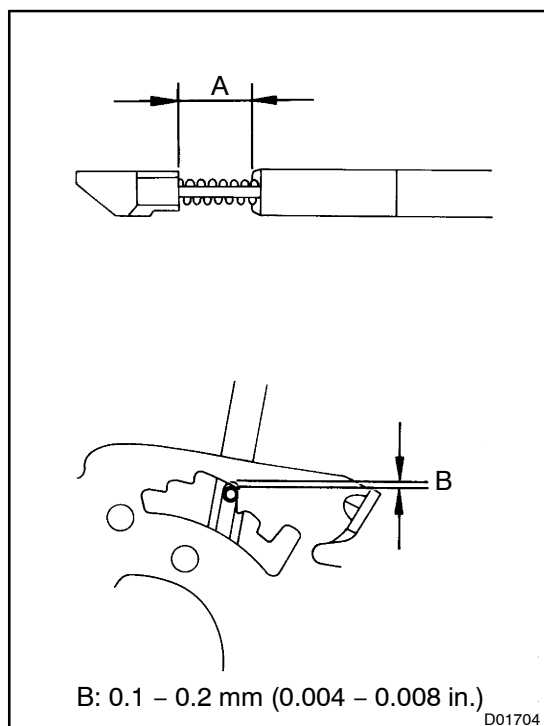

- (g) After assembling the shift lever knob, adjust the distance A by moving the shift lever knob sleeve so that the clearance B between the detent plate and grooved pin is within the standard with the shift lever in N range.

10. INSTALL SHIFT LEVER KNOB

11. INSTALL O/D MAIN SWITCH TERMINAL

- (a) Connect the 2 O/D main switch terminals to the connector.
- (b) Connect the connector to the shift lever plate.