


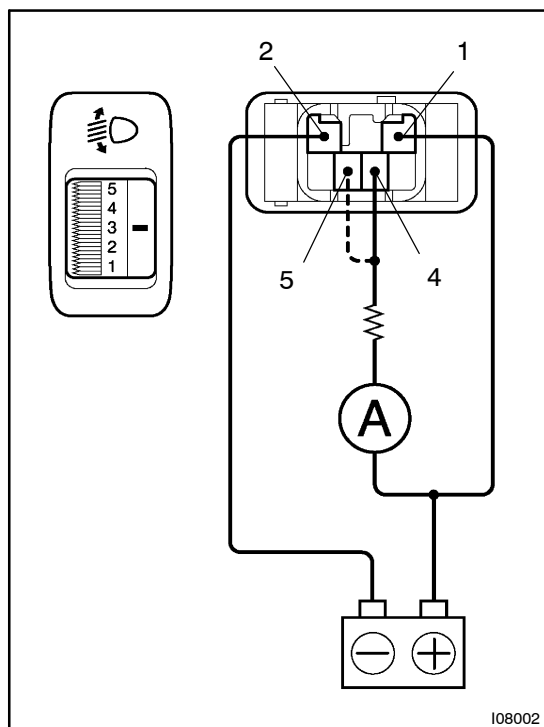

I08002

INSPECTION

1. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH CURRENT


NOTICE:

If a resistor is not placed, switch may be damaged.

Measure the current between terminals 4 and 5.

Switch position	Resistance (mA)
0	Approx. 8.0
1	Approx. 7.2
2	approx. 6.4
3	Approx. 5.6
4	Approx. 4.8
5	Approx. 4.0

If current value is not as specified, replace the switch.

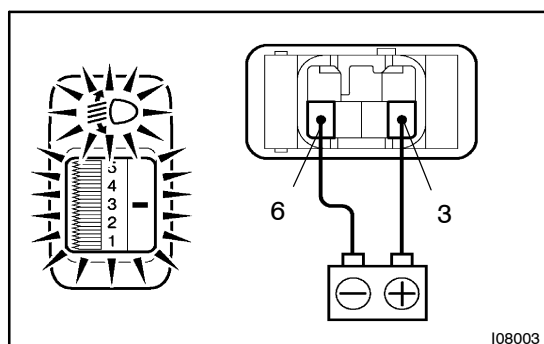


I08003

2. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH ILLUMINATION

Connect the positive (+) lead from the battery to terminal 3 and negative (-) lead to terminal 6, and check that the illumination light lights up.

If operation is not as specified, replace the switch.

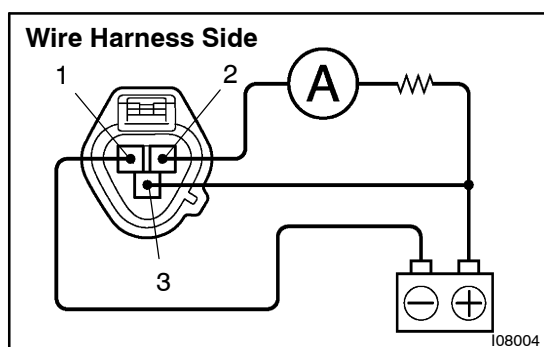

I08004

3. INSPECT HEADLIGHT BEAM LEVEL CONTROL ACTUATOR CIRCUIT

NOTICE:

If a resistor is not placed, switch may be damaged.

Disconnect the connector and inspect connector on wire harness side, as shown in the chart.

Switch position	Resistance (mA)
0	Approx. 8.0
1	Approx. 7.2
2	approx. 6.4
3	Approx. 5.6
4	Approx. 4.8
5	Approx. 4.0

If circuit is as specified, replace the actuator.