


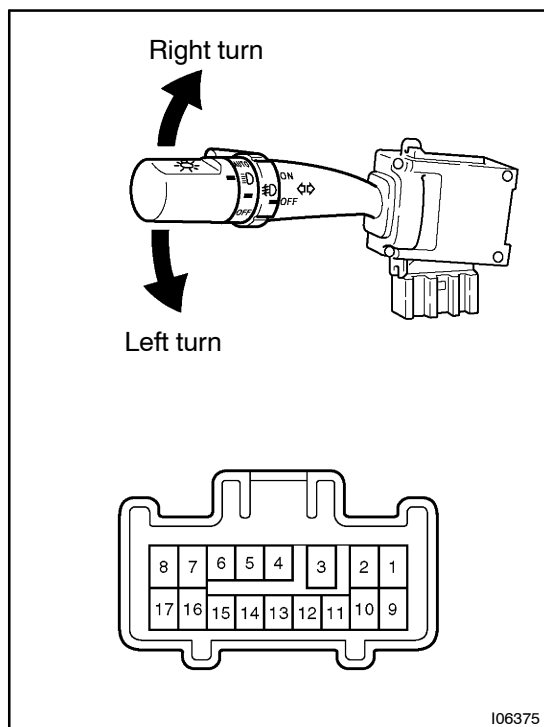


## INSPECTION

### 1. LHD Models : INSPECT TURN SIGNAL SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| Left turn       | 2 – 1             | Continuity          |
| Neutral         | –                 | No continuity       |
| Right turn      | 3 – 2             | Continuity          |


If continuity is not as specified, replace the switch.

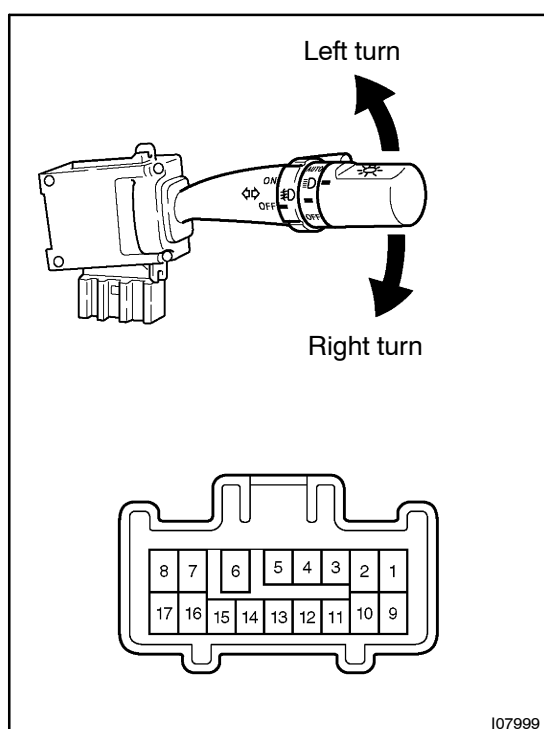

### 2. RHD Models : INSPECT TURN SIGNAL SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| Left turn       | 6 – 7             | Continuity          |
| Neutral         | –                 | No continuity       |
| Right turn      | 7 – 8             | Continuity          |


If continuity is not as specified, replace the switch.

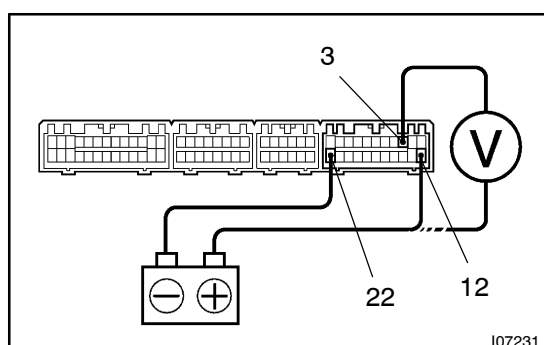

### 3. INSPECT HAZARD WARNING SWITCH OPERATION

- Connect the positive (+) lead from the battery to terminal 12 and 3 of panel switch connector and negative (-) lead to terminal 22.
- Push the hazard warning switch and check that the voltage is battery positive voltage.

If operation is not as specified, see AC section.

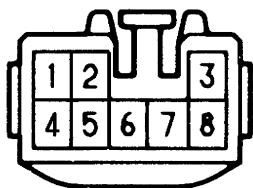**Wire Harness Side**

I04046

**4. INSPECT TURN SIGNAL FLASHER CIRCUIT**

Disconnect the connector from the combination switch and inspect the connector on the wire harness side, as shown.

| Tester connection | Condition                       | Specified condition |
|-------------------|---------------------------------|---------------------|
| 2 – Ground        | Constant                        | Continuity          |
| 3 – Ground        | Constant                        | Continuity          |
| 5 – Ground        | Turn signal switch RIGHT or OFF | No continuity       |
| 5 – Ground        | Turn signal switch LEFT         | Continuity          |
| 6 – Ground        | Turn signal switch LEFT or OFF  | No continuity       |
| 6 – Ground        | Turn signal switch RIGHT        | Continuity          |
| 7 – Ground        | Constant                        | Continuity          |
| 8 – Ground        | Hazard warning switch OFF       | No continuity       |
| 8 – Ground        | Hazard warning switch ON        | Continuity          |
| 1 – Ground        | Ignition switch LOCK or ACC     | No voltage          |
| 1 – Ground        | Ignition switch ON              | Battery voltage     |
| 4 – Ground        | Constant                        | Battery voltage     |

If circuit is as specified, replace the relay.

If circuit is not as specified, inspect the circuits connected to other parts.