

ANTENNA LOCATION

BE0Y9-01

LHD Models

Antenna Motor

View "A"

Radio Assembly


○ : Clamp

View "A"

Passenger Airbag
Sensor Assembly


Reinforcement

RHD Models

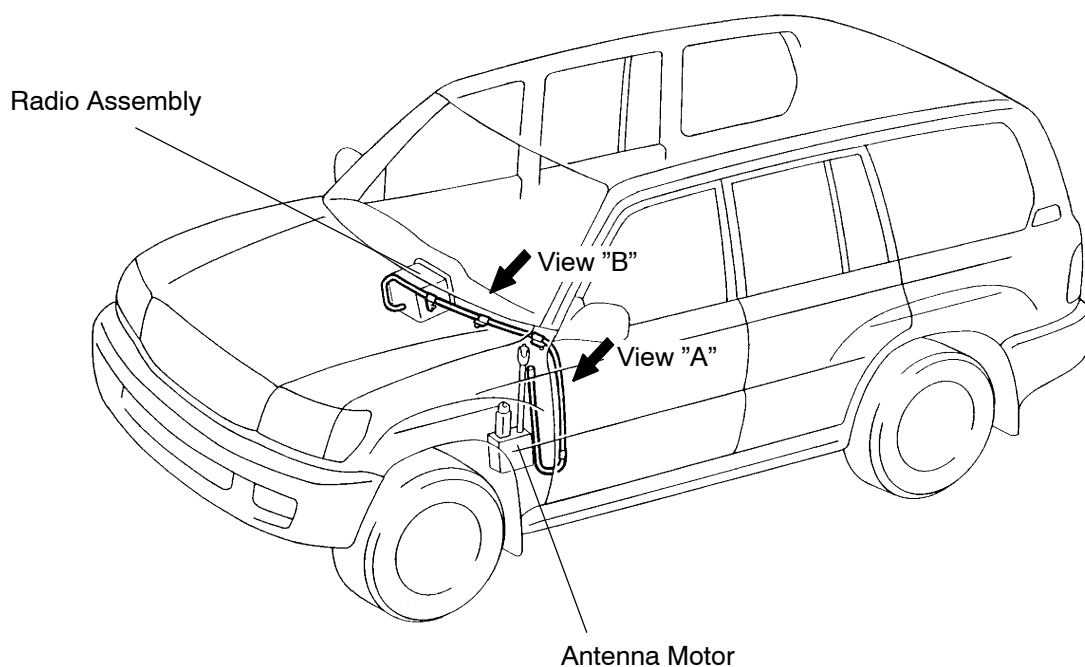

○ : Clamp

View "A"

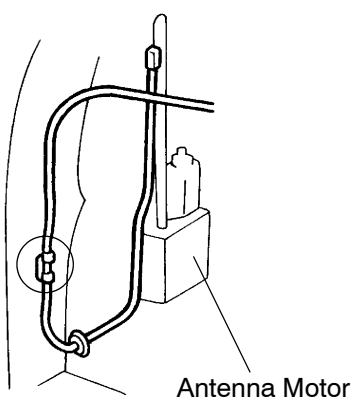

View "B"

